

burda Download-Pattern **Pants 6025 – Instructions**





average


fitted

burda sizes		55 ins / 140 cm							
		46	48	50	52	54	56	58	60
	yds	2 1/4	2 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
	m	1.95	1.95	2.25	2.25	2.25	2.25	2.25	2.25

★ without nap

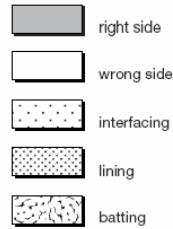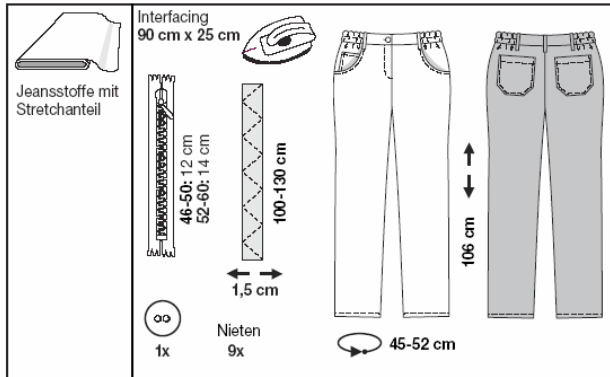

Patternpieces:

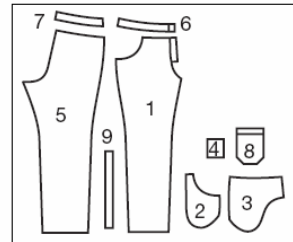

PATTERN

- 1 Front pant piece 2x**
- 2 Pocket pouch 2x**
- 3 Hip yoke piece 2x**
- 4 Pocket (right front) 1x**
- 5 Back pant piece 2x**
- 6 Front waist band 4x**
- 7 Back waist band 2x**
- 8 Pocket (back) 2x**
- 9 Belt loop 1x**

Fabric: Stretchy denim fabric

Paper cut for ANSI A (German DIN A4) prints:

The patterns are printed out on 35 sheets with a thin frame. Wait until all sheets are printed out. Arrange the sheets so that they fit together (see additional page with the overview of the prints). Fold the single sheets on the upper and right edge along the thin frame lines. Begin with the left lower sheet and then tape the frame lines together precisely. Select your size according to the Burda-dimension table: dresses, blouses, jackets and coats according to the bust size, trousers and skirts according to the hip width. Change the pattern to fit your measurements if they deviate from the Burda-size chart. **Cut out the pattern according to your size.**

➔ top waist edge = 1/2" (1 cm) below the waist
Size 16 (EU 48) to size 28 (EU 60): Mark the stitch lines for the zipper on piece 1 according to size 14 (EU 46), all spaced the same to the front center and further to the slit sign.

LENGTHENING OR SHORTENING THE PATTERN PIECES

Our pattern is calculated for a height of 5' 6" (168 cm). If you are taller or shorter, you can adjust the pattern pieces along the lines marked "lengthen or shorten here". This way the proper fit is maintained. Always adjust all pattern pieces along the same line to the same degree.

HOW TO LENGTHEN AND SHORTEN PATTERN PIECES:

Cut the pattern pieces along the marked lines
To lengthen, slide the two halves of the pattern piece as far apart as necessary.
To shorten, overlap the two halves of the pattern piece as far as necessary. Blend the side edges.

CUTTING OUT

FOLD (— — —) means: Cut on the fold, the fold being the center of the pattern piece, but never a cut edge or seam. The piece should be cut double, with the fold line forming the center line. Pattern pieces that are outlined with a broken line in the cutting diagrams are to be placed face down on the fabric. The cutting diagrams on the pattern sheet show how the pattern pieces should be placed on the fabric.

The cutting diagrams show the placement of the pattern on the fabric.

For a single layer of fabric, the pattern pieces are pinned to the right side. For double layers of fabric, the right sides are facing and the pattern pieces are pinned to the wrong side. The pattern pieces that are shown extending over the fold of the fabric in the cutting diagram should be cut last from a single layer of fabric.

SEAM AND HEMLINE ALLOWANCES are included on an average:

1" (3 cm) hemline, **5/8" (1.5 cm)** for all edges and stitches. Using BURDA copying paper, transfer the lines and symbols of the pattern onto the wrong side of the fabric. Instructions can be found in the packaging.


INTERFACING

Press the interfacing piece according to the cutting diagram onto the wrong side of the fabric.

SEWING

While sewing, the right sides of the fabric are facing.

Transfer all lines of the pattern onto the right side of the fabric using basting stitches.

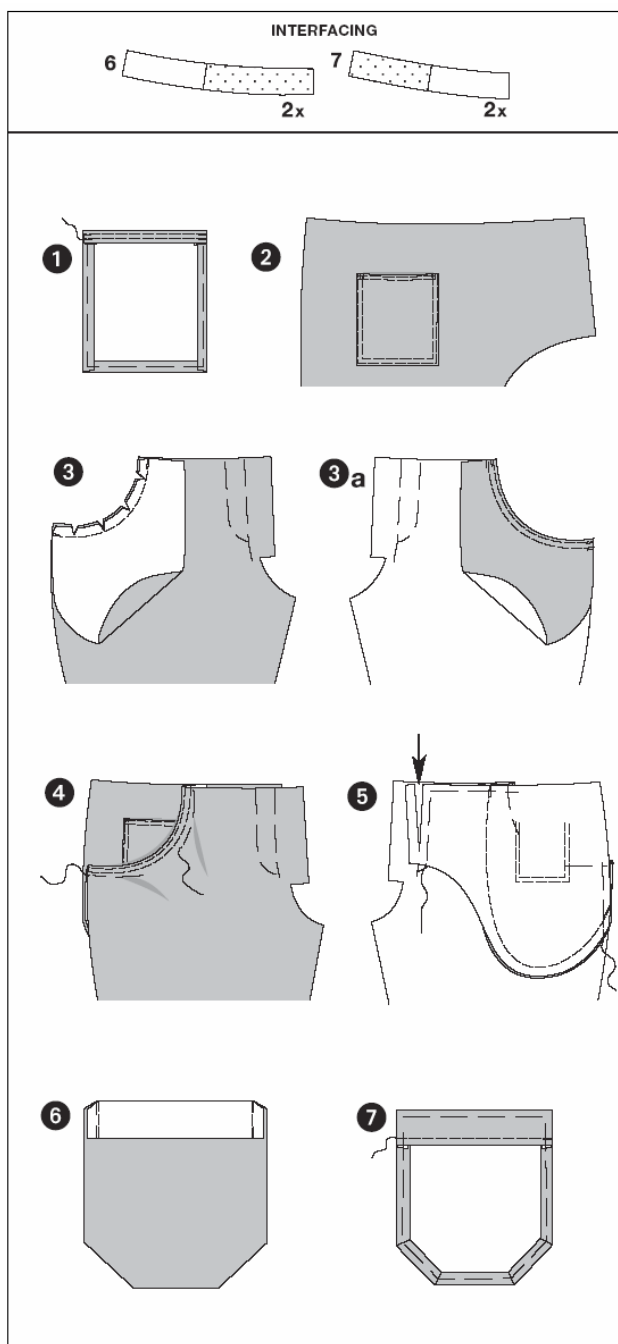

NOTE FOR STRETCHY FABRICS:

Use a special needle for stretchy fabrics for sewing. A narrow zigzag stitch keeps the seams elastic and prevents tearing (stitch width 1/2-1 mm, stitch length 2.5 mm) or use a special elastic stitch (see the instructions of your sewing machine). Make sure the thread tension is adjusted appropriately.

PANT

Right front pocket (piece 4)

1 Trim the allowances. Turn the allowances along the side and bottom pocket edges to the inside and press. Then turn the allowances of the top pocket edge inside and press. Stitch the top edge narrowly, 1/4" (0.7 cm) wide.

2 Pin the pocket, meeting the marked line, onto the right hip yoke piece. Topstitch the side and bottom edges narrowly, 1/4" (0.7 mm) wide.

HIP YOKE POCKETS

3 Position the pocket pouches on the front pant piece, right sides facing. Position the pocket opening edges together (seam 1) and stitch. Trim allowances, snip in. Turn and pin the pocket pouches to the inside. Press the edge; topstitch narrowly, 1/4" (0.7 cm) wide (3a).


4 Pin the front pant piece on the hip yoke piece so that the pocket opening edge meets the marked seam line. The right fabric sides of pocket pouch and hip yoke are facing. Slightly move the seam line of the pocket opening to the inside, pin the top and the bottom of the opening.

5 Pin the pocket pouch on the hip yoke piece. Do **not** enclose the front pant piece. Stitch. Neaten allowances. Pin the side, top and front edges of the hip yoke piece onto the front pant piece. **Note:** Cut the allowance of the center front edge of the right hip yoke piece (arrow).

BACK POCKETS

6 Neaten allowances. Fold the top pocket edge along the fold line to the outside, topstitch the sides. At the corners, cut the allowances.

7 Turn the facing to the inside, turn the allowances of the side and bottom pocket edges to the inside, press. Stitch the top pocket edge 1" (2.5 cm) wide.

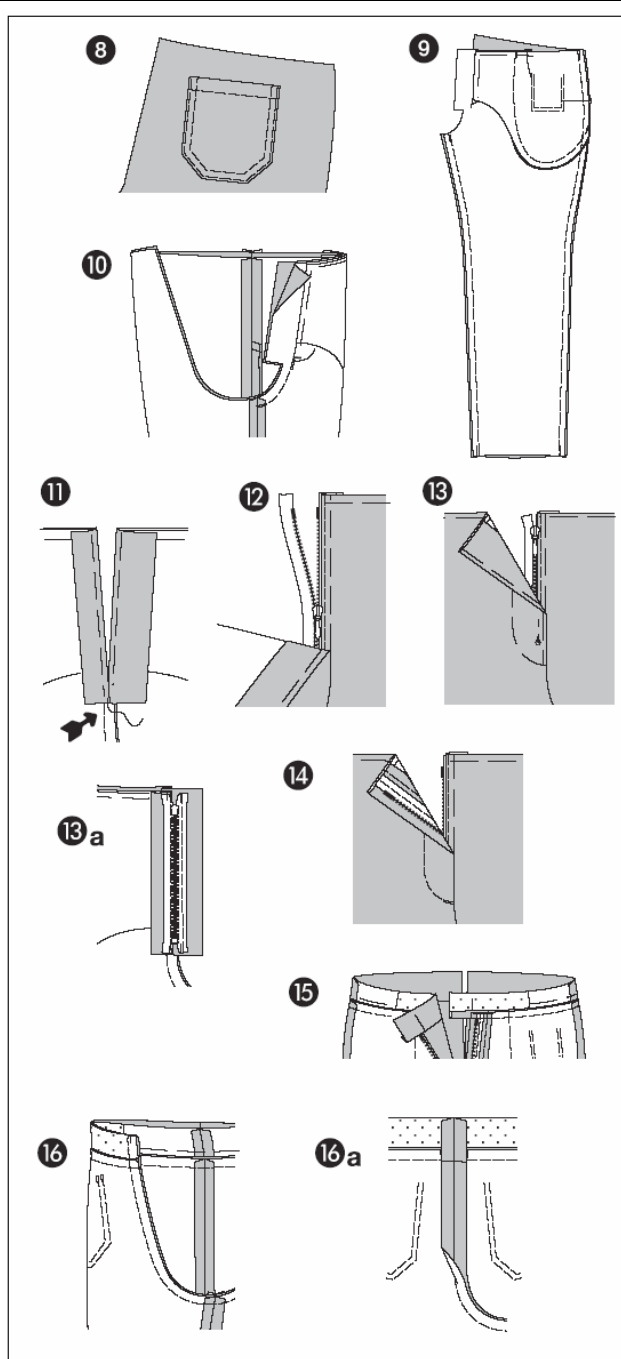

8 Pin the pockets, meeting the marked line, onto the back pant pieces. Topstitch the pockets along the side and bottom edges narrowly, $\frac{1}{4}$ " (0.7 cm) wide.

SIDE SEAMS / INNER LEG SEAMS

9 Position the front and back pant pieces together, right sides facing. Pin the side seams (seam 2) and inner leg seams (seam 3). Stitch the seams. Neaten allowances and press apart.

CENTER FRONT SEAM

10 Turn one pant leg inside out. Move one pant leg into the other so that the right fabric sides are facing. Stitch the center seam from the slit sign to the inner leg seams. Secure seam ends. Trim the allowances along the curve. Neaten allowances, as well as along the front facings.

ZIPPER

11 Fold and pin the facing of the **right** front pant piece to the inside.

Along the left front pant piece, allow the facing to underlap $\frac{1}{2}$ " (1 cm) wide. That hides the zipper later on. Turn the rest of the facing and press.

12 Pin the underlap (left edge) onto the zipper band, next to the little teeth of the zipper, topstitch narrowly.

13 Close the zipper. Pin the opening, the centers meet. Pin the zipper band onto the right facing. Do **not** enclose the pant piece. Stitch (13a).

14 Topstitch the **right** opening edge according to the drawing, enclose the facing when stitching.

WAISTBAND



 




Position the front waistband pieces on the back waist band pieces, right sides facing. Stitch the side seams (seam 4). Press allowances apart.

15 Position the waistband pieces with interfacing on the top pant edge (seam 5), the centers of the right fabric sides are facing. Side seams meet. Stitch. Trim allowances and press into the waistband.

BACK CENTER SEAM

Pull one pant leg inside the other, right fabric sides facing.

16 Pin the center back seam. Stitch the center seam. Neaten allowances and press them apart from the top to the curve (16a). As the waistband is still loose, stitch its center seam. Press allowances apart. Neaten the allowance of the long bottom waistband edge.

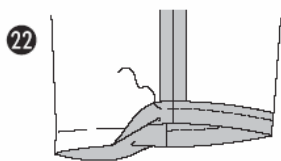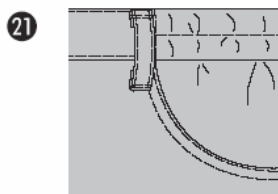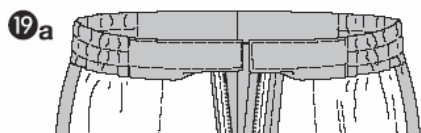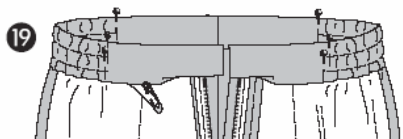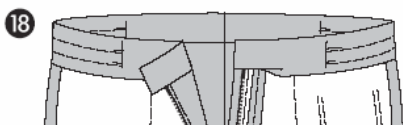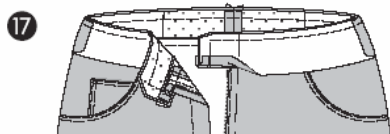

17 Position the non-interfaced waistband pieces onto the already sewn waistband, right sides facing. The seams meet. Fold the allowance of the bottom waistband edge. Stitch the top waistband edge and the narrow front edges together. Stitch along the **right** waistband end at the front center, along the underlap of the **left** waistband end. Trim allowances, cut the corners at angles. Turn the waistband. Pin the edges and press. Pin the inner waistband onto the seam line.

ELASTIC BAND: Insert elastic bands in the sides of the waistband. Stitch between the vertical marked stitch lines on the outer seam line of the waistband and the center of the waistband. Enclose the inner waistband piece. Secure the seam ends.

19 Insert the elastic band into the tube using a safety pin:

Size 14 (EU 46): 8 ½" (22 cm);
size 16 (EU 48): 9 ¼" (23.5 cm);
size 18 (EU 50): 9 ¾" (24.5 cm);
size 20 (EU 52): 10 ¼" (26 cm);
size 22 (EU 54): 10 ¾" (27.5 cm);
size 24 (EU 56): 11 ¼" (28.5 cm);
size 26 (EU 58): 12" (30 cm);
size 28 (EU 60): 12 ½" (31 cm).

Pin the ends. Try the pants on and adjust the waistband width according to your size. Stitch the ends of the elastic bands. Topstitch the rest and the inner part of the waistband (19a). Work a **BUTTONHOLE** into the right front waistband edge. Apply **BUTTON** onto the underlap.

BELT LOOPS


20 Fold the long edges ½" (1 cm) and press. Then fold the strap into half and press. Topstitch the edges. Cut the strap in 5 equal pieces. Neaten the ends and fold.


21 On the back of the pant, stitch the loops onto the center seam and the elastic band ends. Stitch above the front pockets, onto the top of the waistband and the waistband seam line.

HEMLINE

22 Neaten the hemline, fold and press. Stitch the bottom edges of the pants ½" (1.2 cm) wide and enclose the hemline.

layout drawing

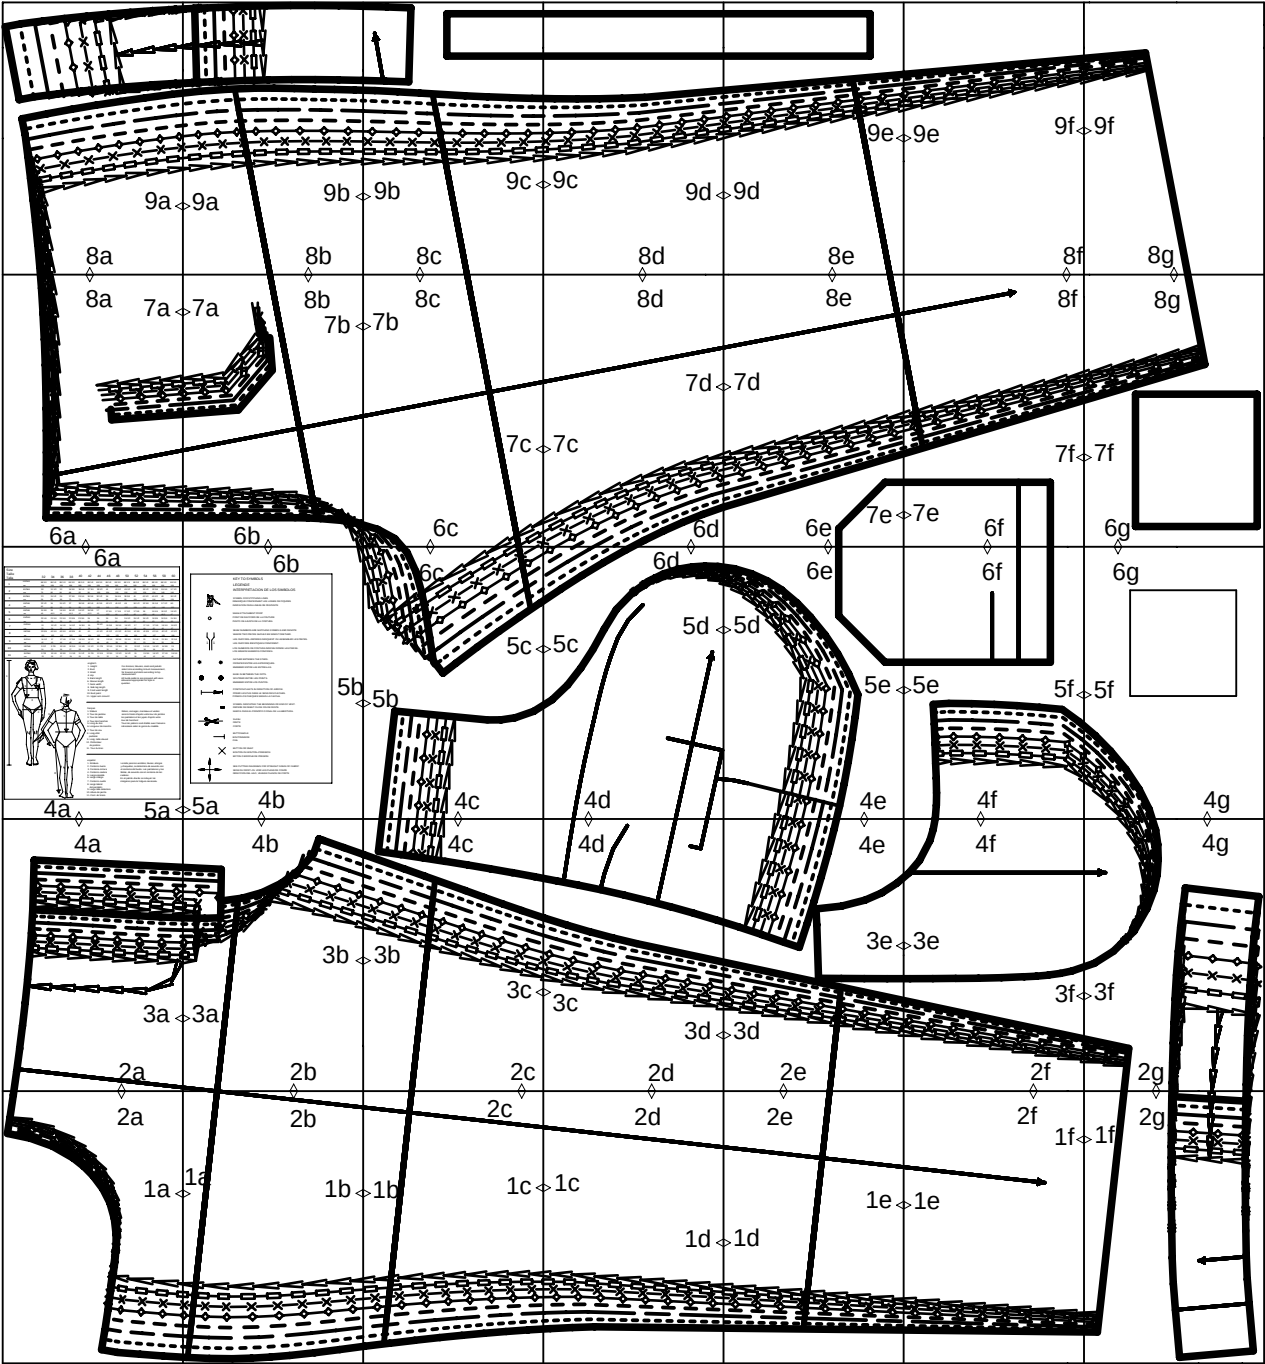

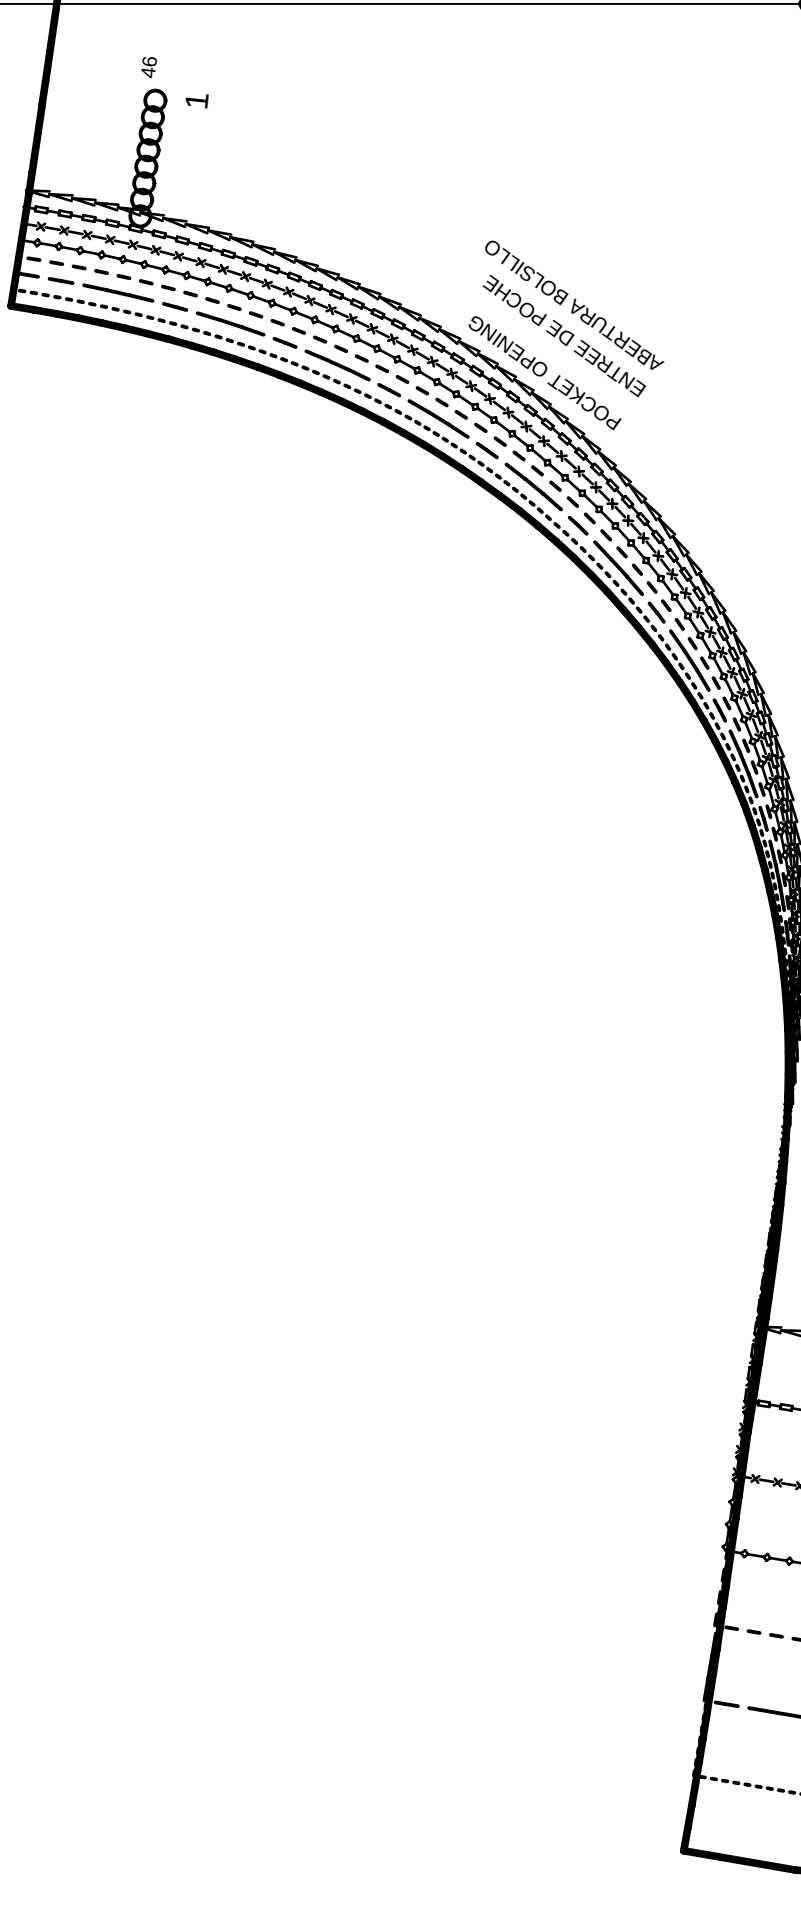

2a

FINISHED HIP SIZE	TOUR DE HANCHES	MEASUREMENTS	
		CADERA	
46	44	$1\frac{1}{2}$ "	113cm
48	47"		119cm
50	49	$1\frac{1}{4}$ "	125cm
52	51	$1\frac{1}{2}$ "	131cm
44	54"		137cm
56	56	$1\frac{1}{2}$ "	143cm
58	58	$3\frac{3}{4}$ "	149cm
60	61"		155cm

1a

1a

1

PANTS, FRONT
DEVANT PANTALON/CULOTTE
PANTALON ANTERIOR



2 x

5/8"
(1,5cm)

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

6025

Burda style

open source sewing

www.burdastyle.com

2b

1b

60

58

56


54

52

50

48

46

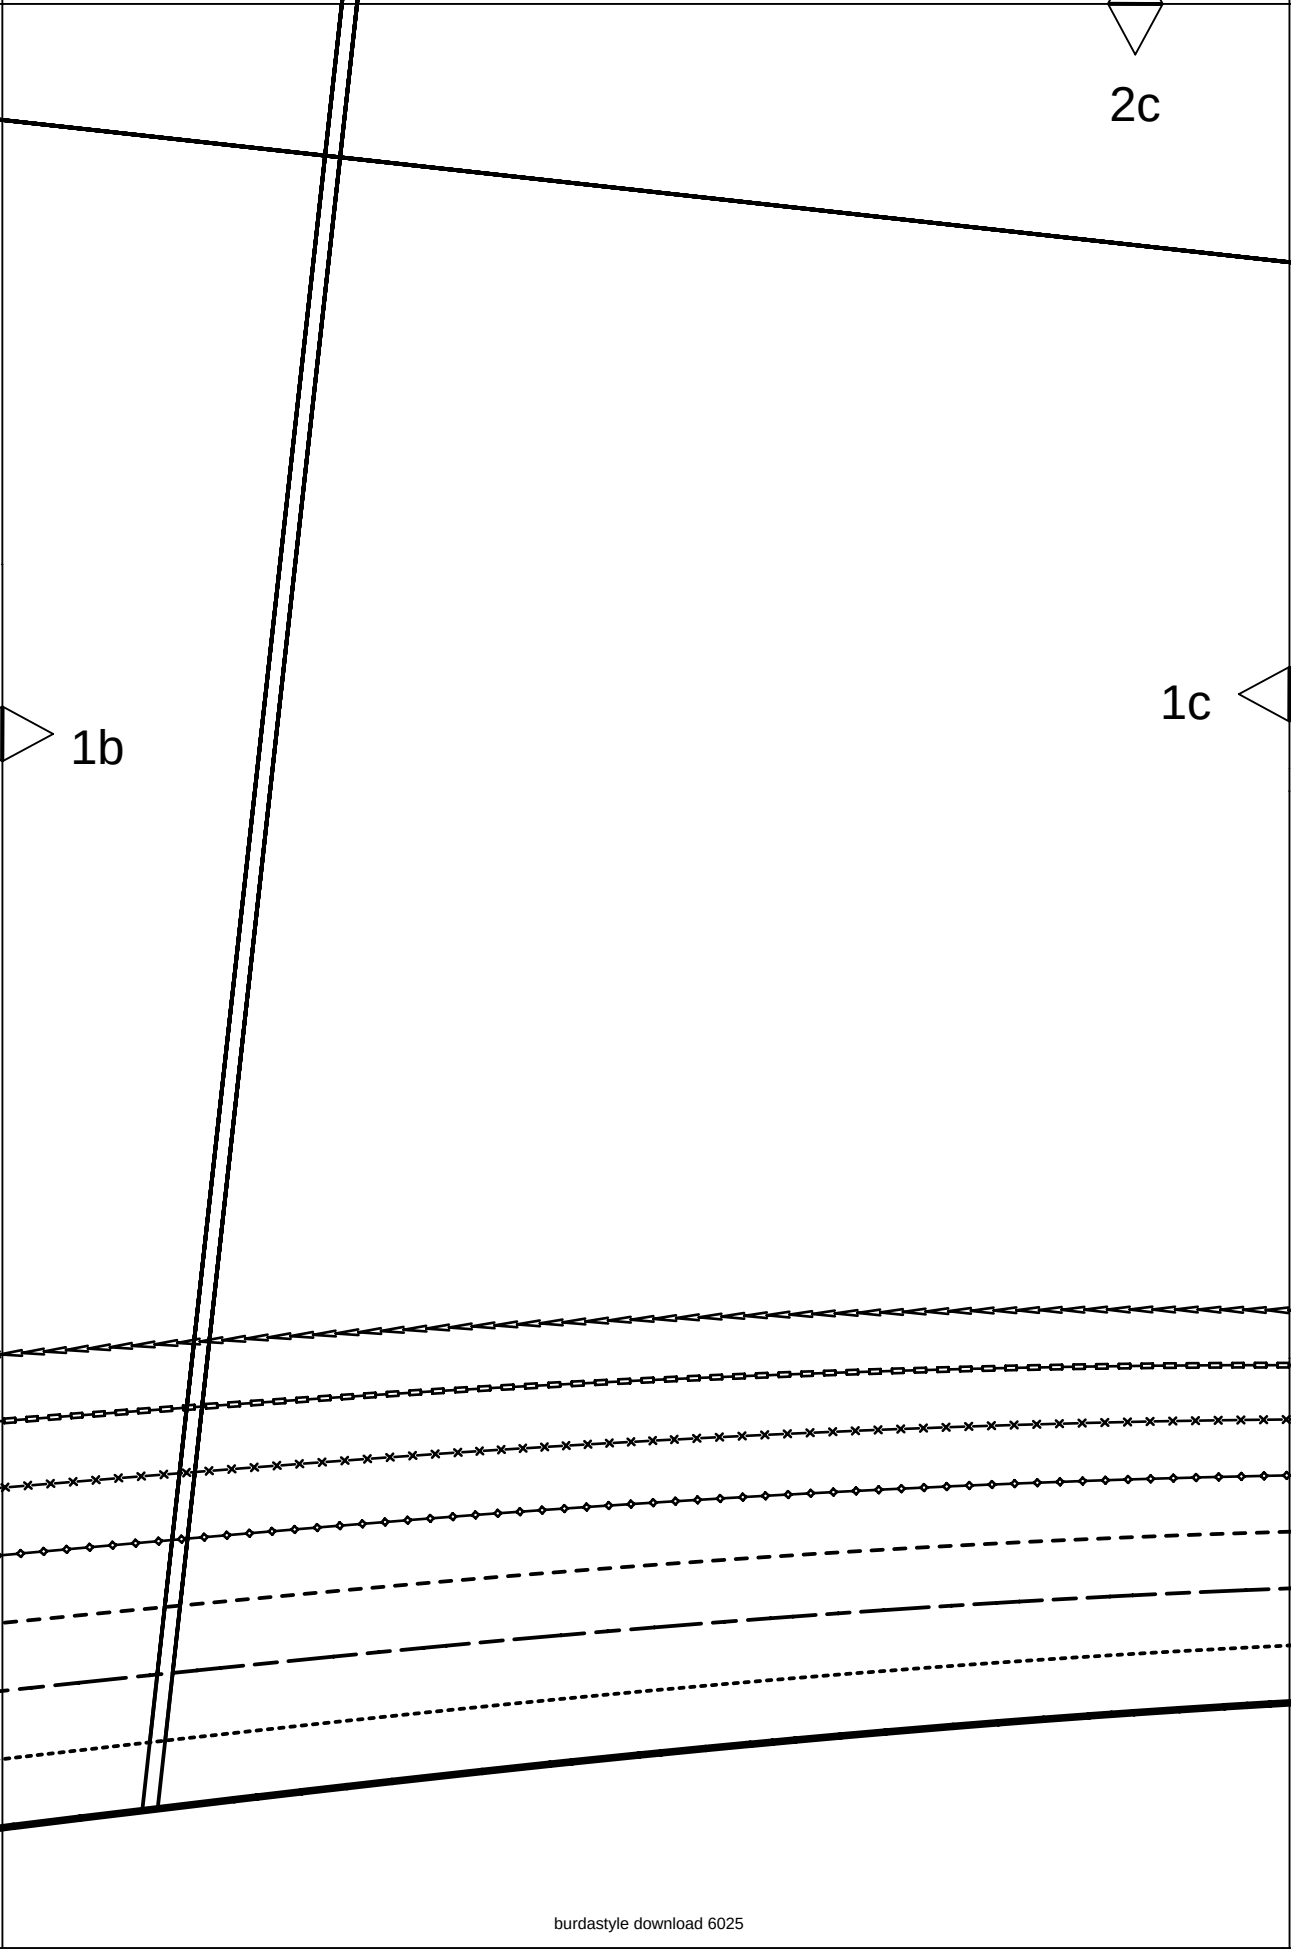

2d

STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

1c


1d


2e

1e

1d

LENGTHEN OR SHORTEN HERE
RALLONGER OU RACCOURCIR ICI
ALARGAR O ACORTAR AQUI

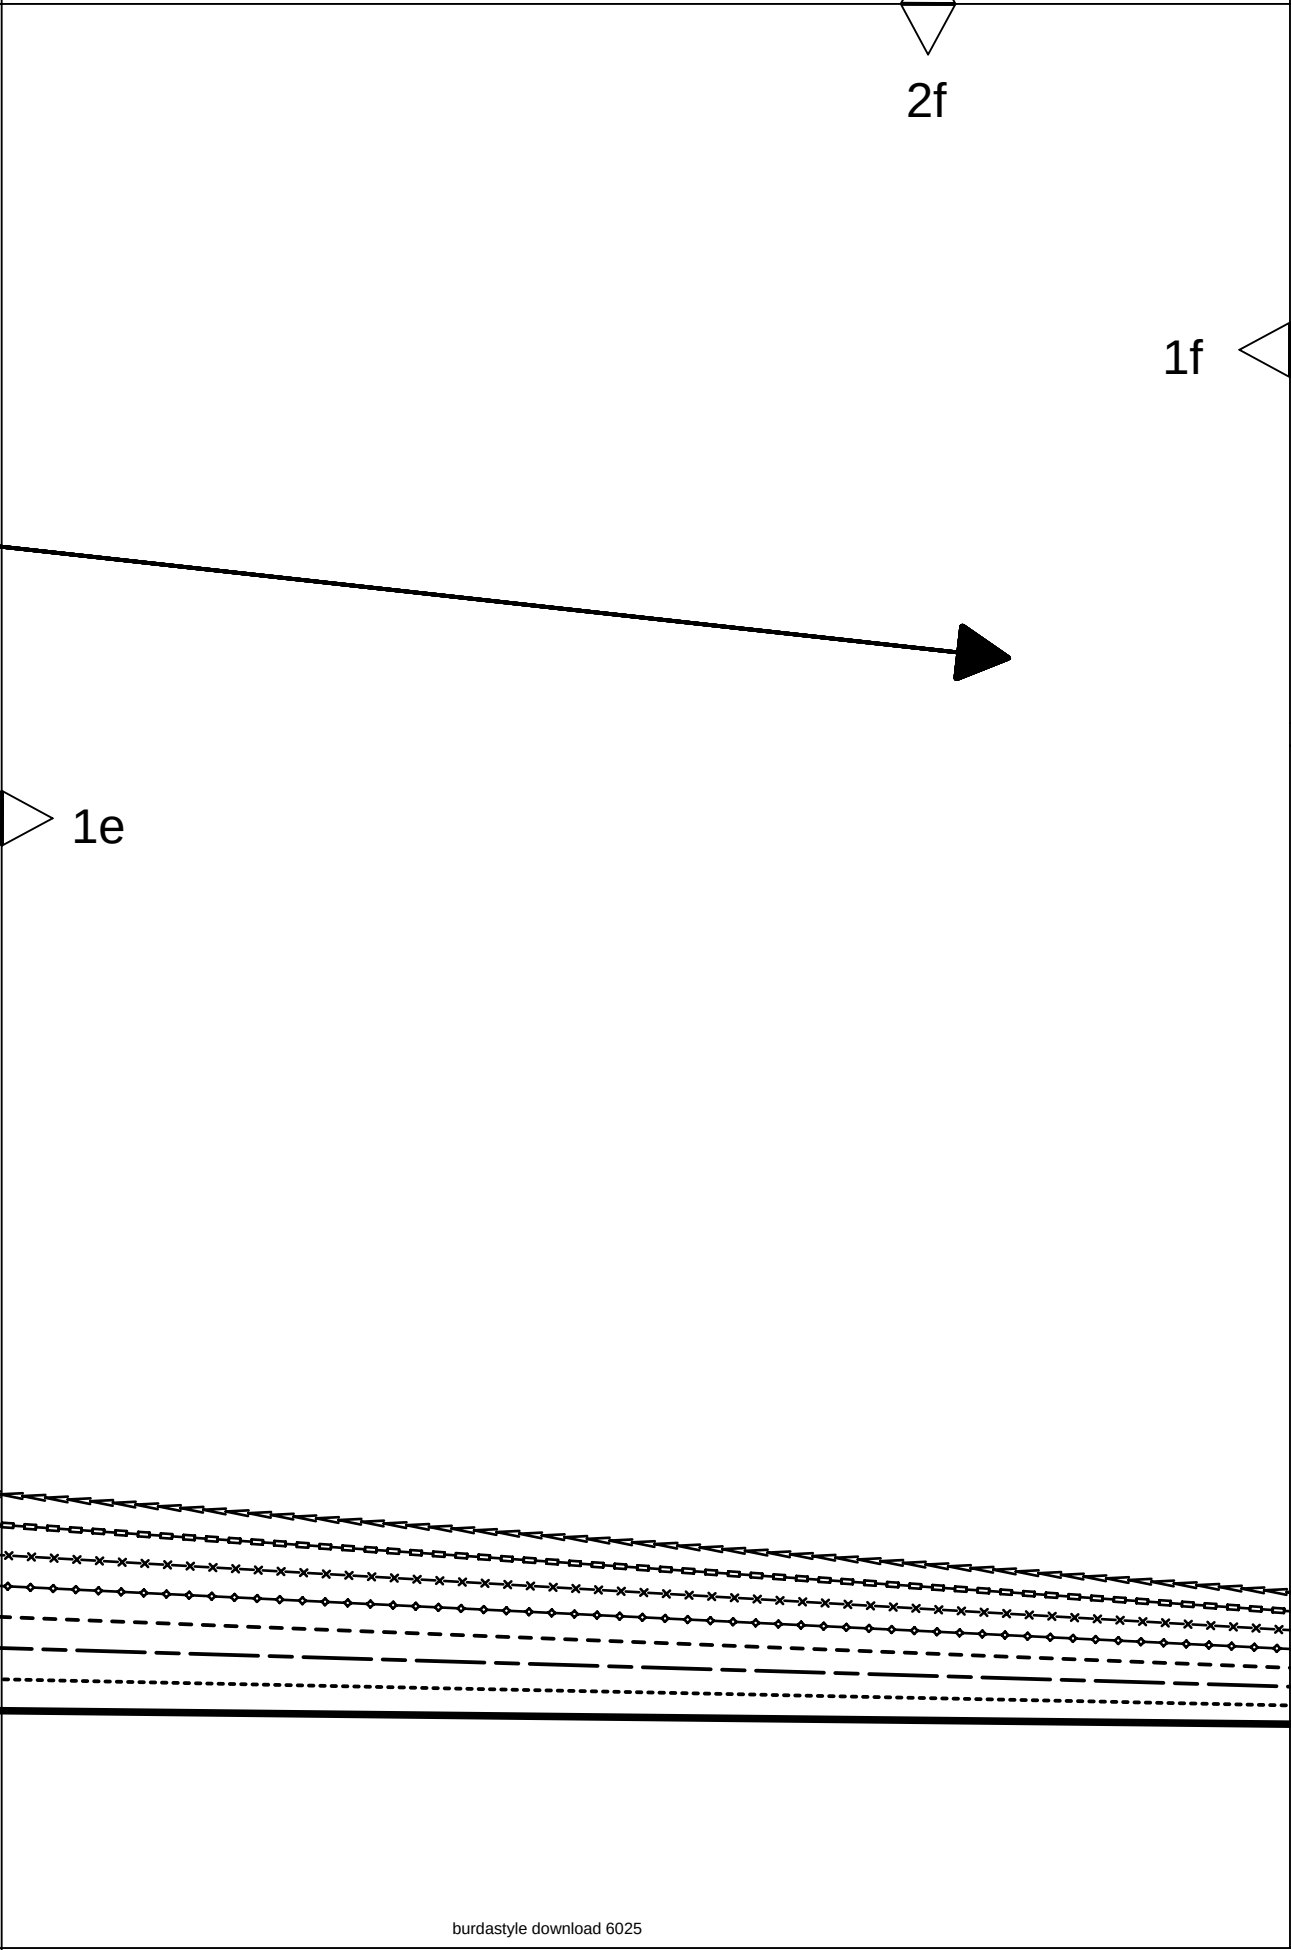

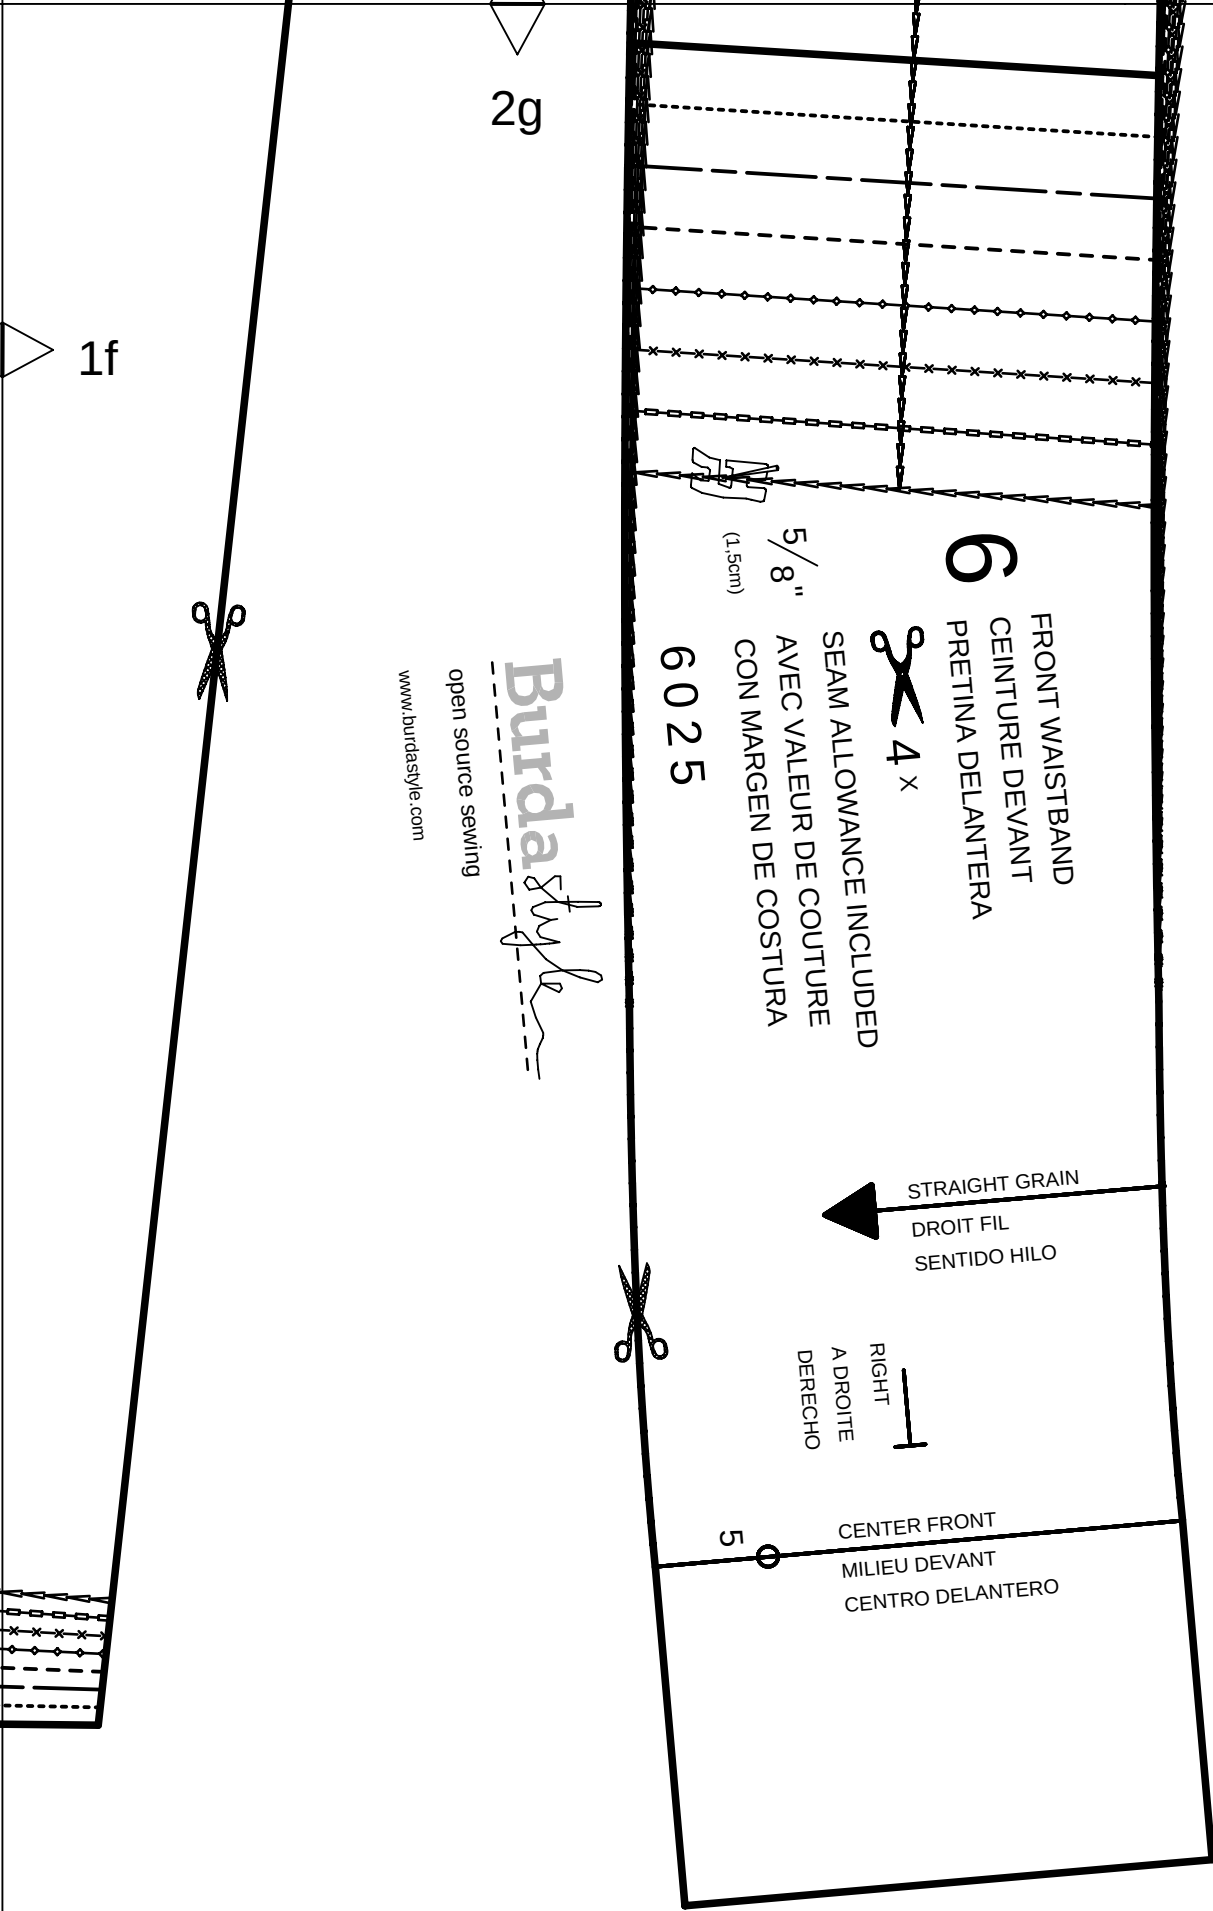

6

FRONT WAISTBAND
CEINTURE DEVANT
PRETINA DELANTERA

4 x

5/8" (1.5cm)

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

6025

STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

RIGHT
A DROITE
DERECHO


CENTER FRONT
MILIEU DEVANT
CENTRO DELANTERO

2g

1f


Burda style
open source sewing
www.burdastyle.com

4a

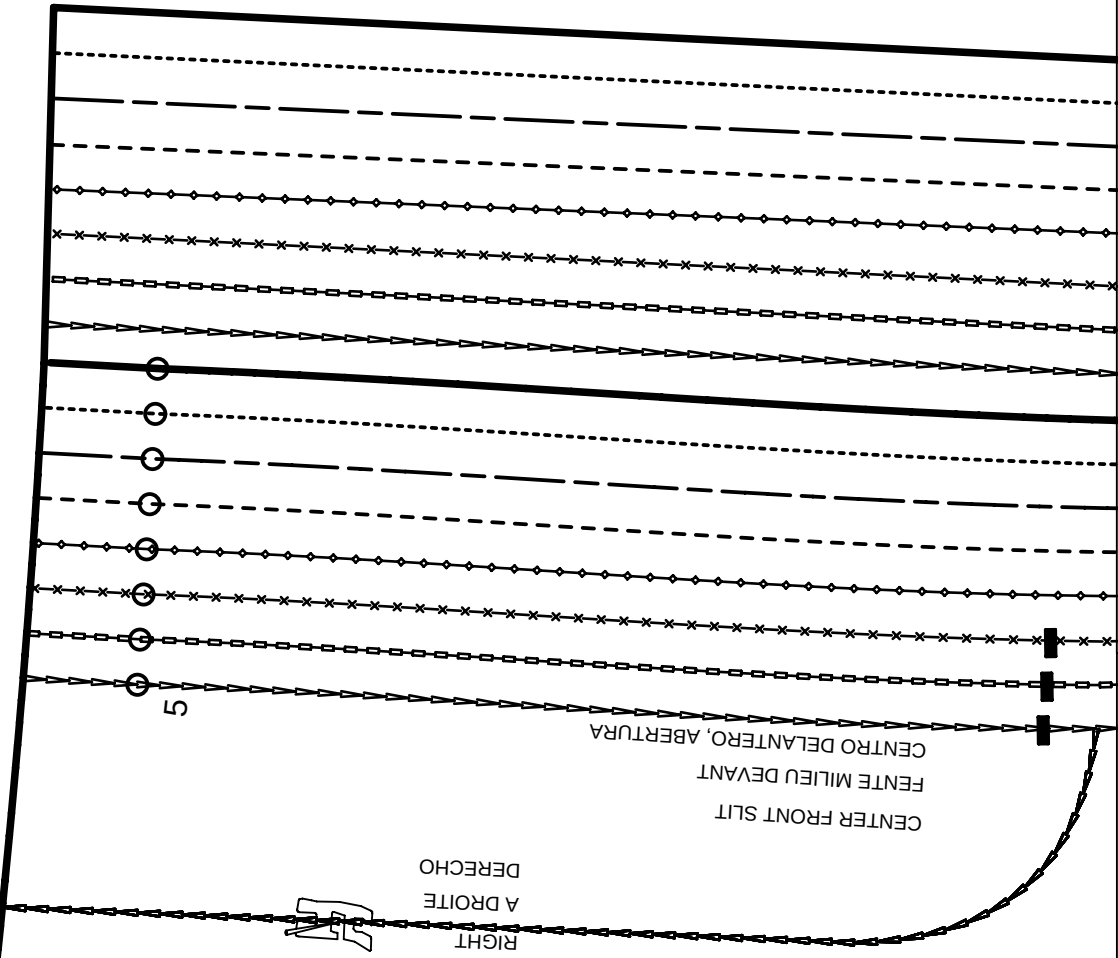

3a

2a

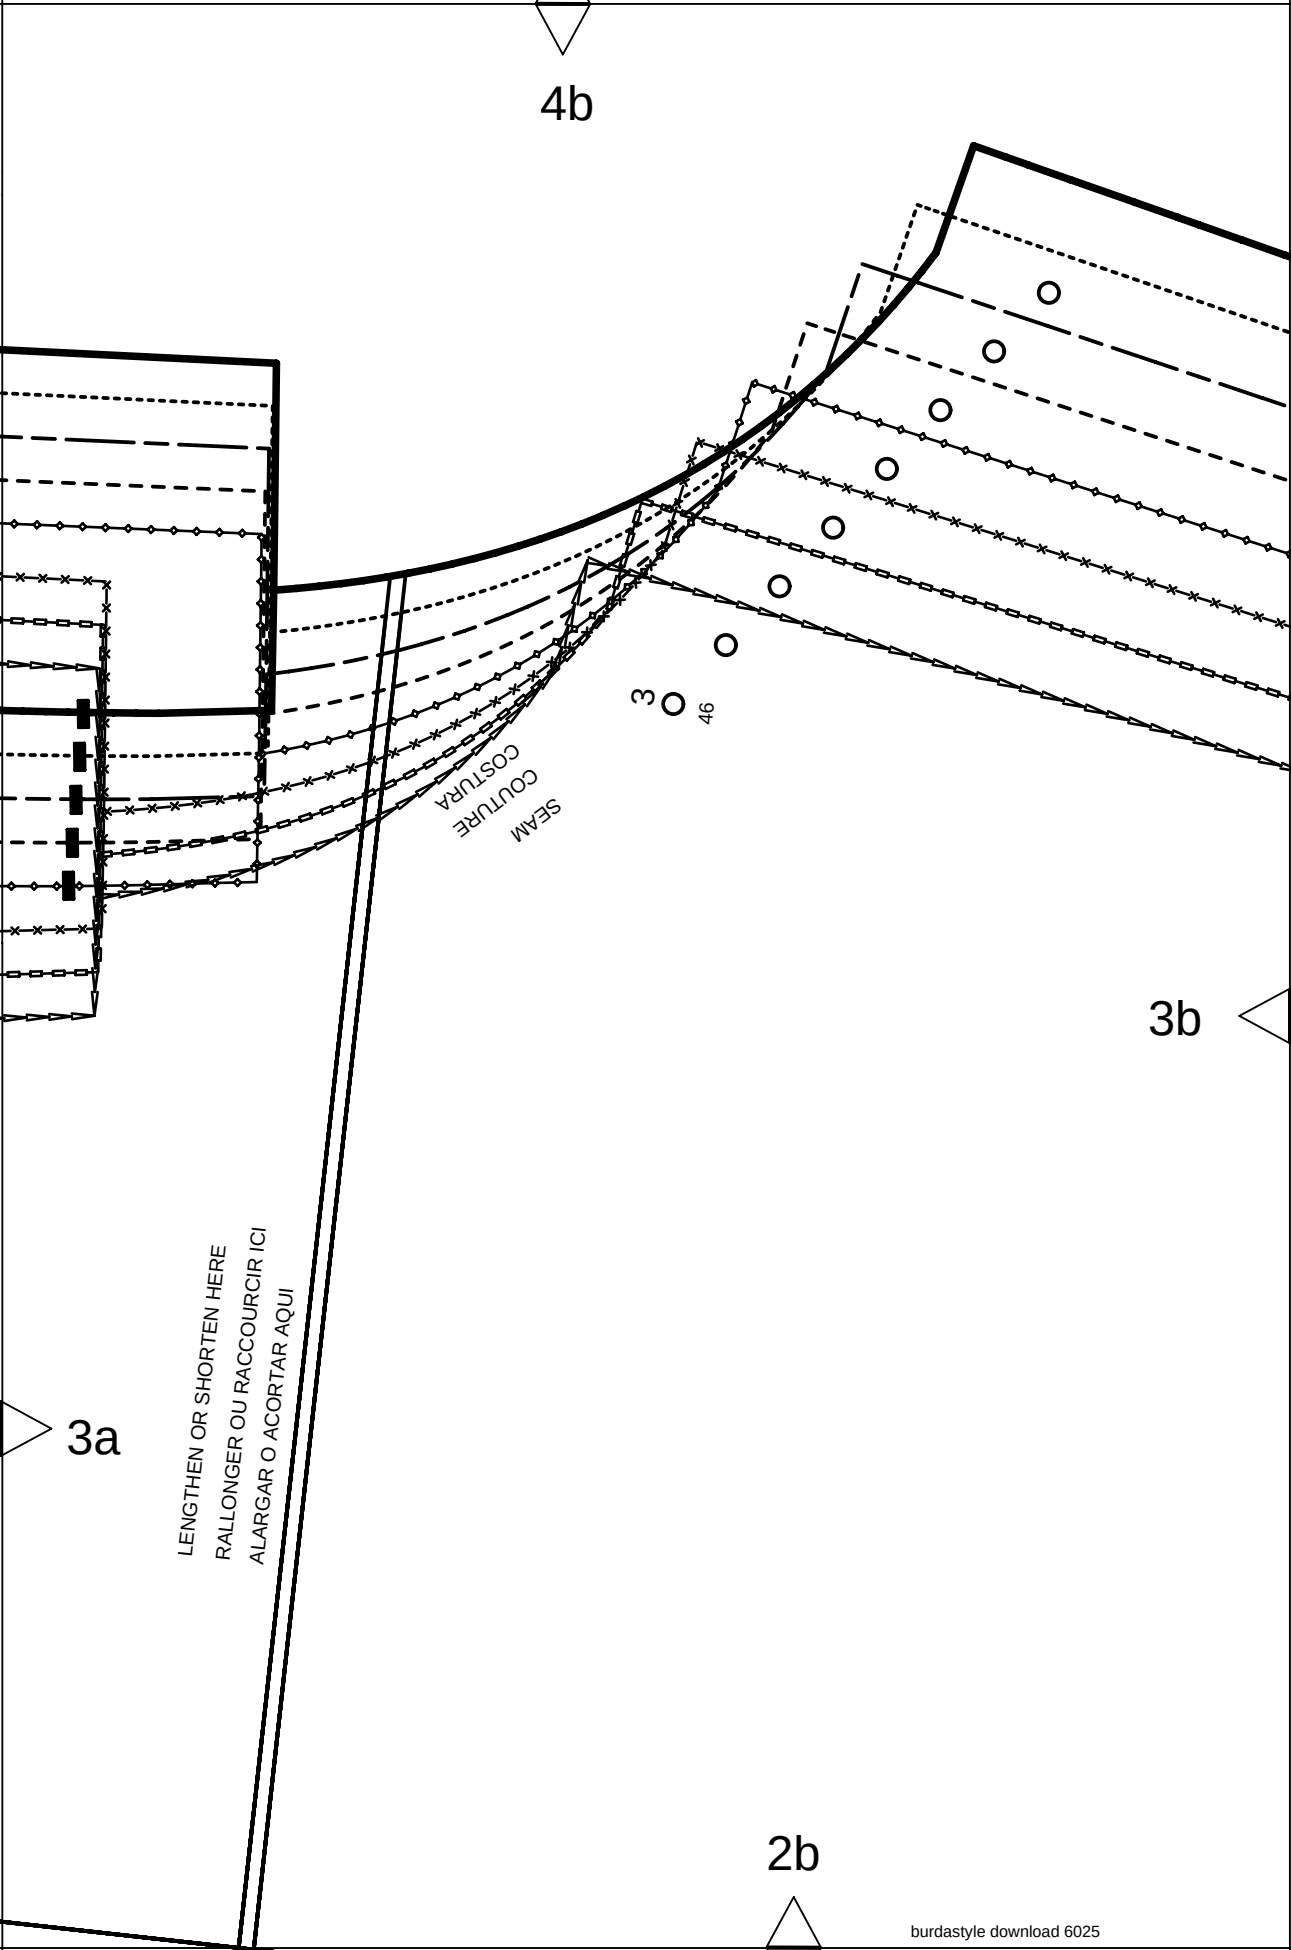

4b

3 46


SEAM
COSTURA

3b

2b

3a

LENGTHEN OR SHORTEN HERE
RALLONGER OU RACCOURCIR ICI
ALARGAR O ACORTAR AQUI

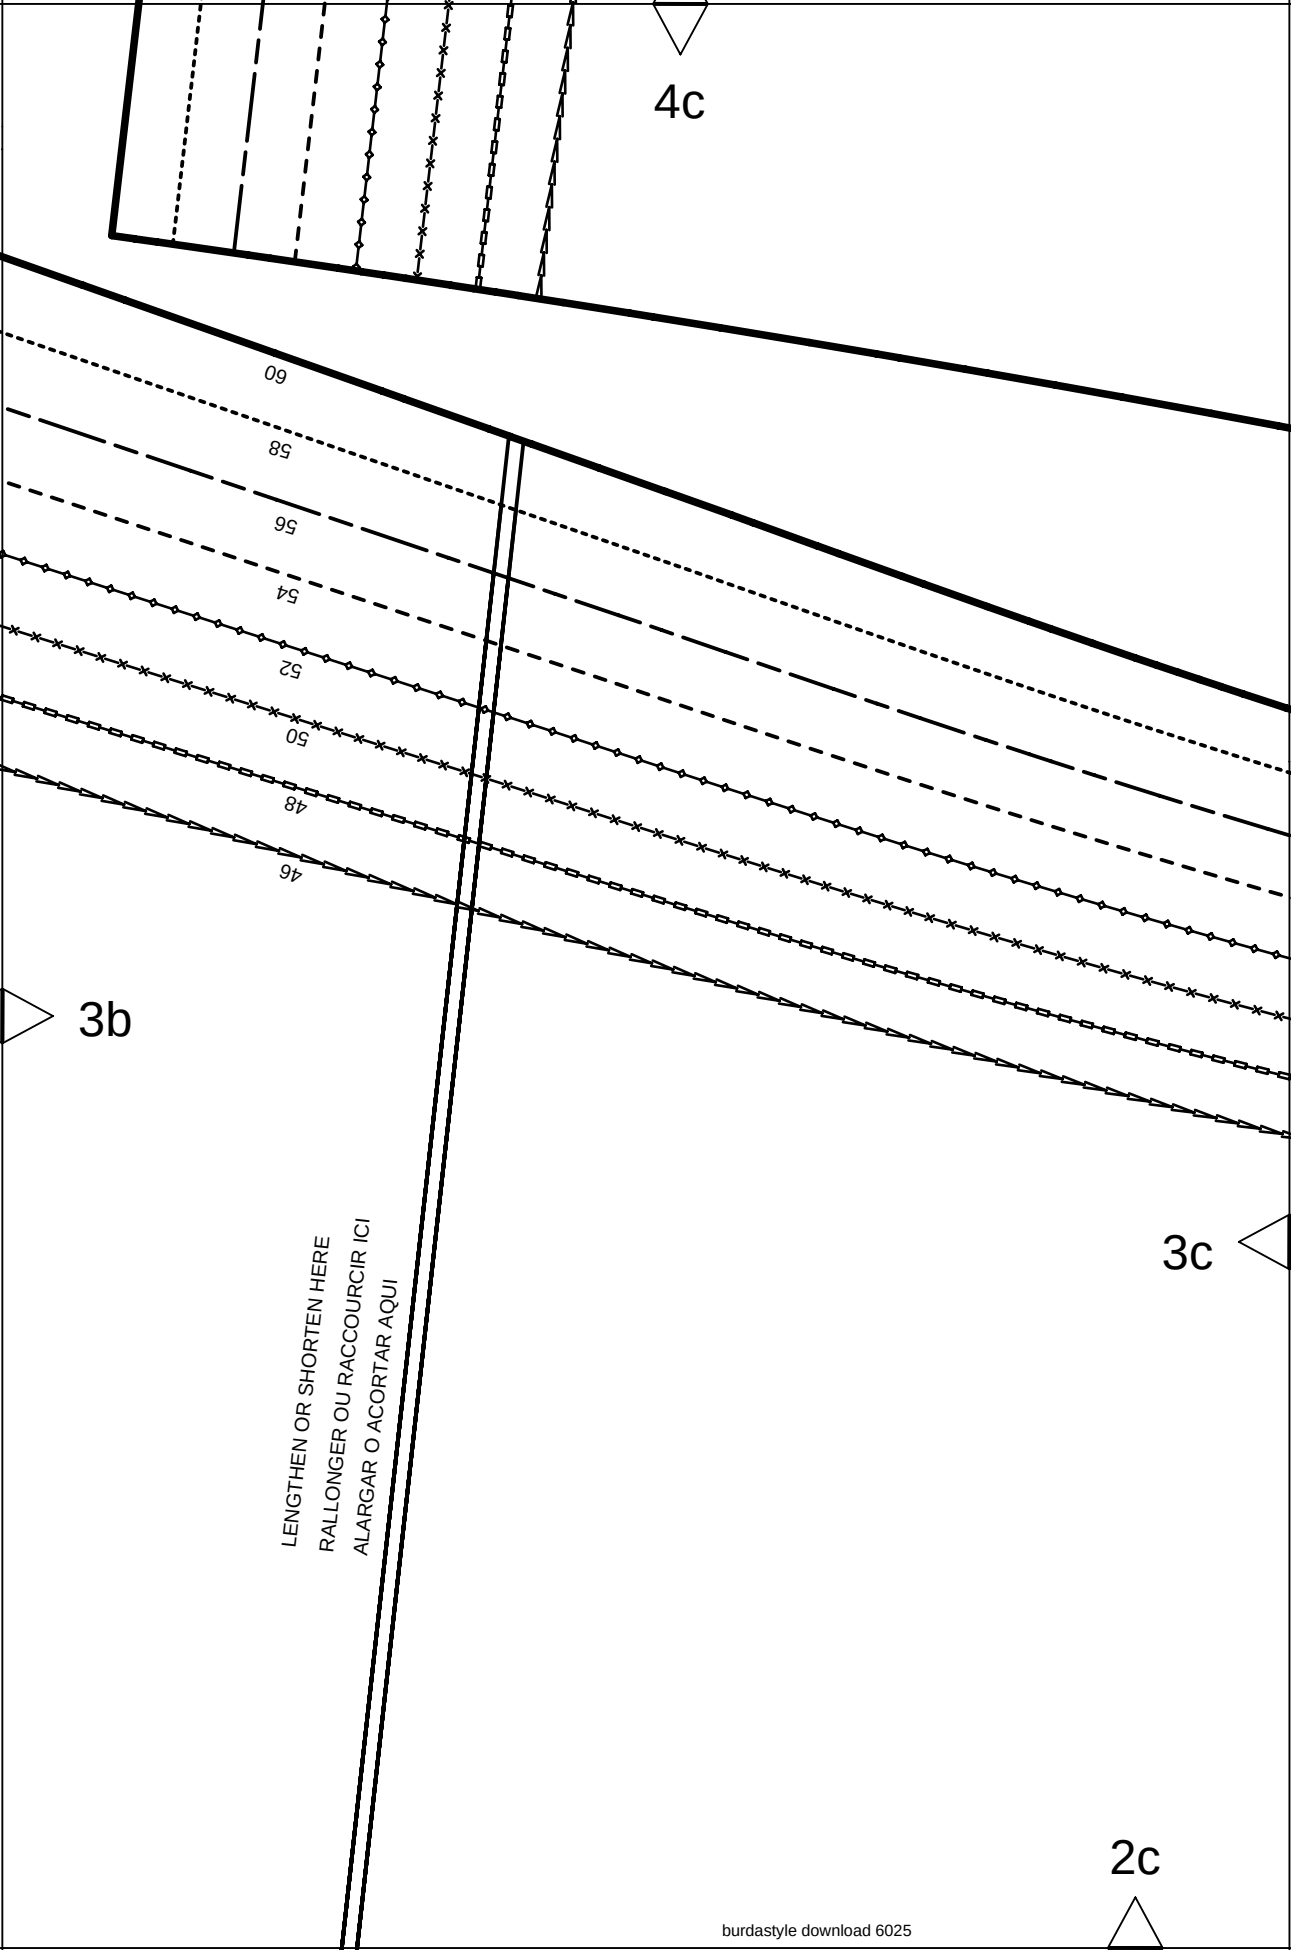

4d


PLACEMENT
RACCORD
TOPE



3c

3d

2d

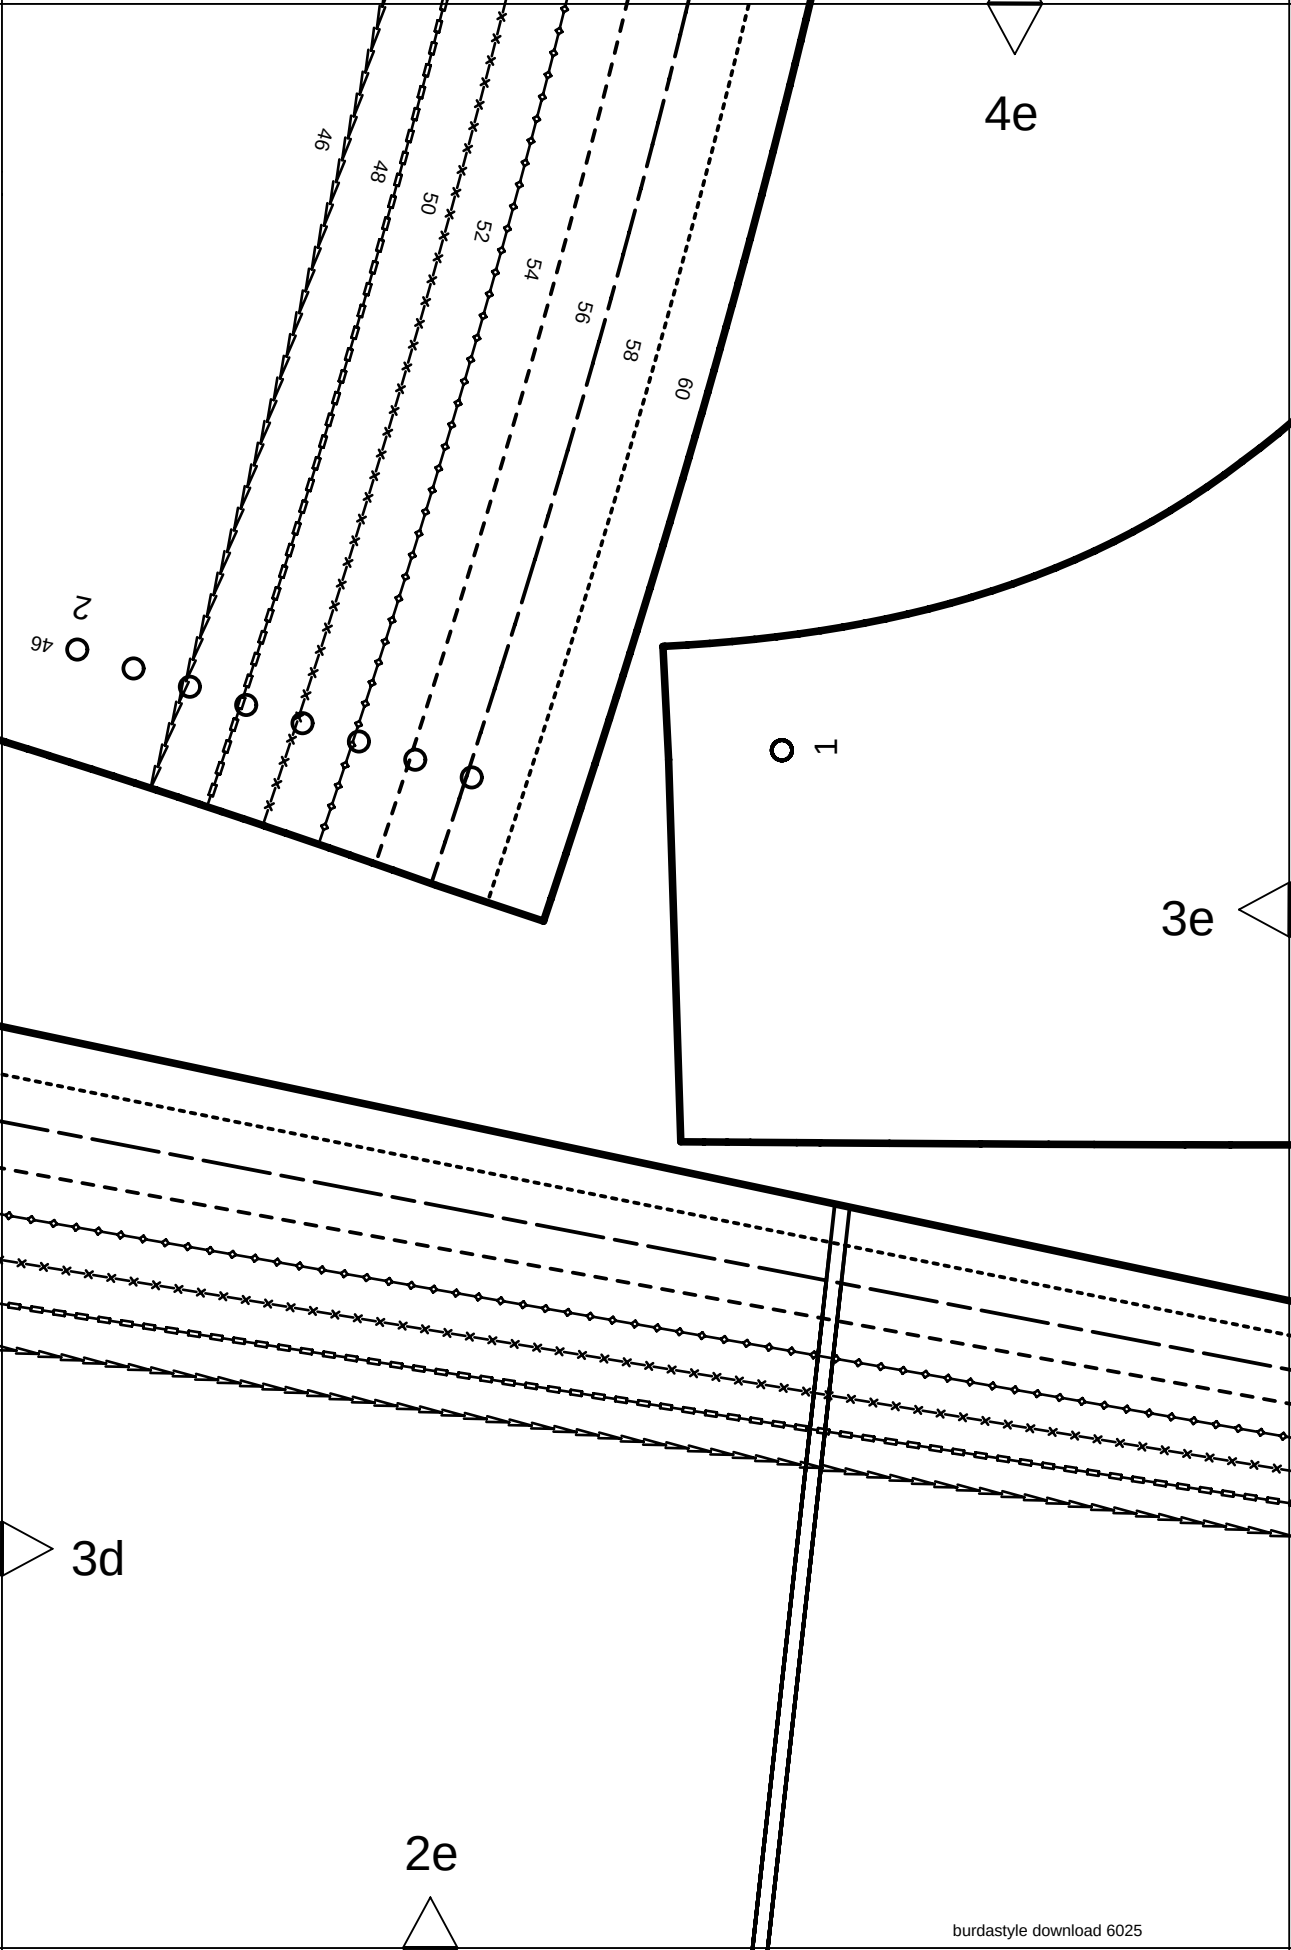

3e

2

POCKET POUCH
FOND DE POCHE
BOLSILLO INTERIOR



$\frac{5}{8}$ "
(1,5cm)

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

6025

Burda *style*

open source sewing

www.burdastyle.com

4f




3f

2f

STRAIGHT GRAIN


DROIT FIL

SENTIDO HILO

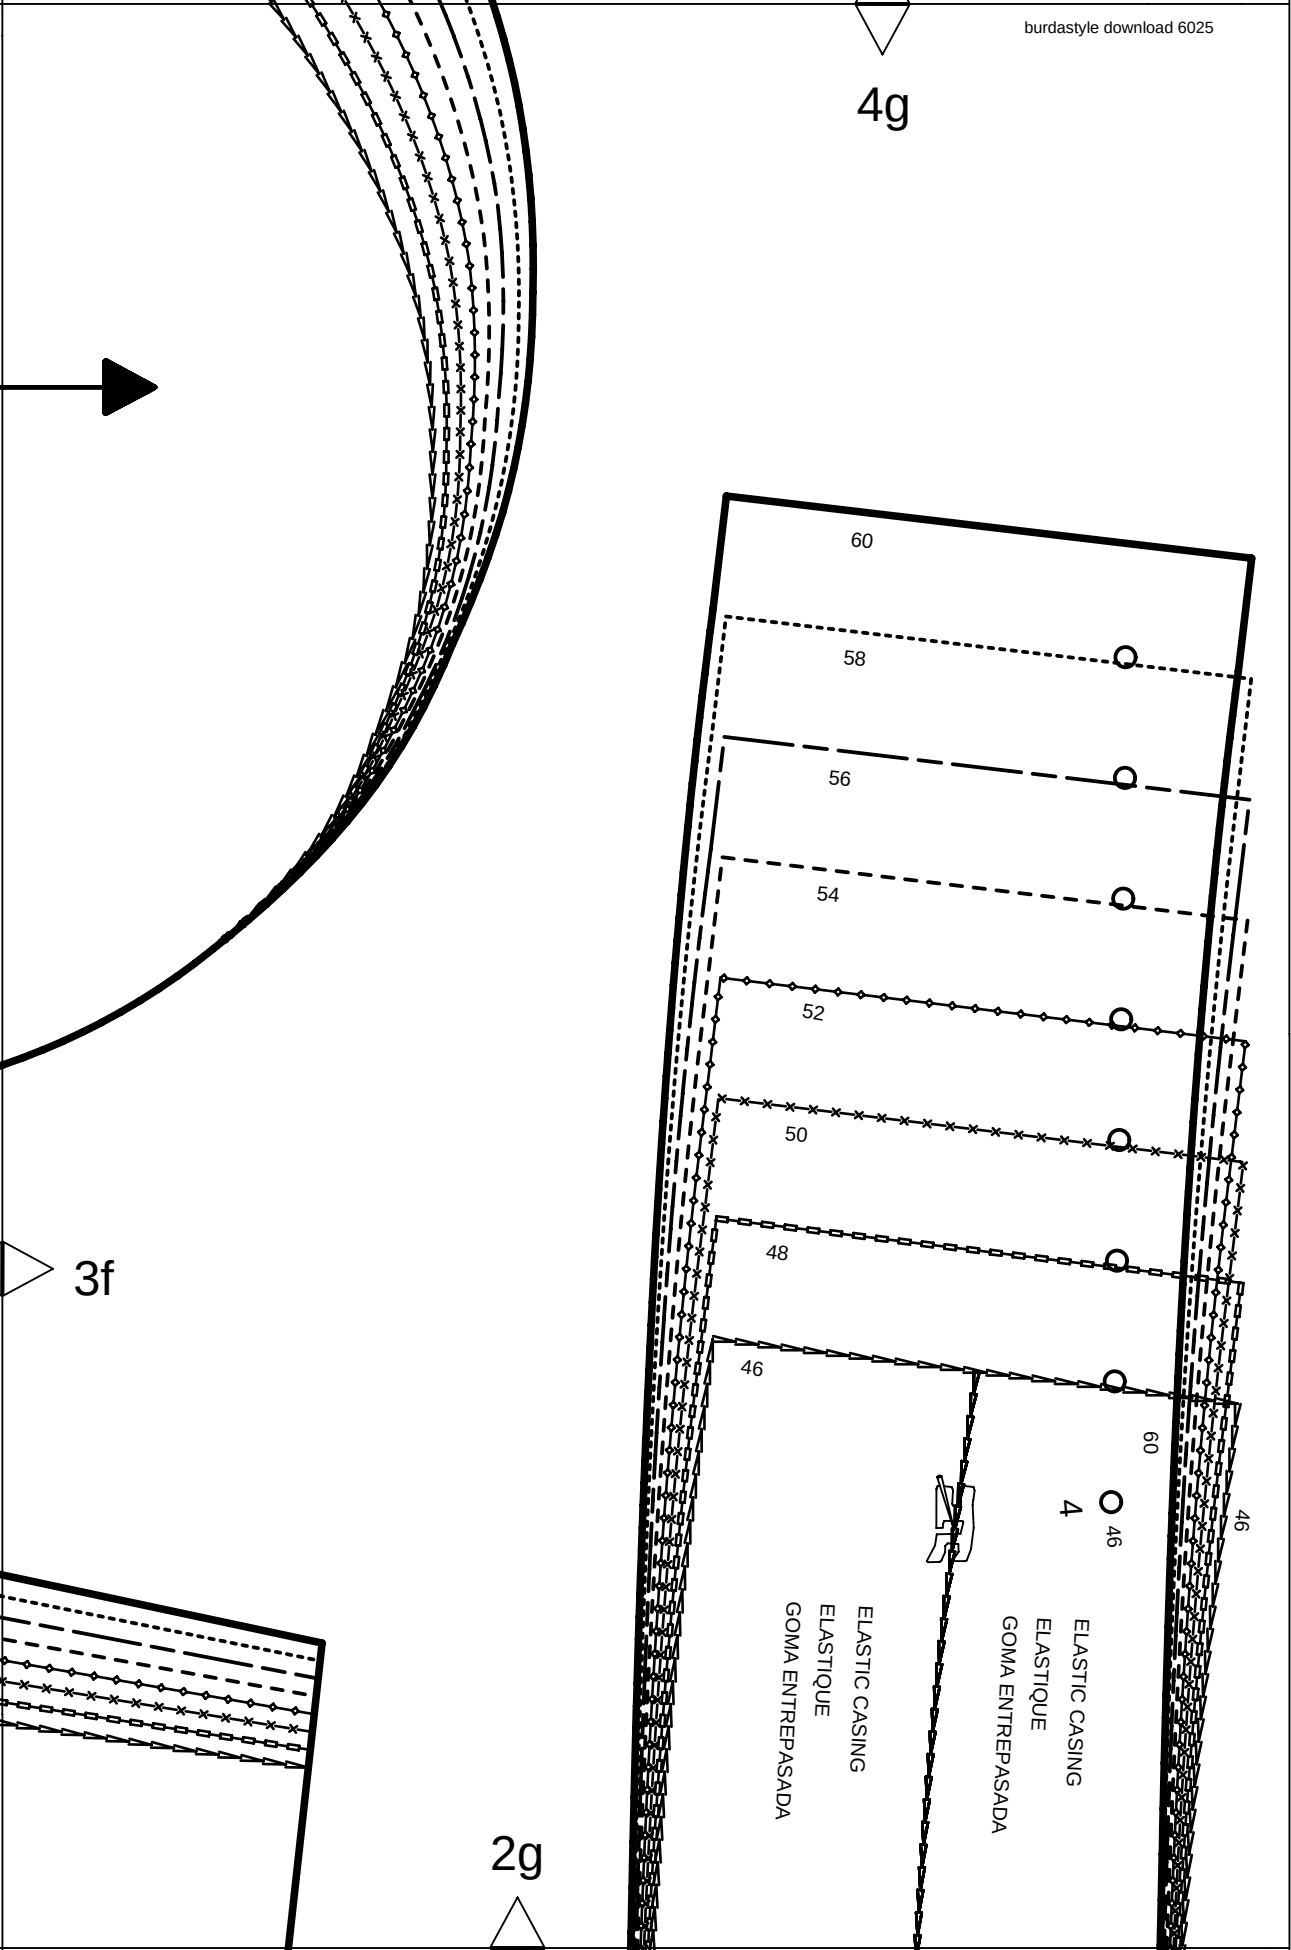

6a

Size Taille Talla		32	34	36	38	40	42	44	46	48	50	52	54	56	58	60
1	inches cm	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168	66 1/4 168
2	inches cm	30 76	31 1/2 80	33 84	34 3/4 88	36 1/4 92	37 3/4 96	39 1/2 100	41 104	43 1/2 110	45 1/2 116	48 122	50 1/2 128	52 3/4 134	55 1/4 140	57 1/2 146
3	inches cm	23 58	24 1/2 62	26 66	27 3/4 70	29 1/4 74	30 3/4 78	32 1/2 82	34 86	36 1/4 92	38 3/4 98	41 104	43 1/2 110	45 1/2 116	48 122	50 1/2 128
4	inches cm	32 1/2 82	34 86	35 1/2 90	37 94	38 3/4 98	40 1/4 102	41 3/4 106	43 1/2 110	45 1/2 116	48 122	50 1/2 128	52 3/4 134	55 1/4 140	57 1/2 146	60 152
5	inches cm	15 3/4 40	16 40.5	16 1/4 41	16 1/2 41.5	16 1/2 42	16 3/4 42.5	17 43	17 1/4 43.5	17 1/4 44	17 1/2 44.5	17 3/4 45	18 45.5	18 1/4 46	18 1/2 46.5	18 1/2 47
6	inches cm	23 1/4 59	23 1/4 59	23 1/4 59	23 3/4 60	23 3/4 60	24 61	24 61	24 61	24 61	24 1/2 62	24 1/2 62	24 1/2 62	24 3/4 63	24 3/4 63	24 3/4 64
7	inches cm	13 33	13 1/2 34	14 1/4 35	14 1/2 36	14 3/4 37	15 38	15 1/2 39	15 3/4 40	16 1/4 41	16 1/2 42	17 43	17 1/4 44	17 3/4 45	18 1/4 46	18 1/2 47
8	inches cm	39 3/4 101	40 1/4 102	40 1/4 102	40 3/4 103	41 104	41 104	41 1/2 105	41 1/2 105	41 1/2 105	41 3/4 106	41 3/4 106	41 3/4 106	42 1/4 107	42 1/2 108	42 1/2 108
9	inches cm	16 1/2 42	17 43	17 1/4 44	17 3/4 45	18 1/4 46	18 1/2 47	19 48	19 1/4 49	19 3/4 50	20 1/4 51	20 1/2 52	21 53	21 1/4 54	21 3/4 55	22 1/4 56
10	inches cm	9 1/2 24	9 7/8 25	10 1/4 26	10 3/4 27	11 1/8 28	11 1/2 29	11 7/8 30	12 1/4 31	12 3/4 32	13 33	13 1/2 34	14 1/4 35	14 1/2 36	14 3/4 37	15 38
11	inches cm	9 7/8 25	10 1/4 26	10 3/4 27	11 1/8 28	11 1/2 29	11 7/8 30	12 1/4 31	12 3/4 32	13 1/2 34	14 1/2 36	15 38	15 3/4 40	16 1/2 42	17 1/4 44	18 1/4 46

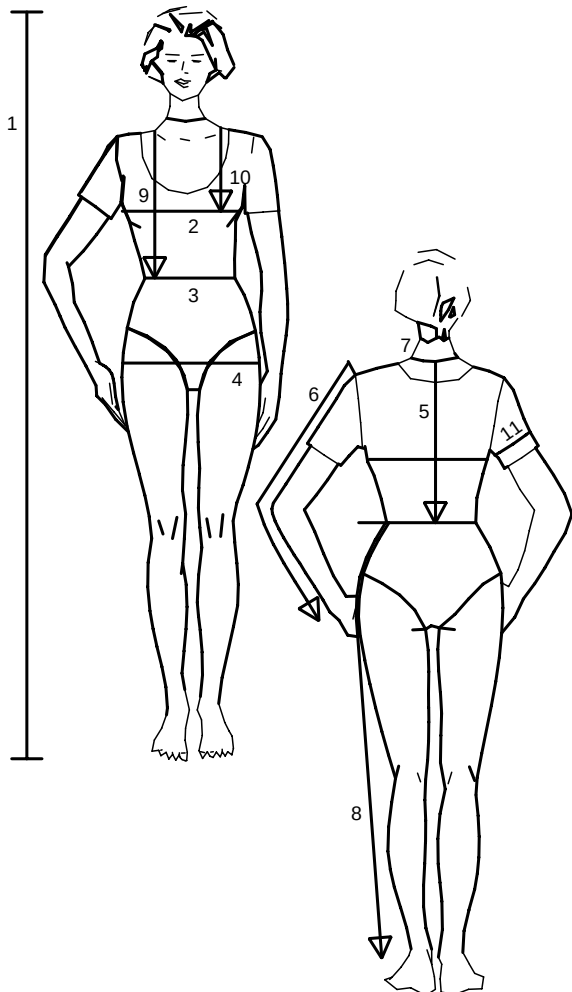

englisch

1. Height
2. Bust
3. Waist
4. Hip
5. Back length
6. Sleeve length
7. Neck width
8. Side leg length
9. Front waist length
10. Bust point
11. Upper arm circumf.

For dresses, blouses, coats and jackets select size according to bust measurement, for trousers and skirts according to hip measurement!

All burda patterns are prepared with ease allowance appropriate for style in question.

français

1. Stature
2. Tour de poitrine
3. Tour de taille
4. Tour des hanches
5. Long. du dos
6. Longueur de manche
7. Tour de cou
8. Long. côté pantalon
9. Prof. taille devant
10. Profondeur de poitrine
11. Tour du bras

Robes, corsages, manteaux et vestes seront choisis d'après votre tour de poitrine les pantalons et les jupes d'après votre tour de hanches!

Tous les patrons sont établis avec l'aisance nécessaire selon le genre du modèle.

español

1. Estatura
2. Contorno busto
3. Contorno cintura
4. Contorno cadera
5. Largo espalda
6. Largo manga
7. Contorno cuello
8. Largo lateral del pantalón
9. Largo talle delantero
10. Altura de pecho
11. Cont. de brazo

La talla para los vestidos, blusas, abrigos y chaquetas, se determina de acuerdo con el contorno del busto. Los pantalones y las faldas, de acuerdo con el contorno de las caderas.

En el patrón-Burda se incluyen los márgenes para la holgura necesaria.

4a

5a

6b

KEY TO SYMBOLS

LEGENDE

INTERPRETACION DE LOS SIMBOLOS



SYMBOL FOR STITCHING LINES
REMARQUE CONCERNANT LES LIGNES DE PIQUES
INDICACION PARA LINEAS DE PESPUENTE



SEAM ATTACHMENT POINT
POINT DE RACCORD DE LA COUTURE
PUNTO DE AJUSTE DE LA COSTURA



 
SEAM NUMBERS ARE MATCHING SYMBOLS AND DENOTE
WHERE TWO PIECES SHOULD BE SEWN TOGETHER.
LES CHIFFRES-REPERES INDIQUENT OU ASSEMBLER LES PIECES.
LES CHIFFRES IDENTIQUES COINCIDENT.
LOS NUMEROS DE COSTURA INDICAN DONDE LAS PIEZAS.
LOS MISMOS NUMEROS CONCIDEN.



GATHER BETWEEN THE STARS.
FRONCER ENTRE LES ASTERISQUES.
EMBEBER ENTRE LAS ESTRELLAS.



EASE IN BETWEEN THE DOTS.
SOUTENIR ENTRE LES POINTS.
EMBEBER ENTRE LOS PUNTOS.



POSITION PLEATS IN DIRECTION OF ARROW.
POSER LES PLIS DANS LE SENS DES FLECHES.
PONER LOS PLIEQUES SEGUN LA FLECHA.



SYMBOL INDICATING THE BEGINNING OR END OF VENT.
REPERE DE DEBUT OU DE FIN DE FENTE.
MARCA PARA EL PRINCIPIO O FINAL DE LA ABERTURA.




SLASH
FENTE
CORTE



BUTTONHOLE
BOUTONNIERE
OIAL



BUTTON OR SNAP
BOUTON OU BOUTON-PRESSION
BOTON O BROCHE DE PRESION

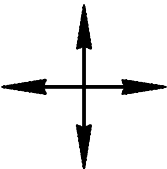



SEE CUTTING DIAGRAMS FOR STRAIGHT GRAIN OF FABRIC
SENS DU DROIT-FIL VOIR LES PLANS DE COUPE
DIRECCION DEL HILO, VEANSE PLANOS DE CORTE

5b

4b

5a

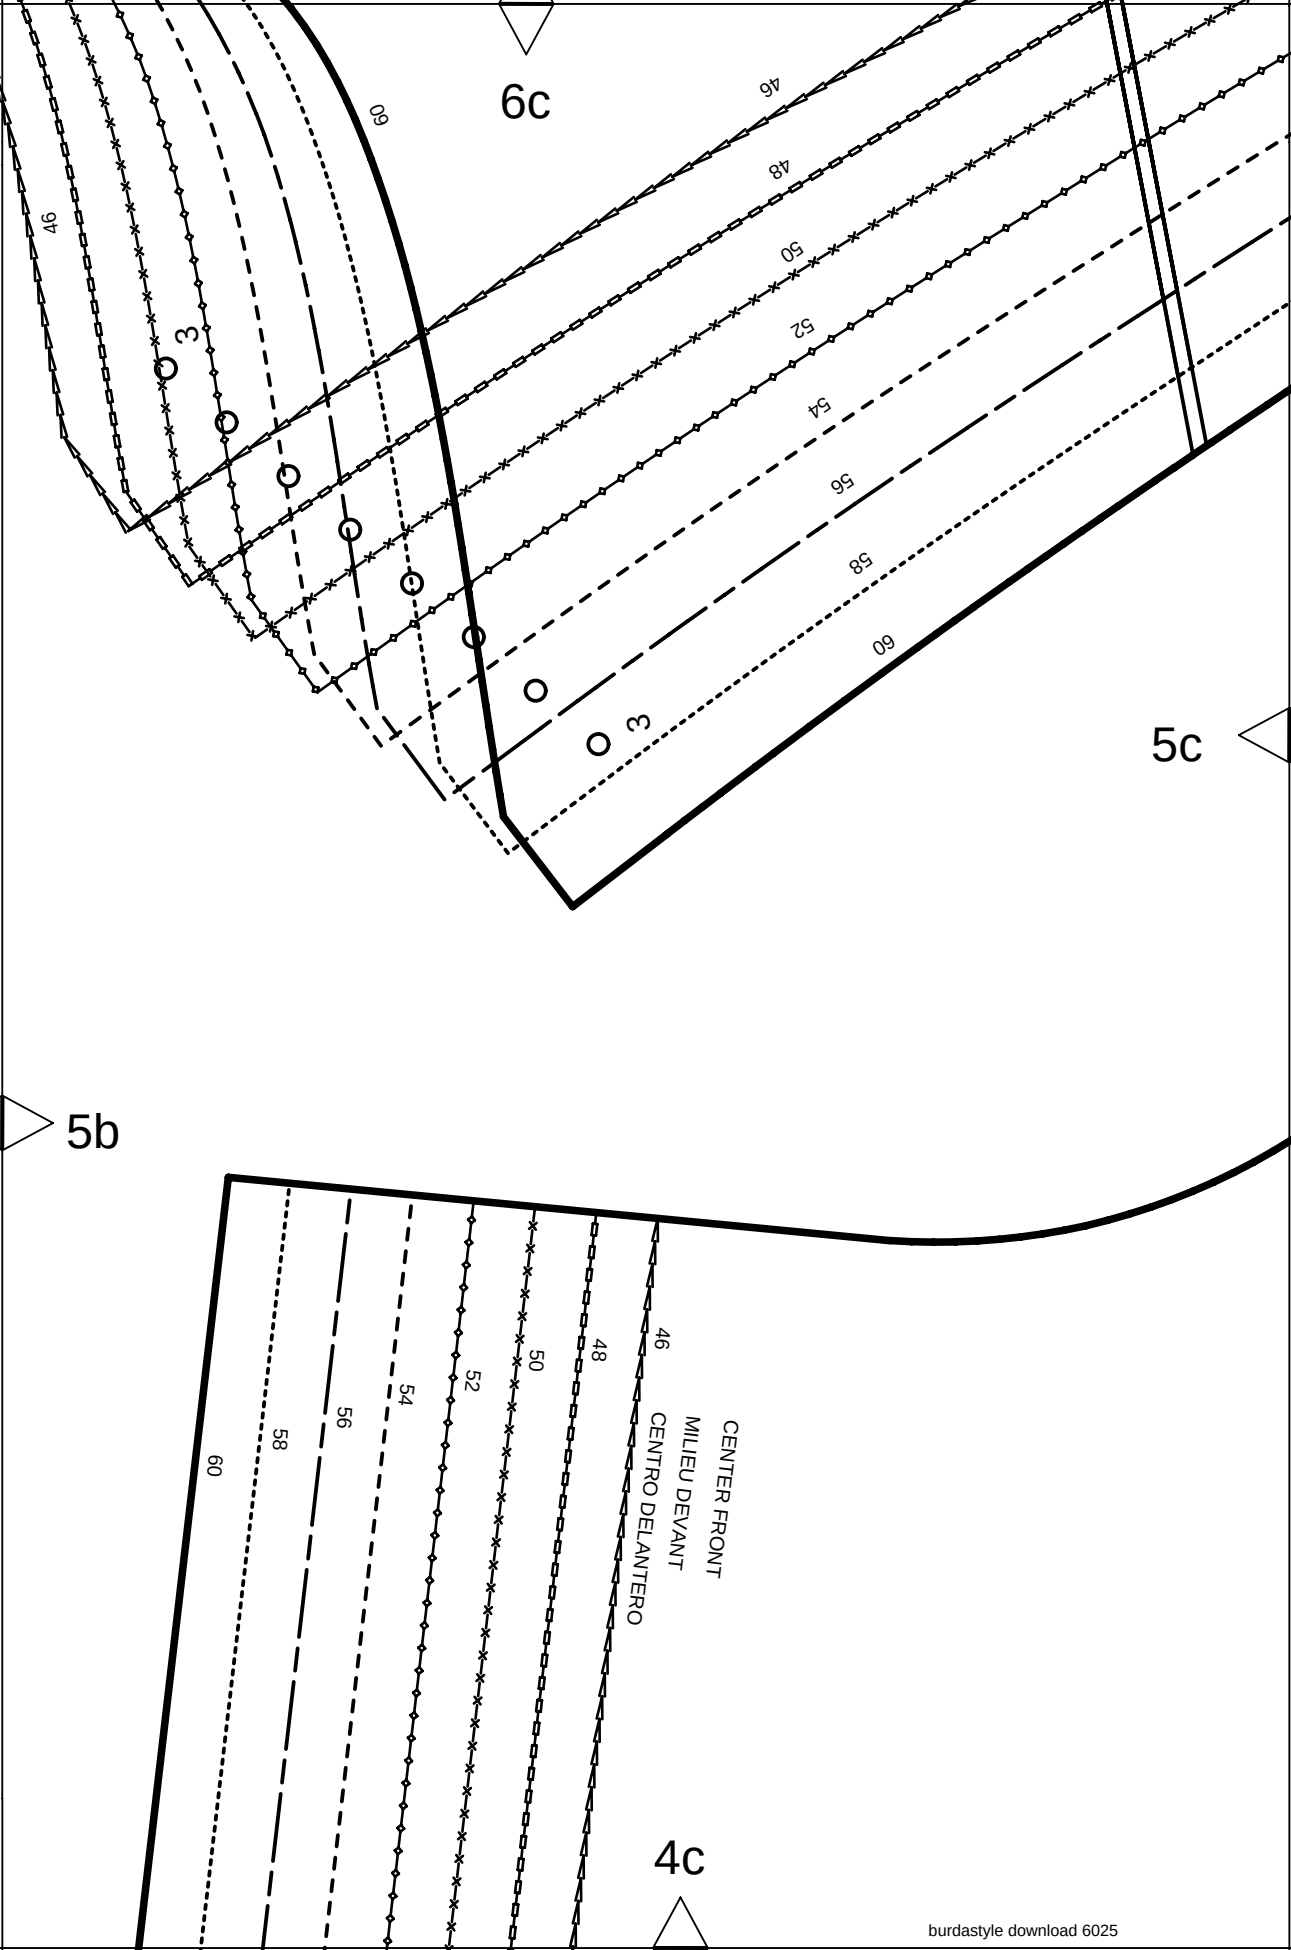

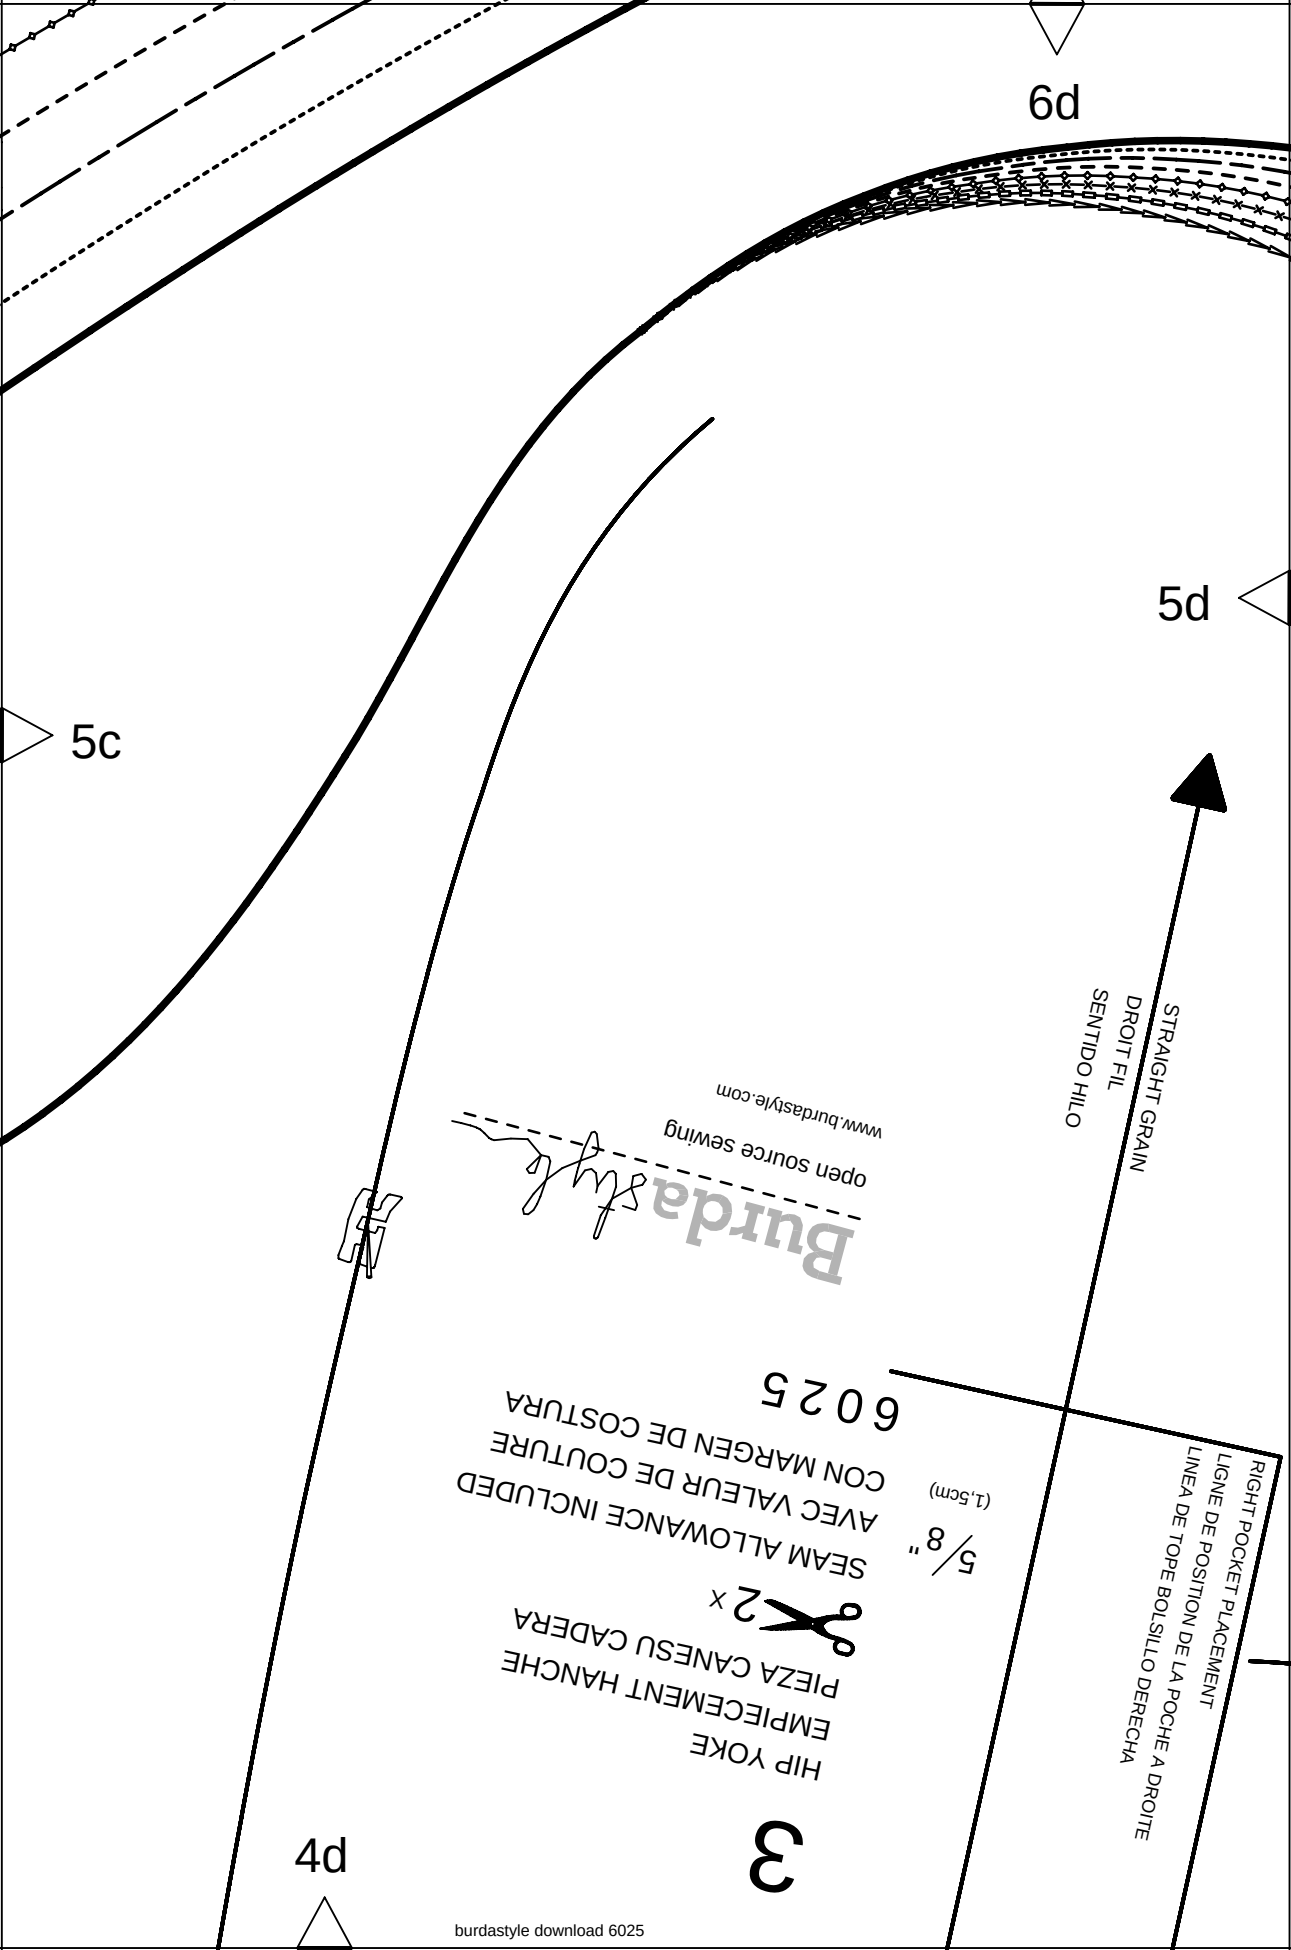

6d

5d

5c

4d

3

STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

RIGHT POCKET PLACEMENT
LIGNE DE POSITION DE LA POCHE A DROITE
LINEA DE TOPE BOLSILLO DERECHA

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA
6025
5/8" (1.5cm)
PIEZA CANESU CADERA
EMPIECEMENT HANCHE
HIP YOE
2x

Burda style
open source sewing
www.burdastyle.com

5e

4e

6e



5d

PLACEMENT
RACCORD
TOPE



6f



POCKET
POCHE
BOLSILLO



5/8"
(1,5cm)

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA


6025

46-60



5e

5f

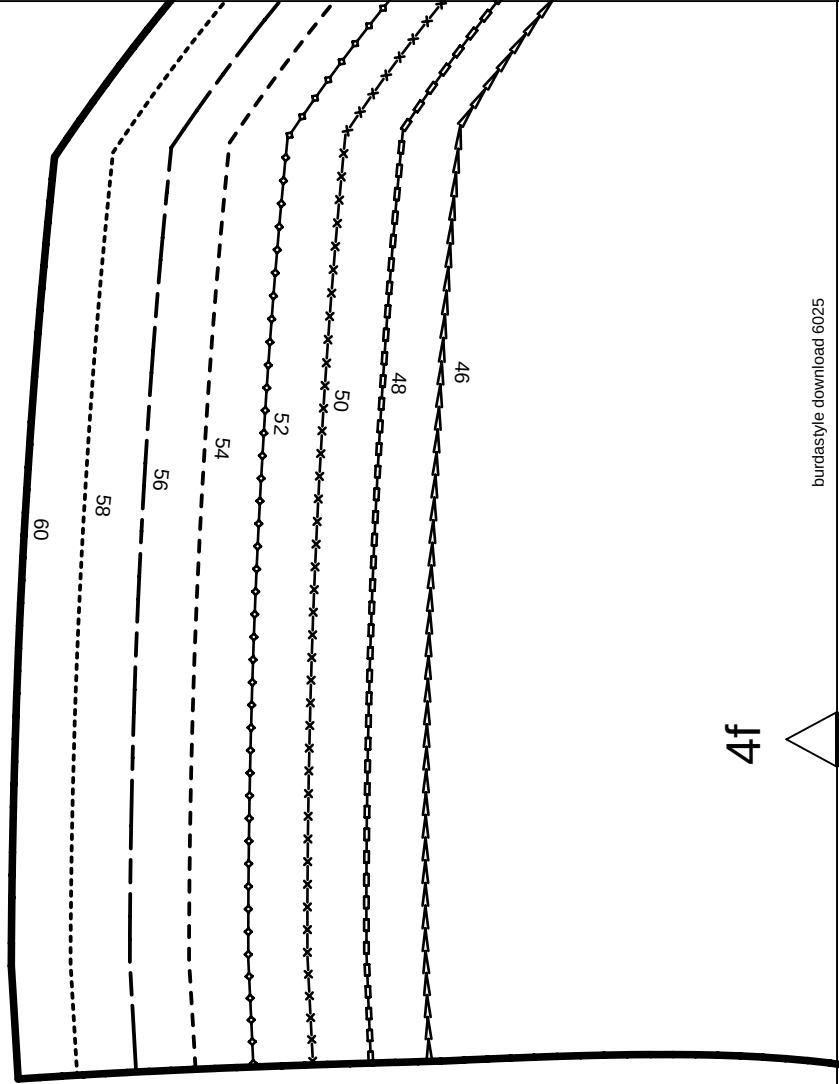

4f

6g

test square

side length

4 inches (10 cm)

5f


4g

8a

7a

POCKET PLACEMENT
LIGNE DE RACCORD POCHÉ
LINEA DE TOPE BOLSILLO

6a

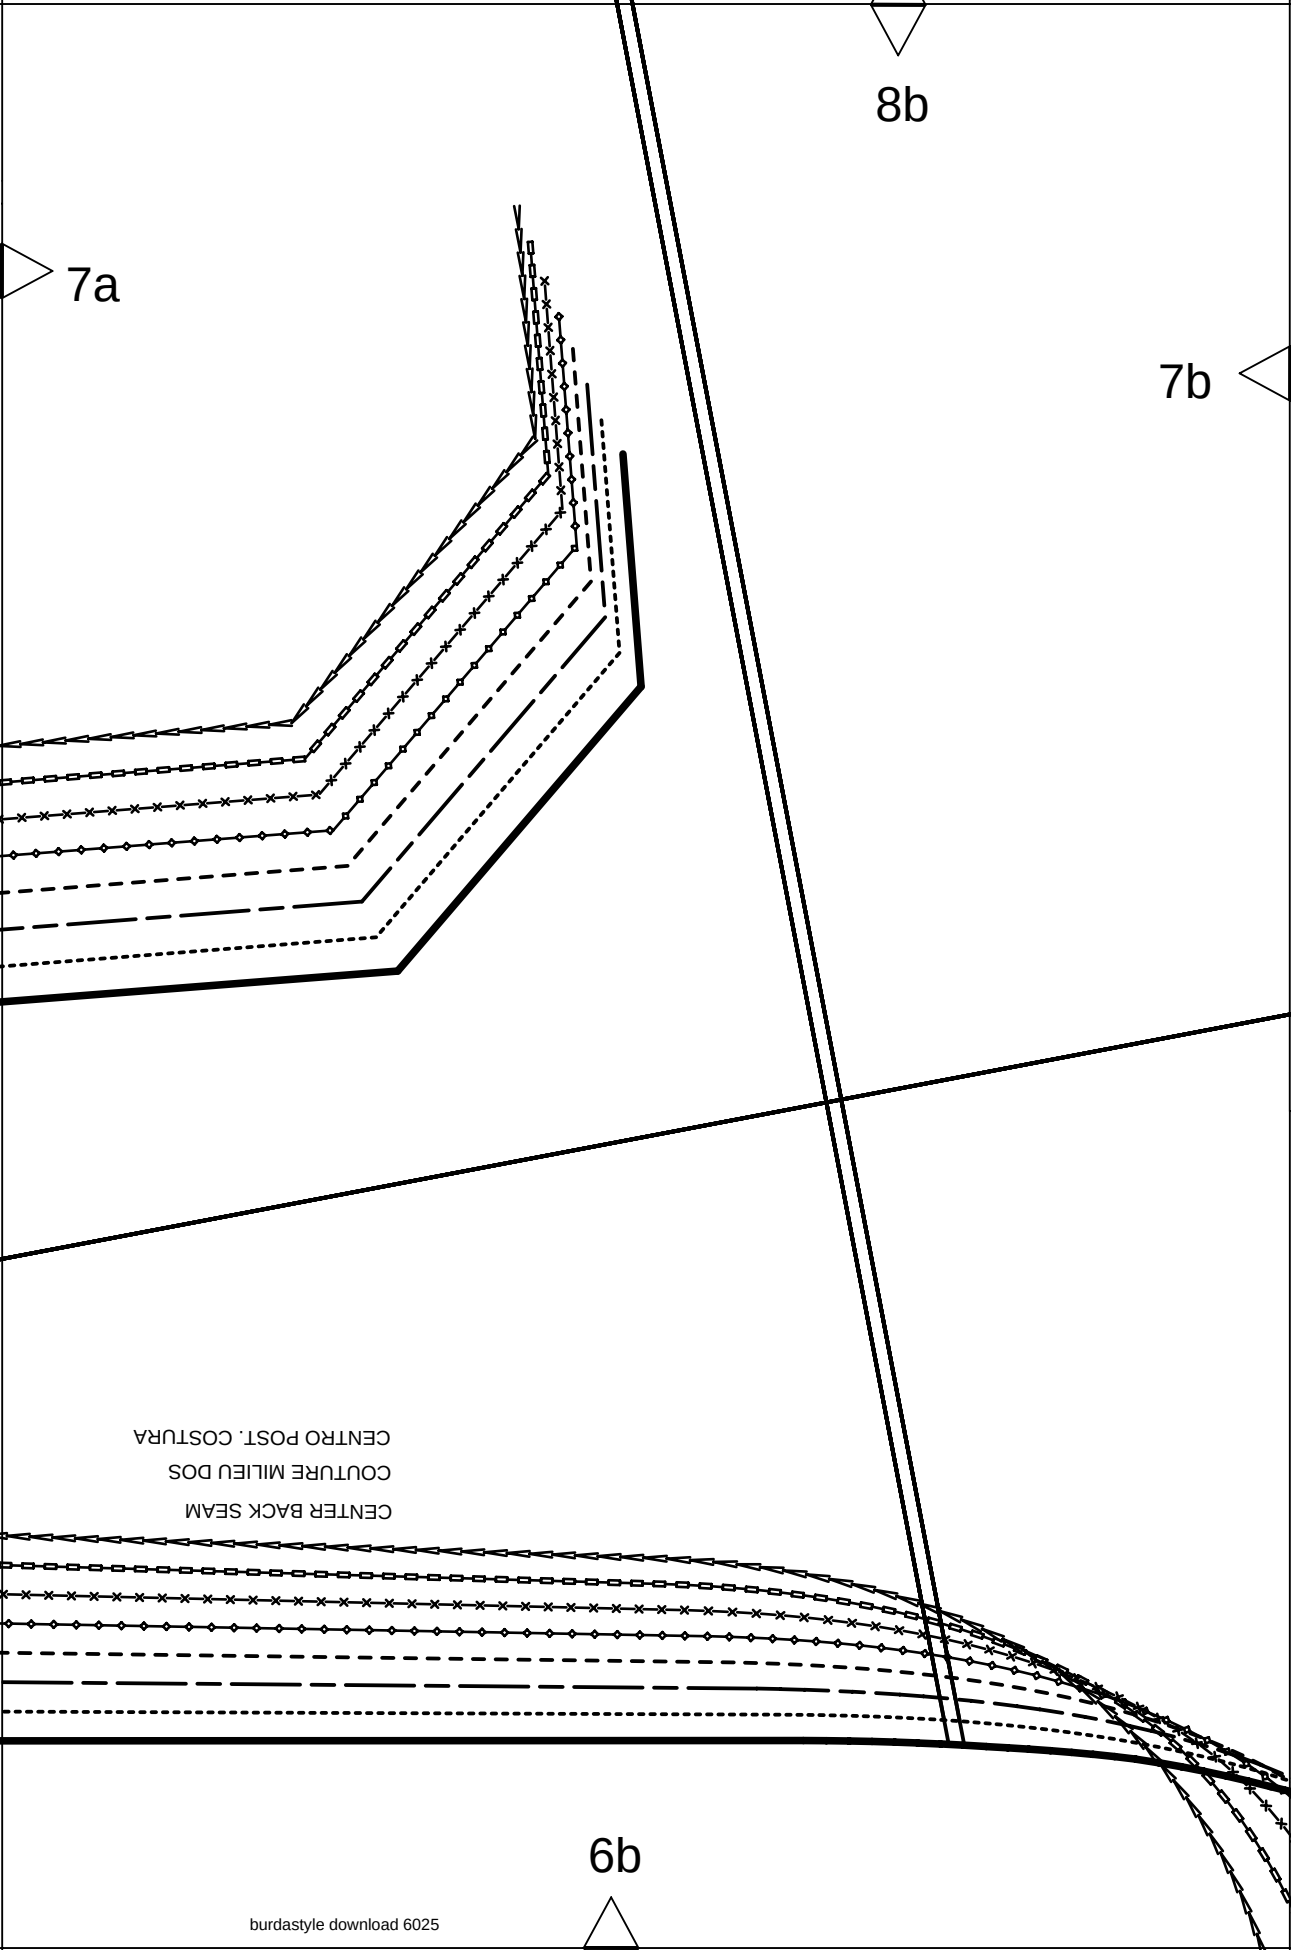

7a

8b

7b

6b

CENTER BACK SEAM
COUTURE MILIEU DOS
CENTRO POST. COSTURA

5

PANTS, BACK
DOS PANTALON/CULOTTE
DOS PANTALON POST.
PANTALON POST.



2 x

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

5/8"
(1.5cm)

6c

8c

7b

7c

Burda style

open source sewing

www.burdastyle.com


8d

STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

7d

7c

6d

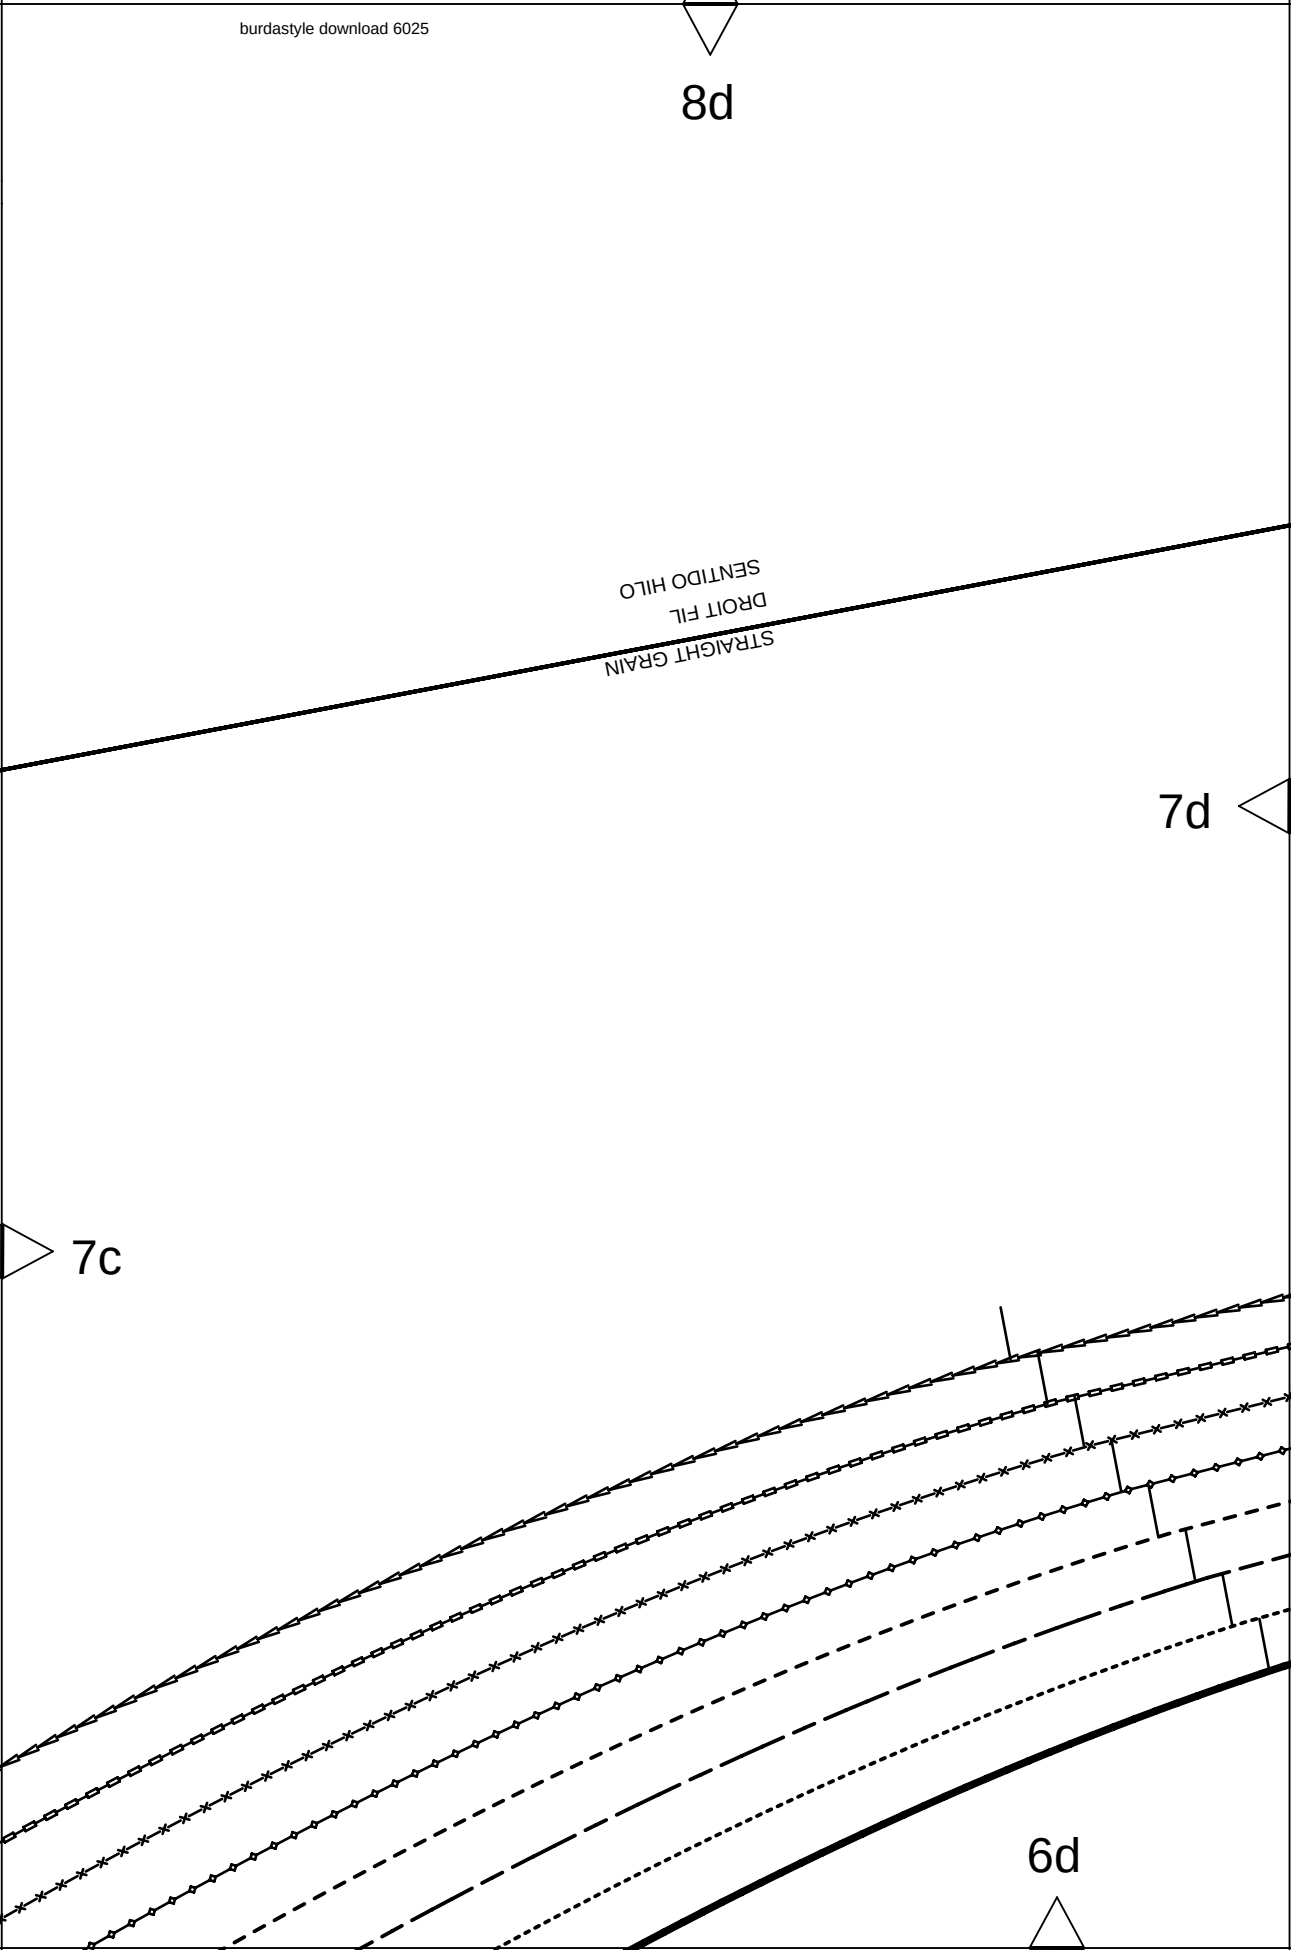


8e

7d

7e

6e

8f

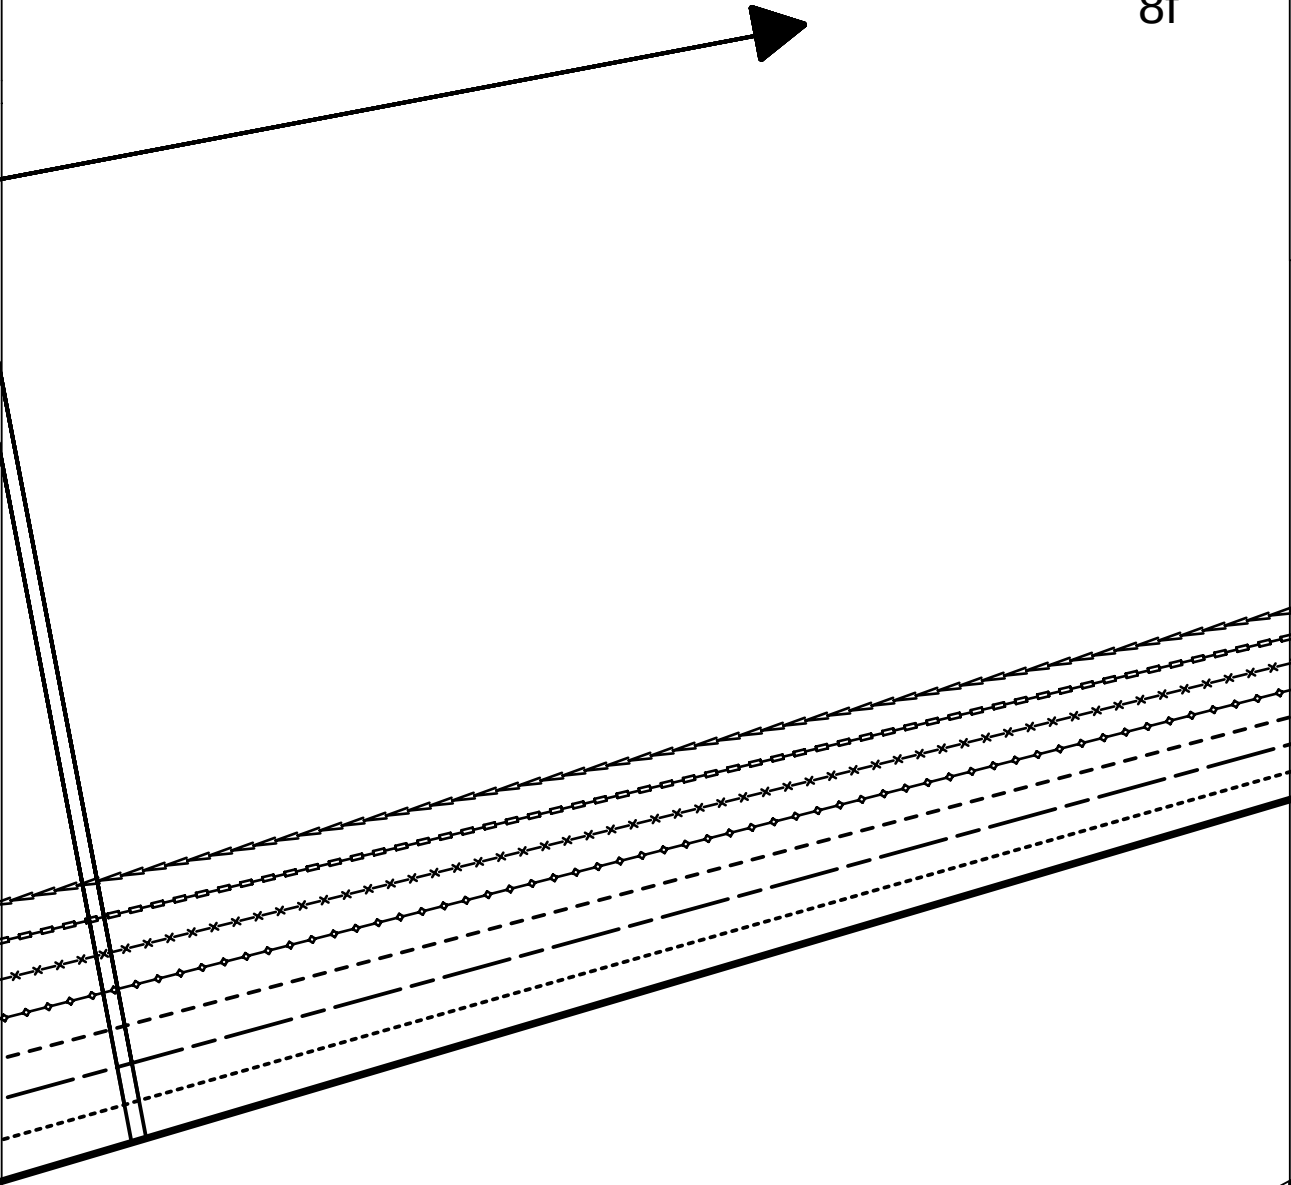

7f


STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

FACING FOLD
PAREMENTURE PLIURE
VISTA DOBLEZ

6f

7e

8g

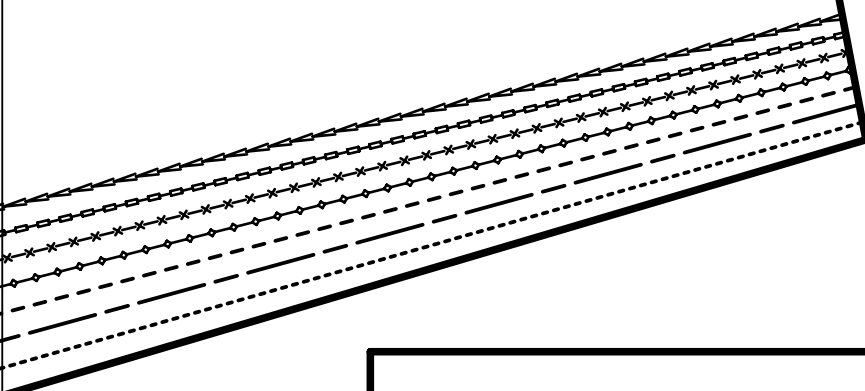

4

POCKET
POCHE
BOLSILLO



SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

5/8"
(1,5cm)

6025

46-60

Burda *style*

open source sewing



www.burdastyle.com

STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO



7f

6g

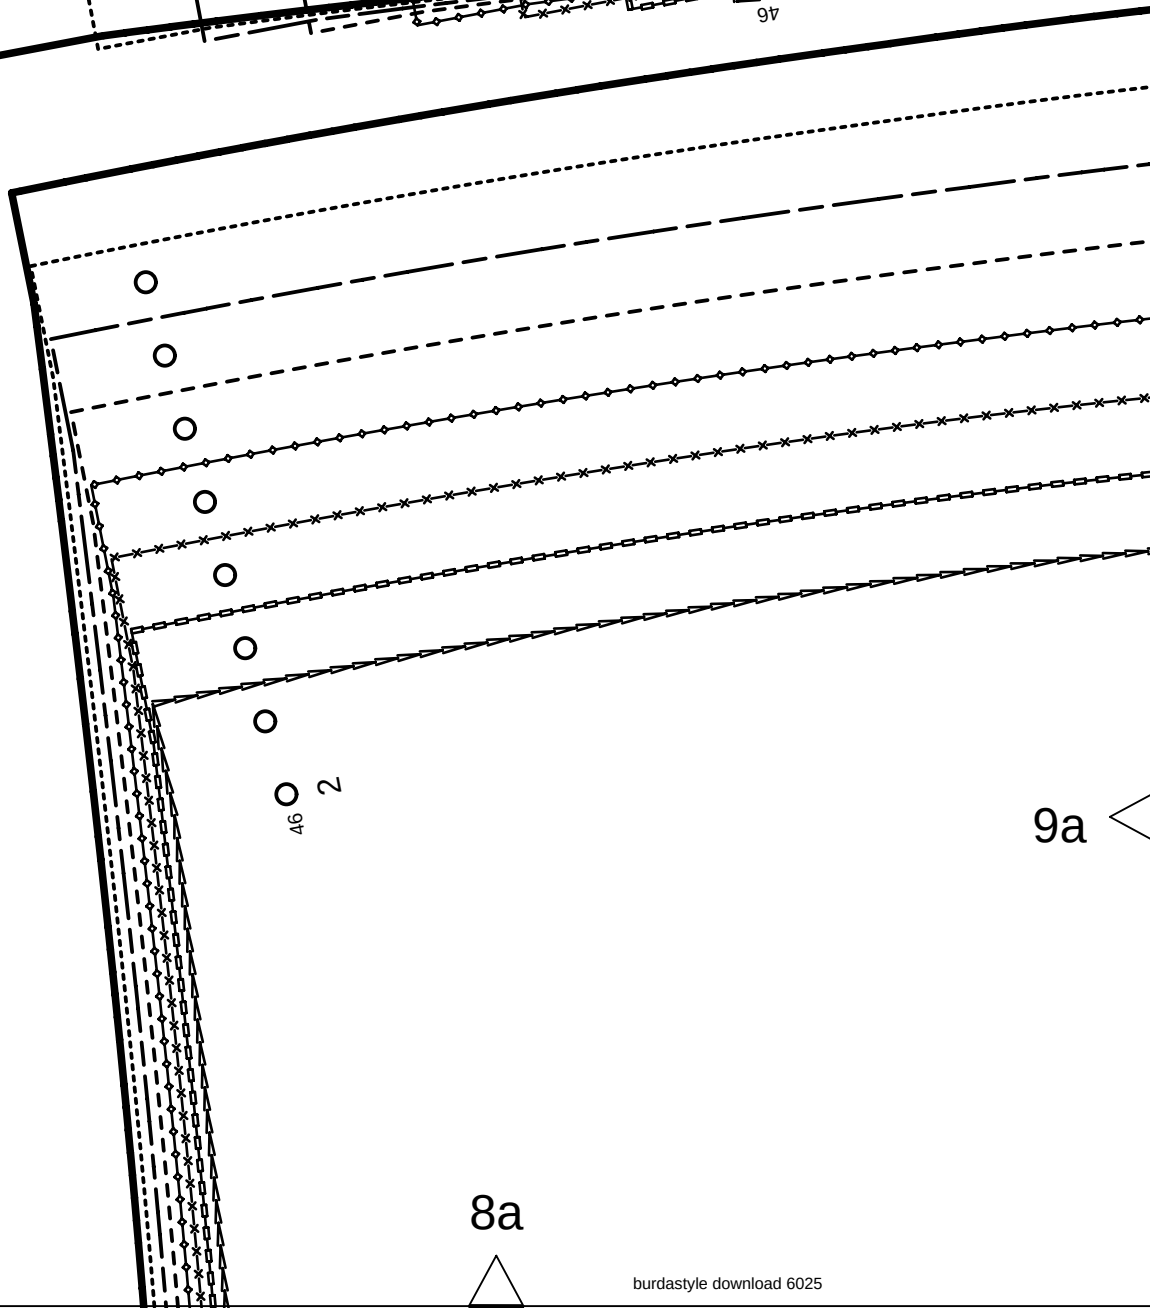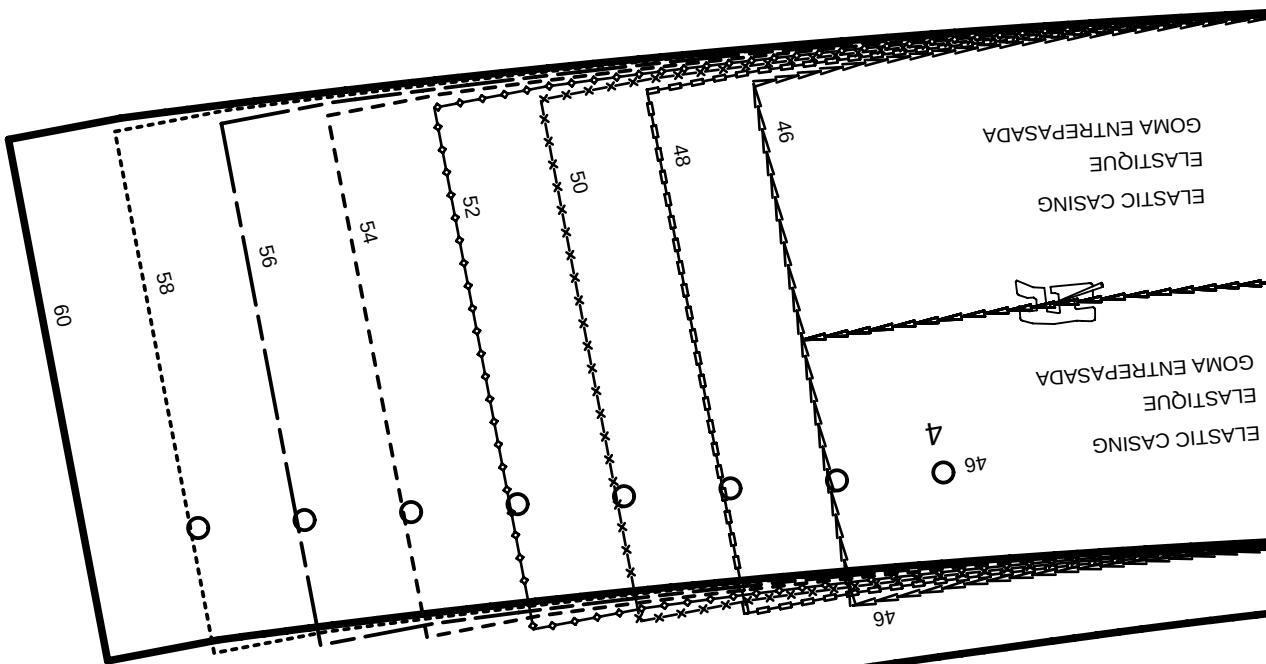

8a

9a

q8

LENGTHEN OR SHORTEN HERE
RALLONGER OU RACCOURCIR ICI
ALARGAR O ACORTAR AQUI

9a

q6

46

48

50

52

54

56

58

60



7

BACK WAISTBAND
CEINTURE DOS
PRETINA POST.



4 x

5/8"

(1,5cm)

SEAM ALLOWANCE INCLUDED
AVEC VALEUR DE COUTURE
CON MARGEN DE COSTURA

6025





STRAIGHT GRAIN
DROIT FIL
SENTIDO HILO

CENTER BACK SEAM
COUTURE MILIEU DOS
CENTRO POST. COSTURA

Burdastyle

open source sewing

www.burdastyle.com

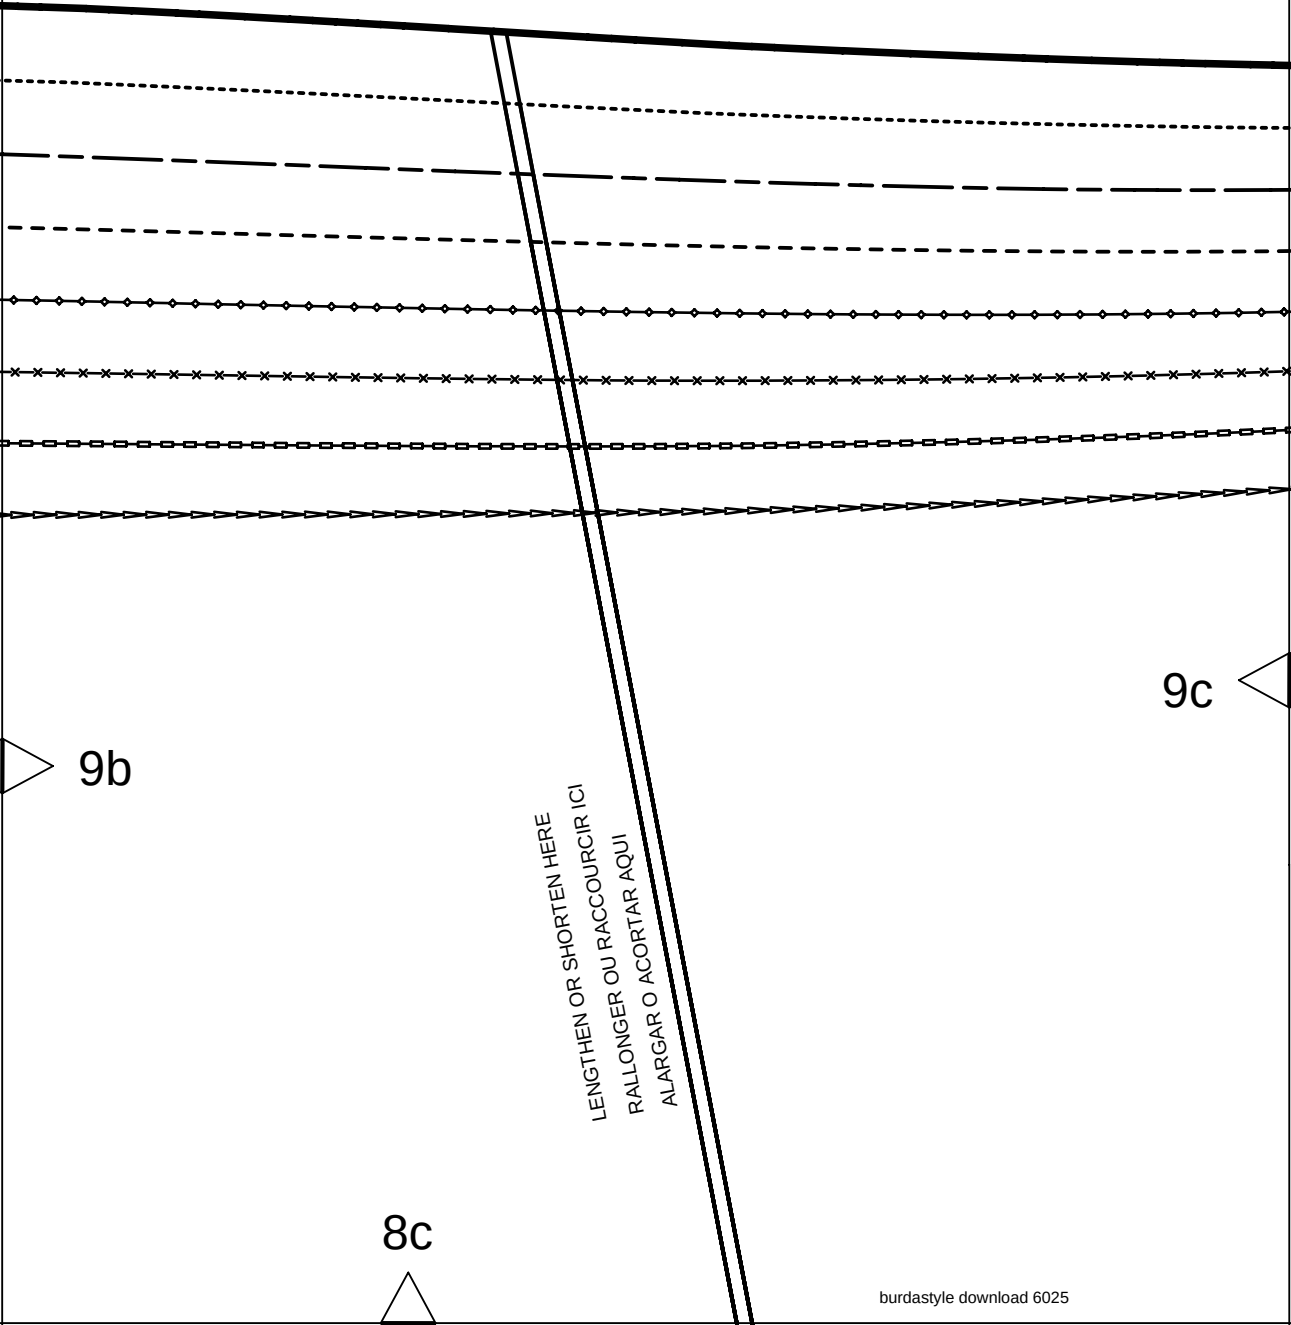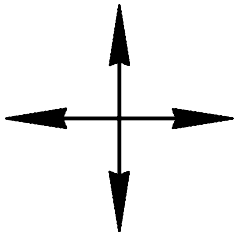

9b

9c


8c

LENGTHEN OR SHORTEN HERE
RALLONGER OU RACCOURCIR ICI
ALARGAR O ACORTAR AQUI

9 ✂ 1x

6025

46-60

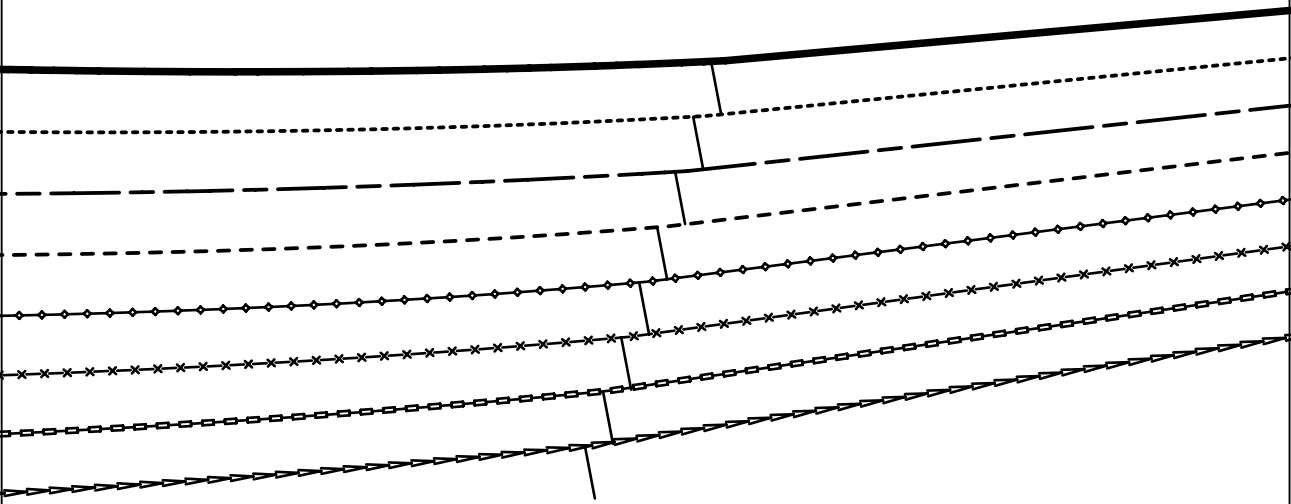

9c

9d




8d




Burda^{style}

open source sewing


www.burdastyle.com

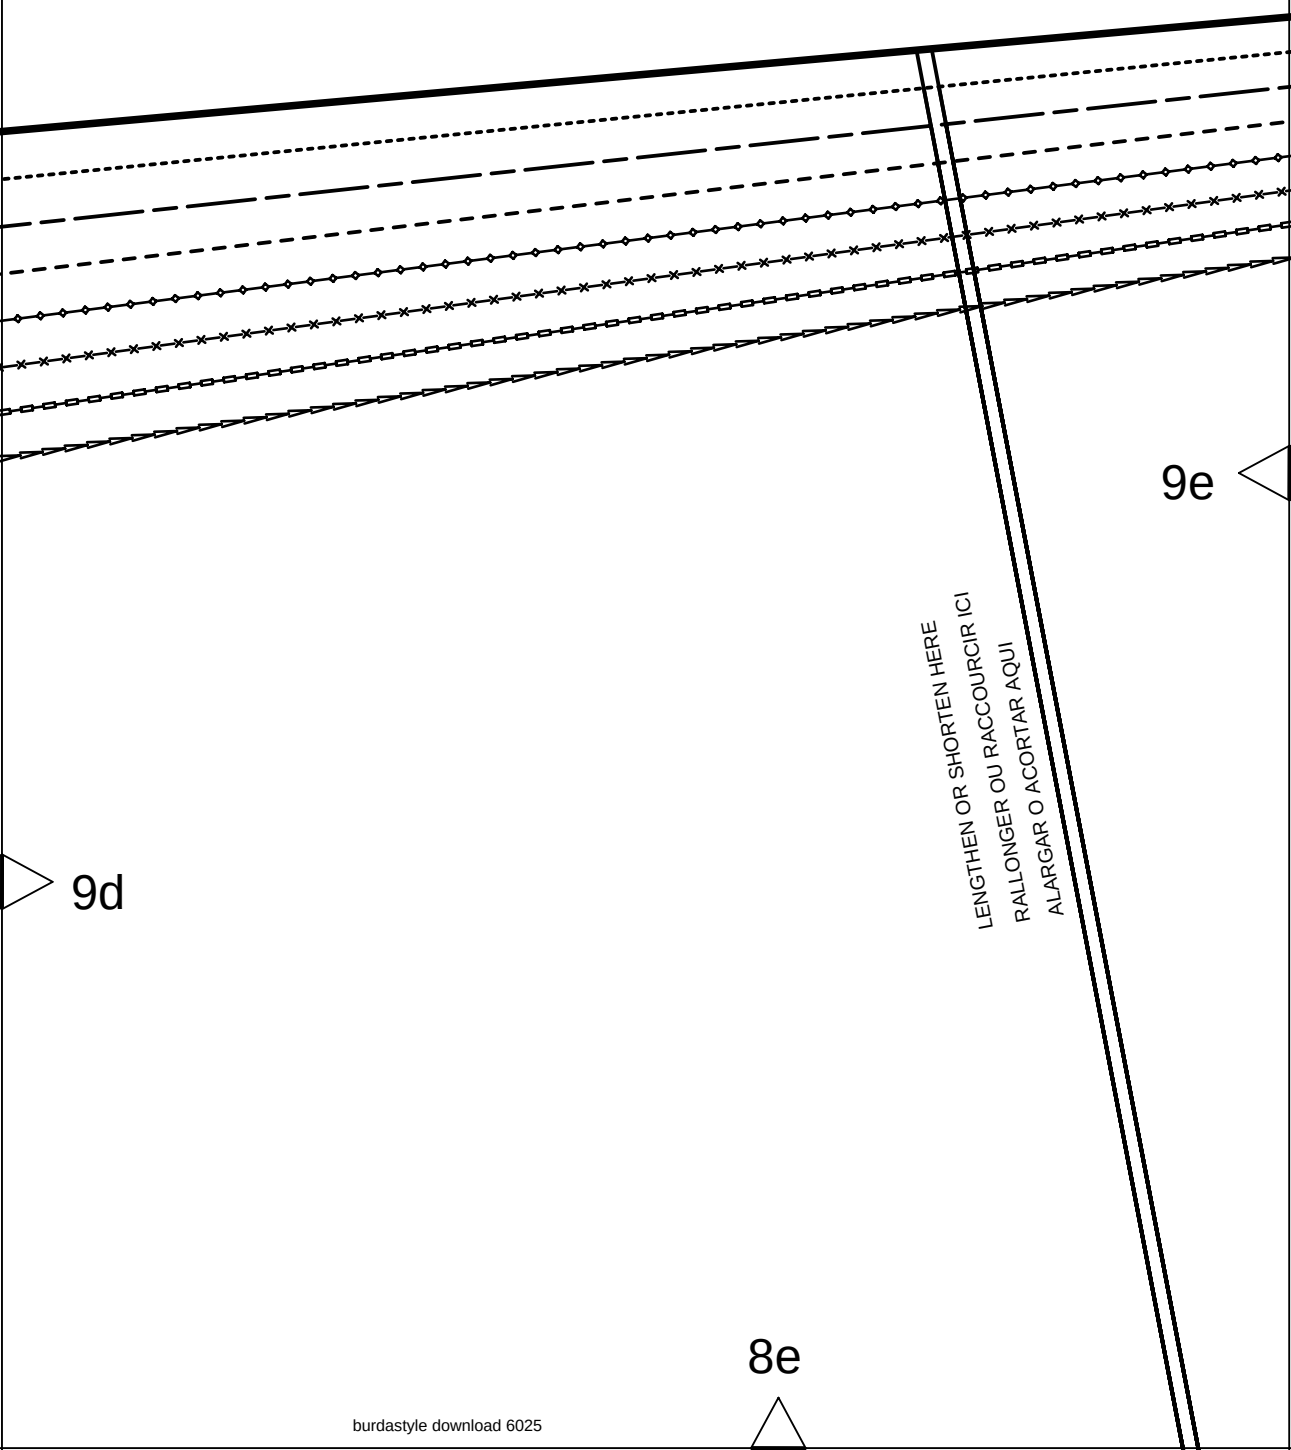

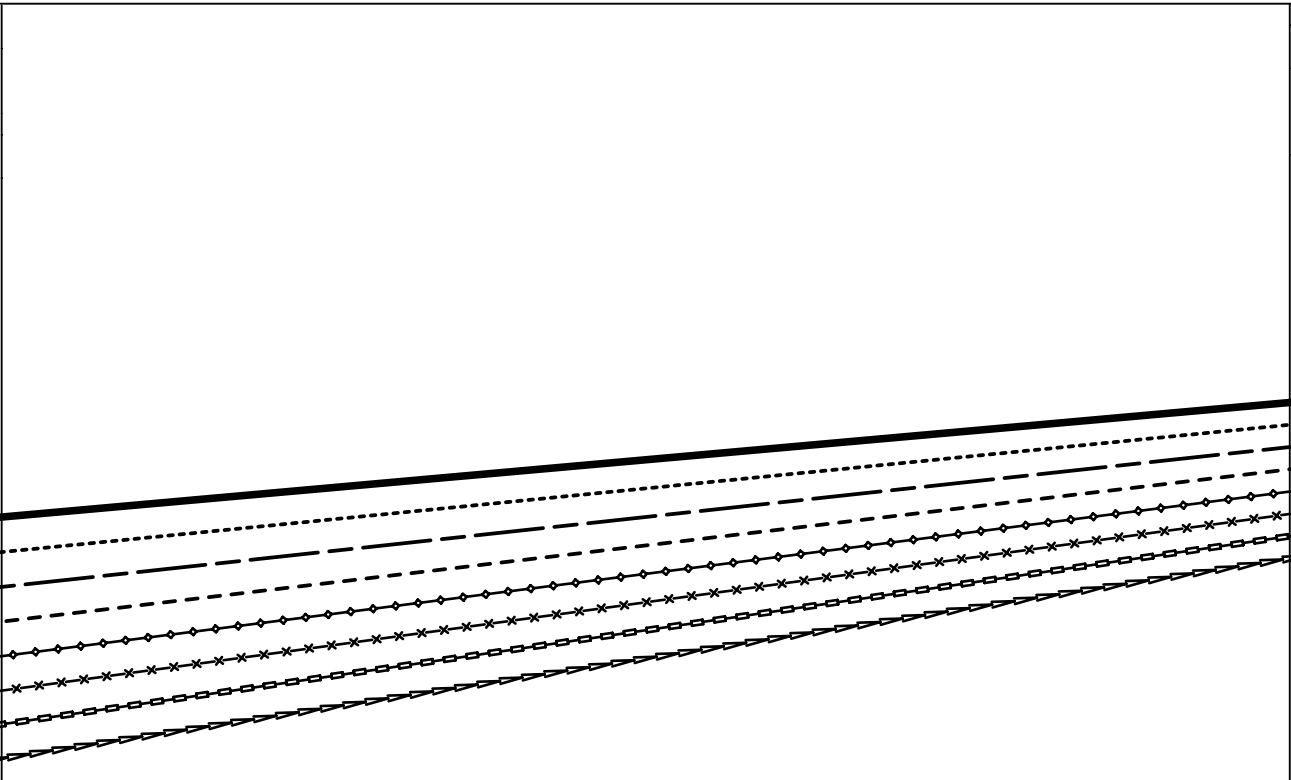

9e 9f

8f

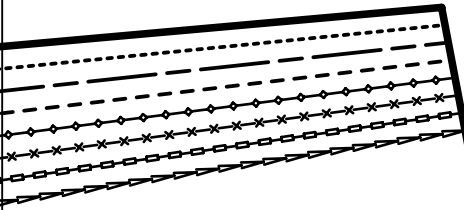

9f




8g




PATTERN LAYOUTS
PLANS DE COUPE
PLANOS DE CORTE

55" 140 CM

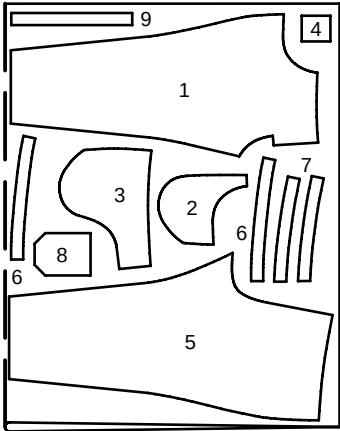

50-60

55" 140 CM

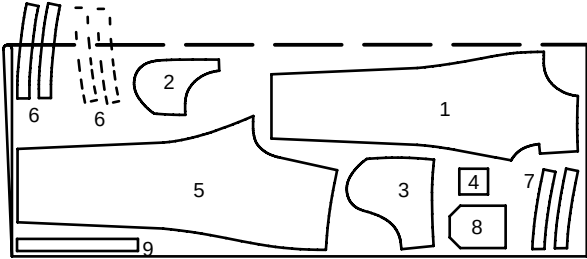

46+48