

Alamo Tote



capsules
by AGF


Alamo Tote

QUILT DESIGNED BY AGF STUDIO *AGFstudio*



ALIGNED


FABRICS DESIGNED BY AGF STUDIO

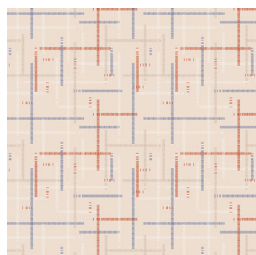


CAP-A-7000
INTERCONNECTED




CAP-A-7001
SLANTED

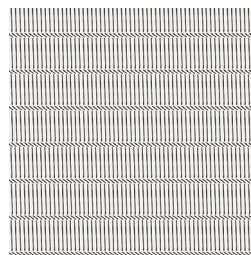


CAP-A-7002
HYPHENATED

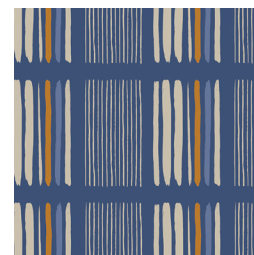

CAP-A-7003
LINEUP

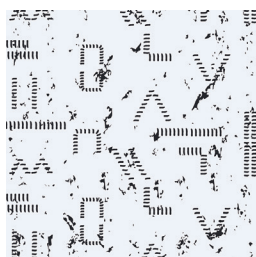

CAP-A-7004
DIVIDED

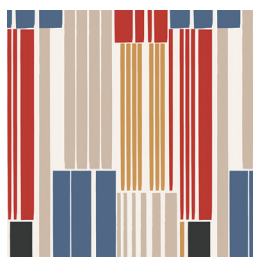


CAP-A-7005
ON LINES




CAP-A-7006
PARALLEL



CAP-A-7007
LINKED

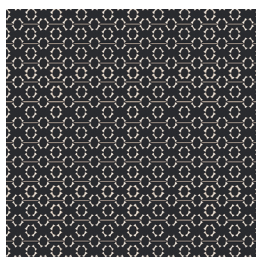

CAP-A-7008
DASH-ING

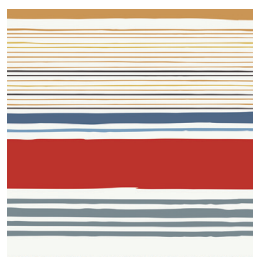

CAP-A-7009
LINE STUDY



FEEL THE DIFFERENCE © 2017 Courtesy of Art Gallery Quilts LLC. All Rights Reserved.



FINISHED SIZE | 19" x 15"

FABRIC REQUIREMENTS

Fabric A	CAP-A-7004	1/3yd.
Fabric B	CAP-A-7006	FE.
Fabric C	PE-408	FQ.
Fabric D	PE-413	1 yd.
Fabric E	PE-459	7/8yd.

Lining FABRIC
CAP-A-7004 1/2yd. *(Suggested)*

CUTTING DIRECTIONS

1/4" seam allowances are included.
WOF means width of fabric.

- Fabric **A**:
- Two (2) 3 1/2" x 11 1/2" strips
- Two (2) 6 1/2" squares
- Six (6) 6 1/2" x 4 1/2" rectangles
- Cut two (2) template 1 (lining)
- Fabric **B**:
- Two (2) 2 1/2" x 13 1/2" strips
- Two (2) 2 1/2" x 11 1/2" strips
- Two (2) 3 1/2" x 4 1/2" strips
- Fabric **C**:
- Four (2) 4 1/2" squares
- One (1) 4 7/8 square
- Two (2) 2 x 19 .5" strips
- Fabric **D**:
- Two (2) 2 x 19 1/2" strips
- Two (2) 8 1/2 x 3 1/2" strips
- Four (4) 3 1/2 x 4 1/2" strips
- Two (2) 4 1/2" squares

XX

- One (1) 4 7/8" squares
- Two (2) 1 1/2" x WOF strips for handles
- Fabric **E**:
- Two (2) 2 1/2" 8 1/2" strips
- Two (2) 4 1/2" squares
- Two (2) 3 1/2" x 4 1/2" strips
- One (1) 9 1/2" x 5 1/2" rectangle (drop in pocket)

CONSTRUCTION

Sew all rights sides together with 1/4" seam allowance.

- You will create different fabric combinations using the Half Square Triangle (HST) technique.
- Use fabrics **C & D** 4 7/8" in squares you previously cut.
- Place them face to face.
- Draw a diagonal line on from corner to corner.

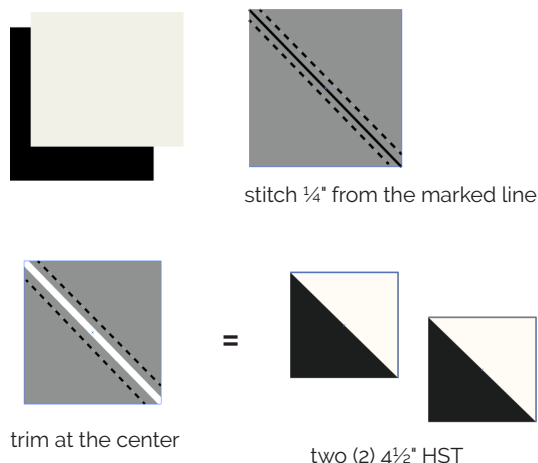


DIAGRAM 1

- To create the next fabric combinations use the diagram below for proper fabric placement and attachment.



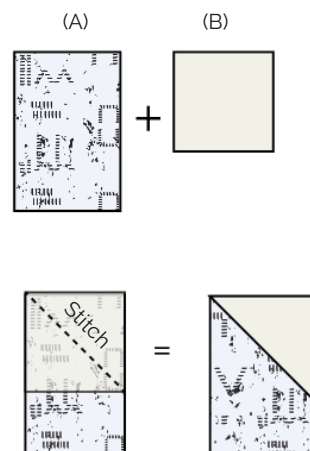


DIAGRAM 2


- Two (2) Fabric **A** 4½" x 6½" & fabric **C** 4 ½" square

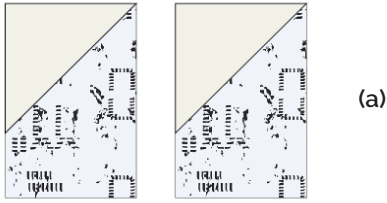

- Two (2) Fabric **A** 4½" x 6½" & fabric **D** 4 ½" square

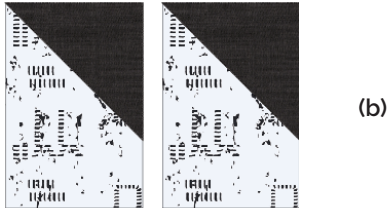

- Two (2) Fabric **A** 6½" squares & fabric **D** 3 ½ x 4 ½".

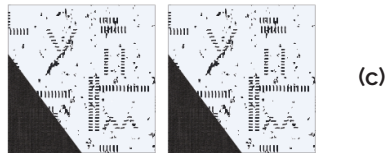

- Two (2) Fabric **D** 3½" x 8½" strip & fabric **E** 3½" x 4½" strip



- Once you are done with all the fabric combinations, you will create a pieced block using all fabrics.
- Don't stress! Refer to the last page for proper fabric placement and attachment.
- Your fabric block should be approximately 18 x 19" in.
- Use template **1** pattern (find it below in the last part of this instructions) to properly cut the shape of your oversized tote bag.
- You will repeat the same block assembly for the two sides of the bag.
- Quilt if desired. We added diagonal lines with white thread to add a little of contrast. But as always you can get creative with stitch and color combinations when quilting!
- You should have two pieces looking like this:

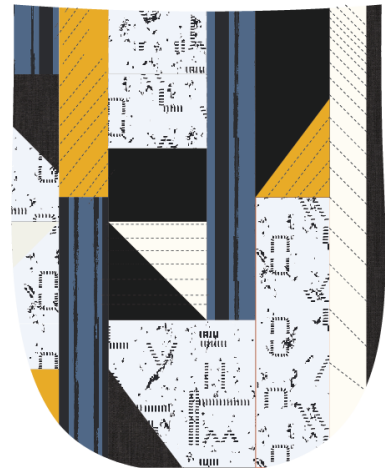


DIAGRAM 3

- Attach them right side facing together.

LINING & DROP IN POCKET

Sew rights sides together.

- Use the top template **1** pieces from fabric **A** and fabric **E** $9\frac{1}{2}'' \times 5\frac{1}{2}''$ rectangle.
- **Drop in pocket:**
- Take the $9\frac{1}{2}'' \times 5\frac{1}{2}''$ Fabric **E** piece and place it on top of one piece of your lining fabric.
- Take the edges of Fabric **E** and fold them in and stitch right on the edge leaving the top part unsewn
- Stitch on the middle or more to your right or left in order to create your drop-in pockets.
- If you want, create a contrasting color binding detail on the top part of your pocket.
- If you desire, create a quilting motif on the pocket.
- Refer to the diagram below to see how the inside should look.


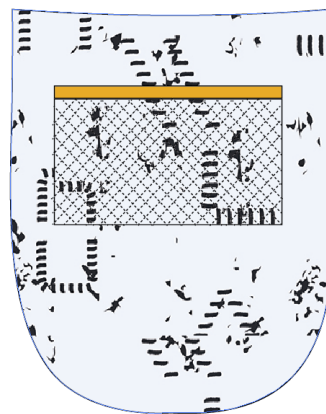



DIAGRAM 4

- Attach fabric **A** pieces right sides facing together.

- Creating the handles
- Use fabric **D** 3' x WOF fabric strip.
- Fold the strip in half and trim (20 - 21" in)
- Fold both long sides of your strip into the center of your strip and then fold in half. Press and top stitch both sides of your strap at 1/4".

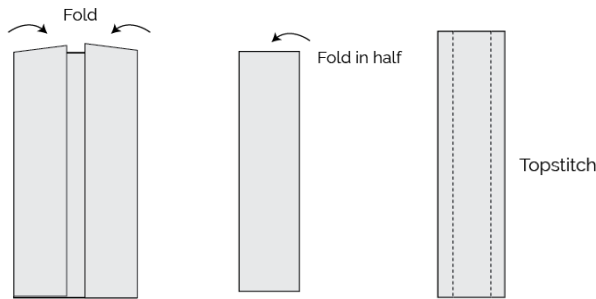

- Stitch handles 1/2" facing the right side of the bag.

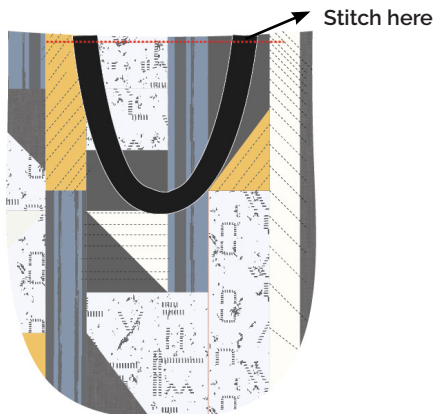

BAG ASSEMBLY

Sew rights sides together.

- Place bag body (exterior) inside lining, right sides together. Align side seams. Pin lining to exterior.
- Stitch lining to exterior all the way around top of pack opening.
- Make sure to keep side seams aligned and seam allowances open as they are stitched.
- Press seam allowances open all the way around the top of the pack.
- leave a 3' in hole to flip you bag.
- Turn backpack right side out through the hole and top stitch or hand stitch to assure a clean finish.
- Place the lining back inside the exterior, and press the lining/ exterior attachment around the cab from the right side.
- You are finally done! Enjoy your new stylish bag!



FEEL THE DIFFERENCE

artgalleryfabrics.com



NOTE: While all possible care has been taken to ensure the accuracy of this pattern, We are not responsible for printing errors or the way in which individual work varies. Please read instructions carefully before starting the construction of this quilt. If desired, wash and iron your fabrics before starting to cut.


© 2017 Courtesy of Art Gallery Quilts LLC. All Rights Reserved.



Body block




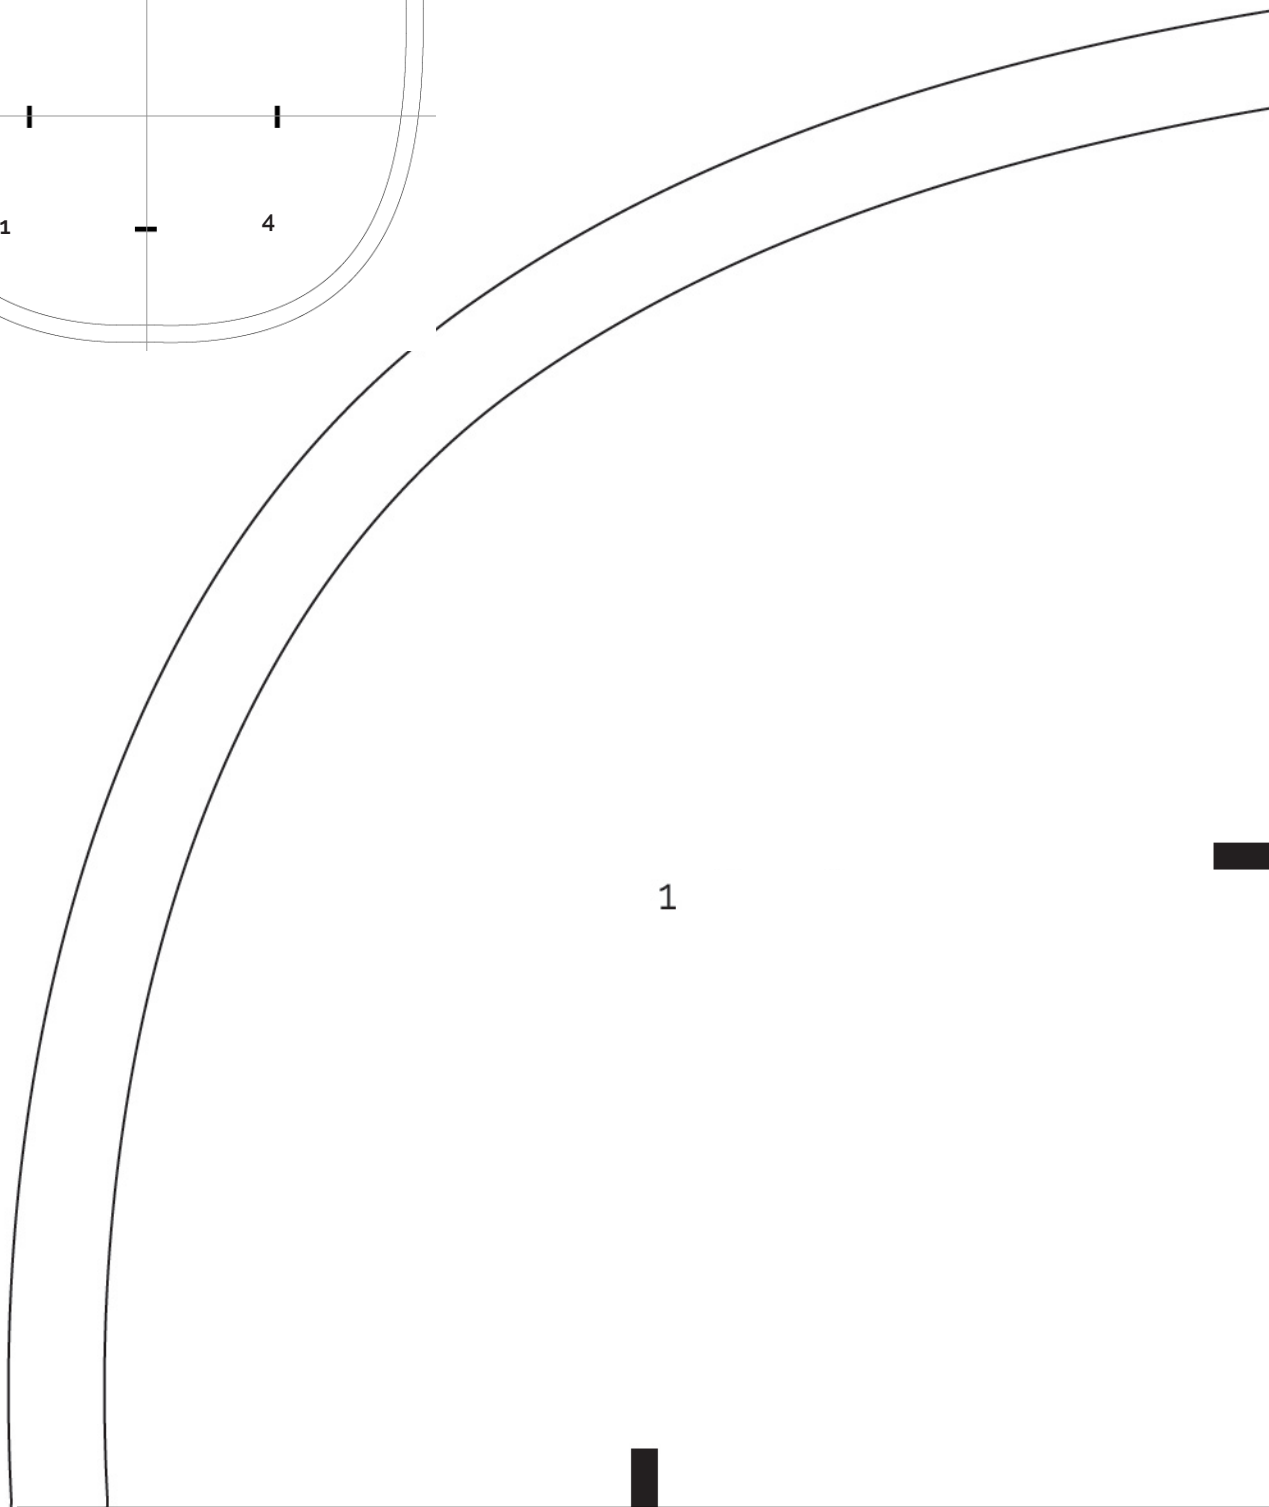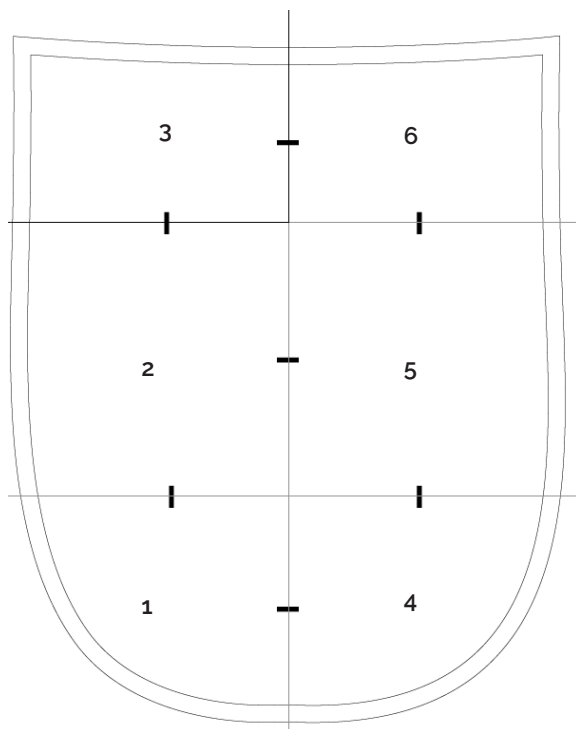

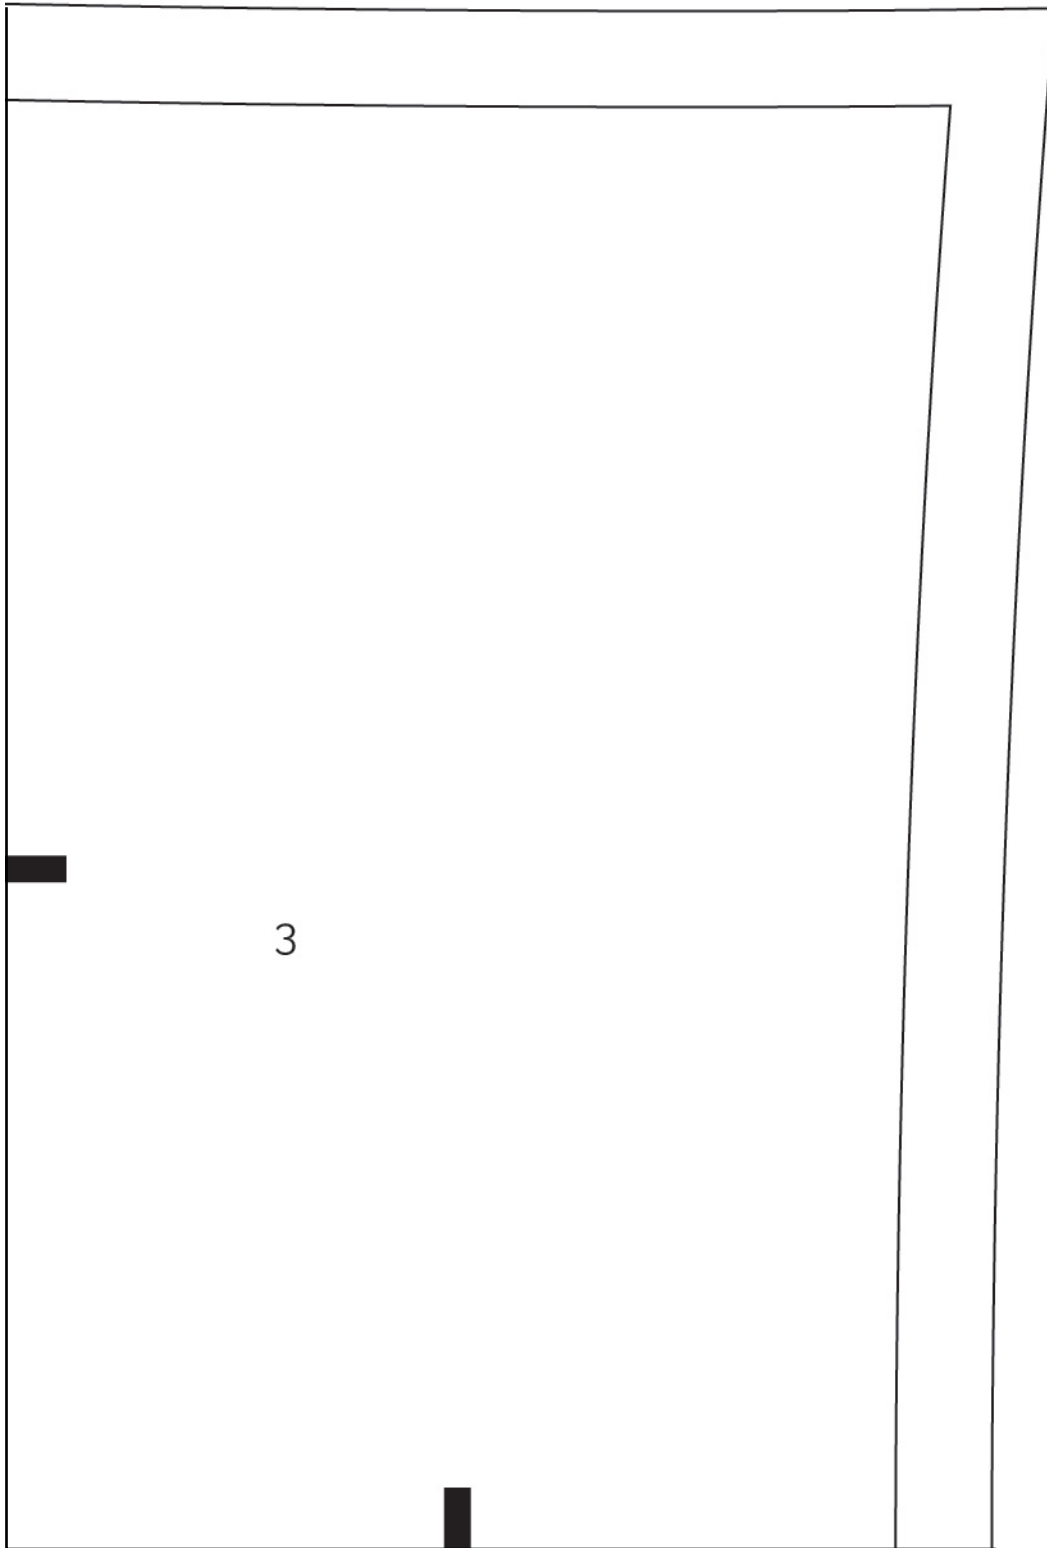



5

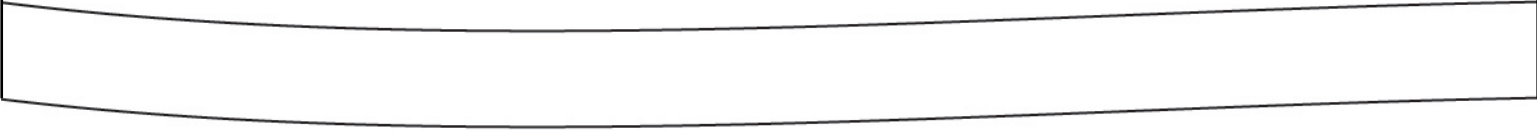

artgalleryfabrics.com

