


SKILL LEVEL



ADVANCED
BEGINNER

multisized
pattern...sizes
6/8/10/12/14/16
/18/20/22/24/26
all together!


*www.hotpatterns.com*tm
patterns so hot they're smokin'...

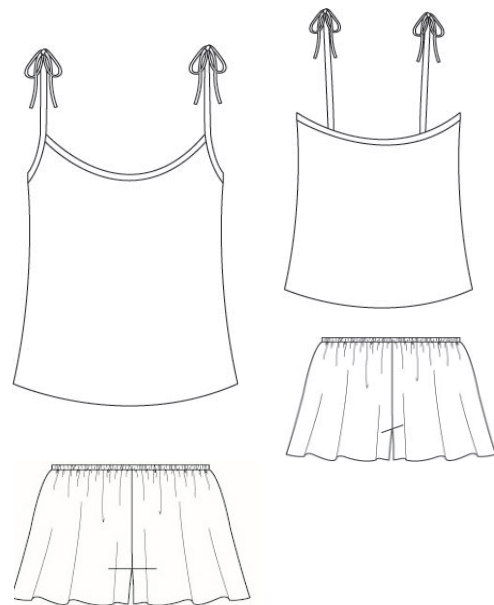

Ooh la la! Pretty, sexy and totally gorgeous, this super-sweet two-some is perfect for fabrics like charmeuse, crepe de chine, double georgette or even-daringly!-sheer chiffon. Semi-fitted Cami has a scooped front neckline, a low back neckline and a gently curved hemline. Cami is finished with narrow self fabric bias binding, extending into ties at the shoulder. Pull-on Tap Pants are gently flared, with an elasticated waist and a narrow hem.

Wear this boudoir essential with nothing more than a spritz of your favorite scent!

HotPattern & fabric.com exclusive download
Cupid Cami & Tap Pants

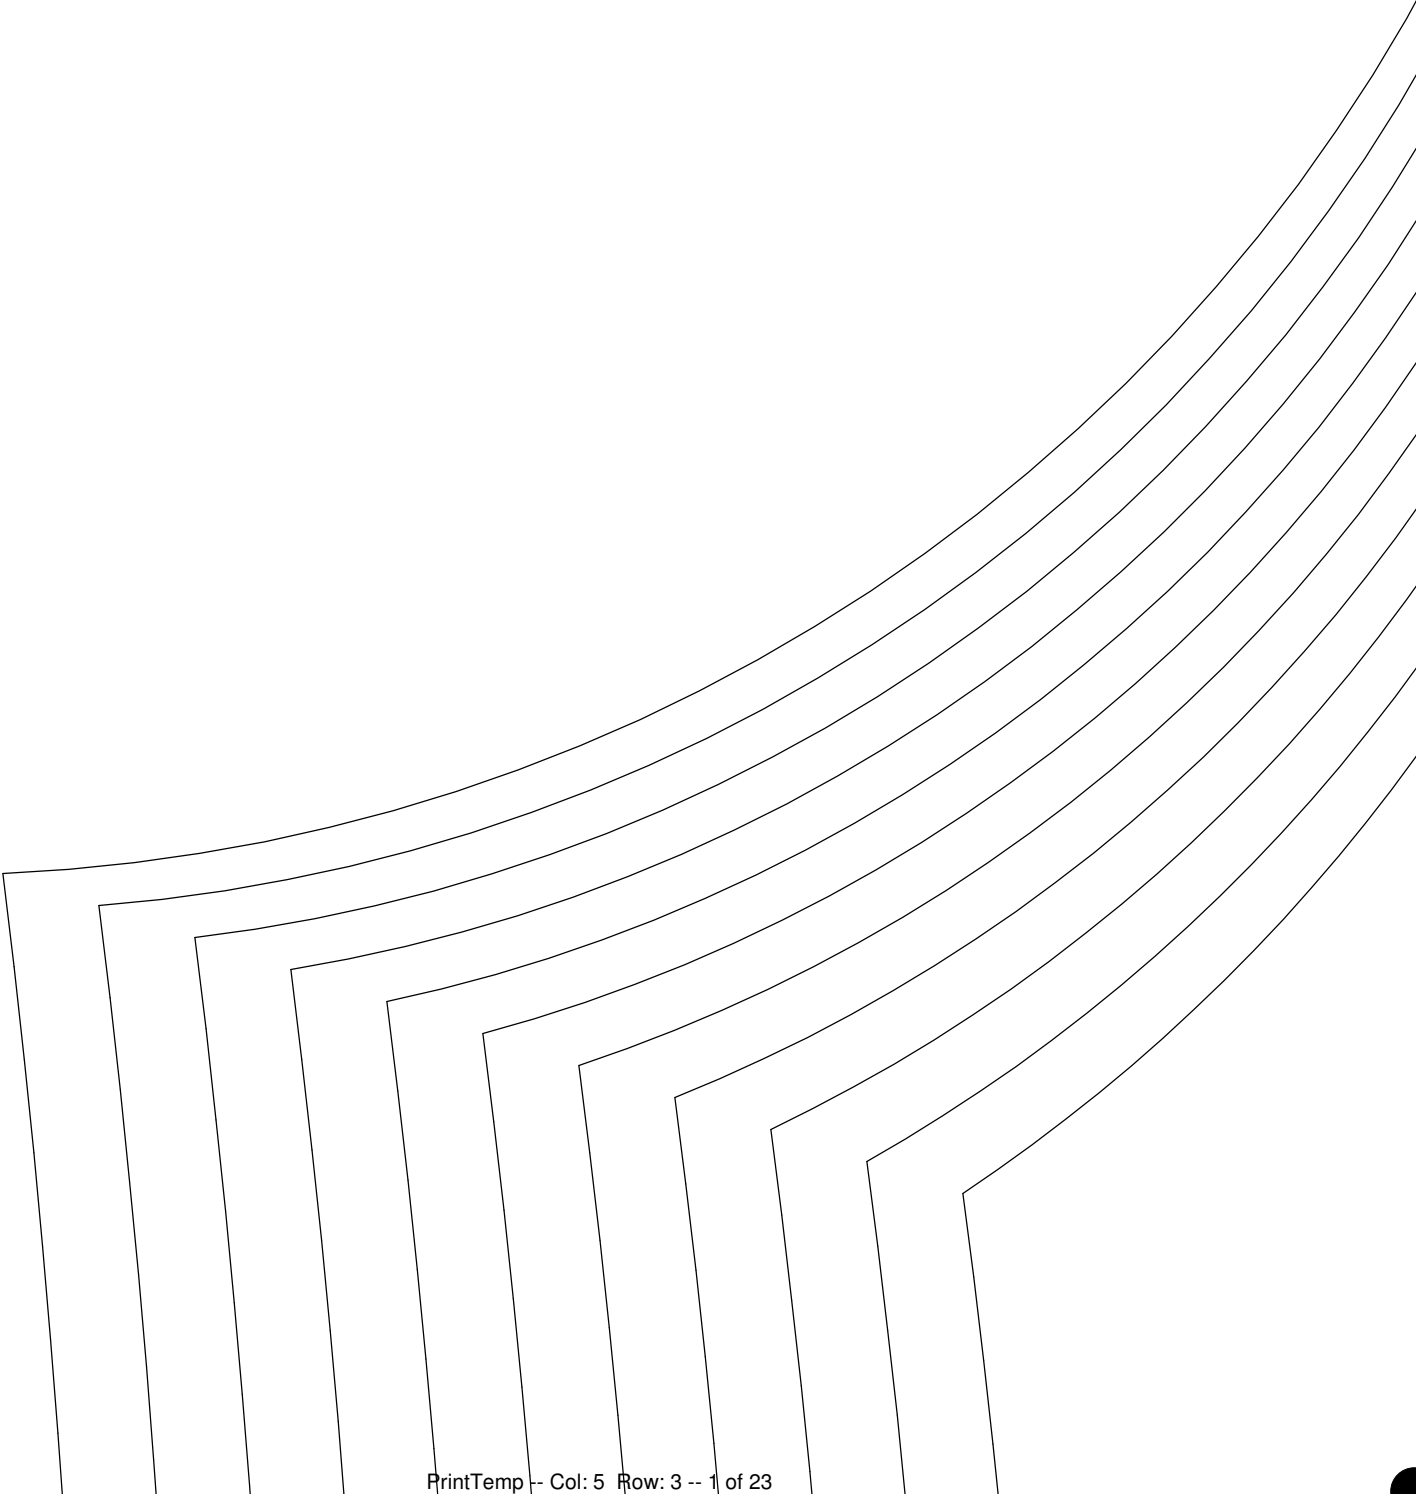

Hot

SIZE 6

SIZE 8

SIZE 10

SIZE 12

SIZE 14

SIZE 16

SIZE 18


SIZE 20

SIZE 22

SIZE 24

SIZE 26

SIZE 26
SIZE 24
SIZE 22
SIZE 20
SIZE 18
SIZE 16
SIZE 14
SIZE 12
SIZE 10
SIZE 8
SIZE 6

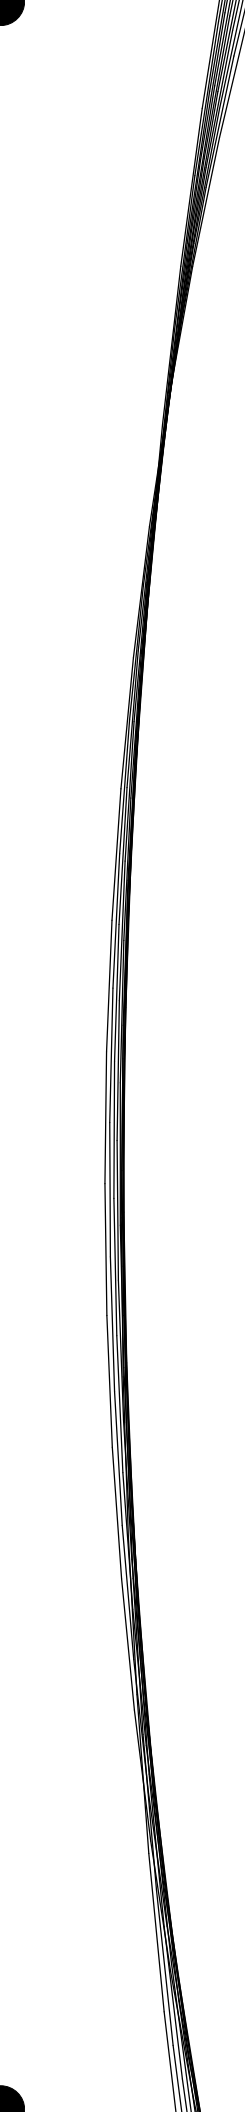

SIZE 26

SIZE 24

SIZE 22

SIZE 20

SIZE 18

SIZE 16

SIZE 14

SIZE 10

SIZE 6
SIZE 8
SIZE 10
SIZE 12
SIZE 14
SIZE 16
SIZE 18
SIZE 20
SIZE 22
SIZE 24
SIZE 26

Hot Patterns & fabric.com

exclusive free download cupid cami & tap pants instructions page 1 of 2

SEAM ALLOWANCES & OTHER INFO

Seam allowances are 5/8" or 1.5 cm wide;
all seams are sewn right sides together
unless otherwise stated.

The neckline and armholes on the Cami are finished
with self fabric bias binding; the bottom edges of the
Cami & Tap Pants are finished with narrow hems.

Skills needed include: making & applying bias binding;
making & applying an elastic waist casing;
working a narrow hem..

ABOUT THIS STYLE


The Cami & Tap Pants have an semi-fitted, slightly
relaxed silhouette.

We haven't included a pattern for the bias binding...
you just need to cut enough strips of 1 1/2" or 3.75 cm
wide fabric to go around each armhole, plus enough to
go twice around the neckline.

Oh yes, as always, make & fit a muslin before
you cut into your fabric...in this case, use a
cheap fabric with a similar drape to your chosen fabric.


SUGGESTED CUTTING LAYOUT FOR THE CAMI

fold fabric in half, with selvages
to the middle for this layout

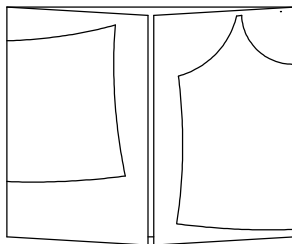

SUGGESTED CUTTING LAYOUT FOR THE TAP PANTS

fold ribbing in half, with selvedge
to selvedge for this layout

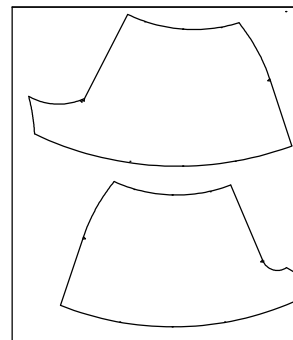


FABRIC & NOTIONS REQUIRED

You'll need around 1 1/4 yards/ 112 cm of 60"/150cm
wide fabric for the cami. You'll need around 1 yard/ 90 cm
of 60" / 150 cm wide fabric for the tap pants, plus enough
1/2" or 1.25 cm wide elastic to circle your waist.


1a Start by preparing the bias binding.


Join the short ends of each piece to make a long strip.

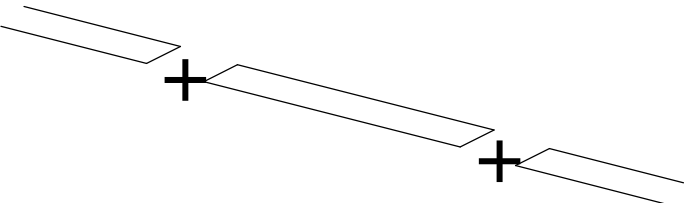

1b Press the seams open, then feed your bias strips through a bias binding folder, pressing as you go. Set aside until step X.

2 Join the front to the back along the side seams; and press the seams open.

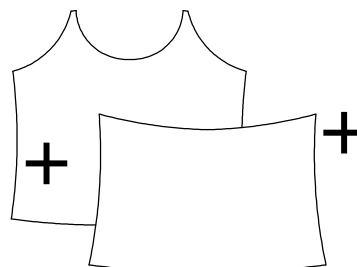

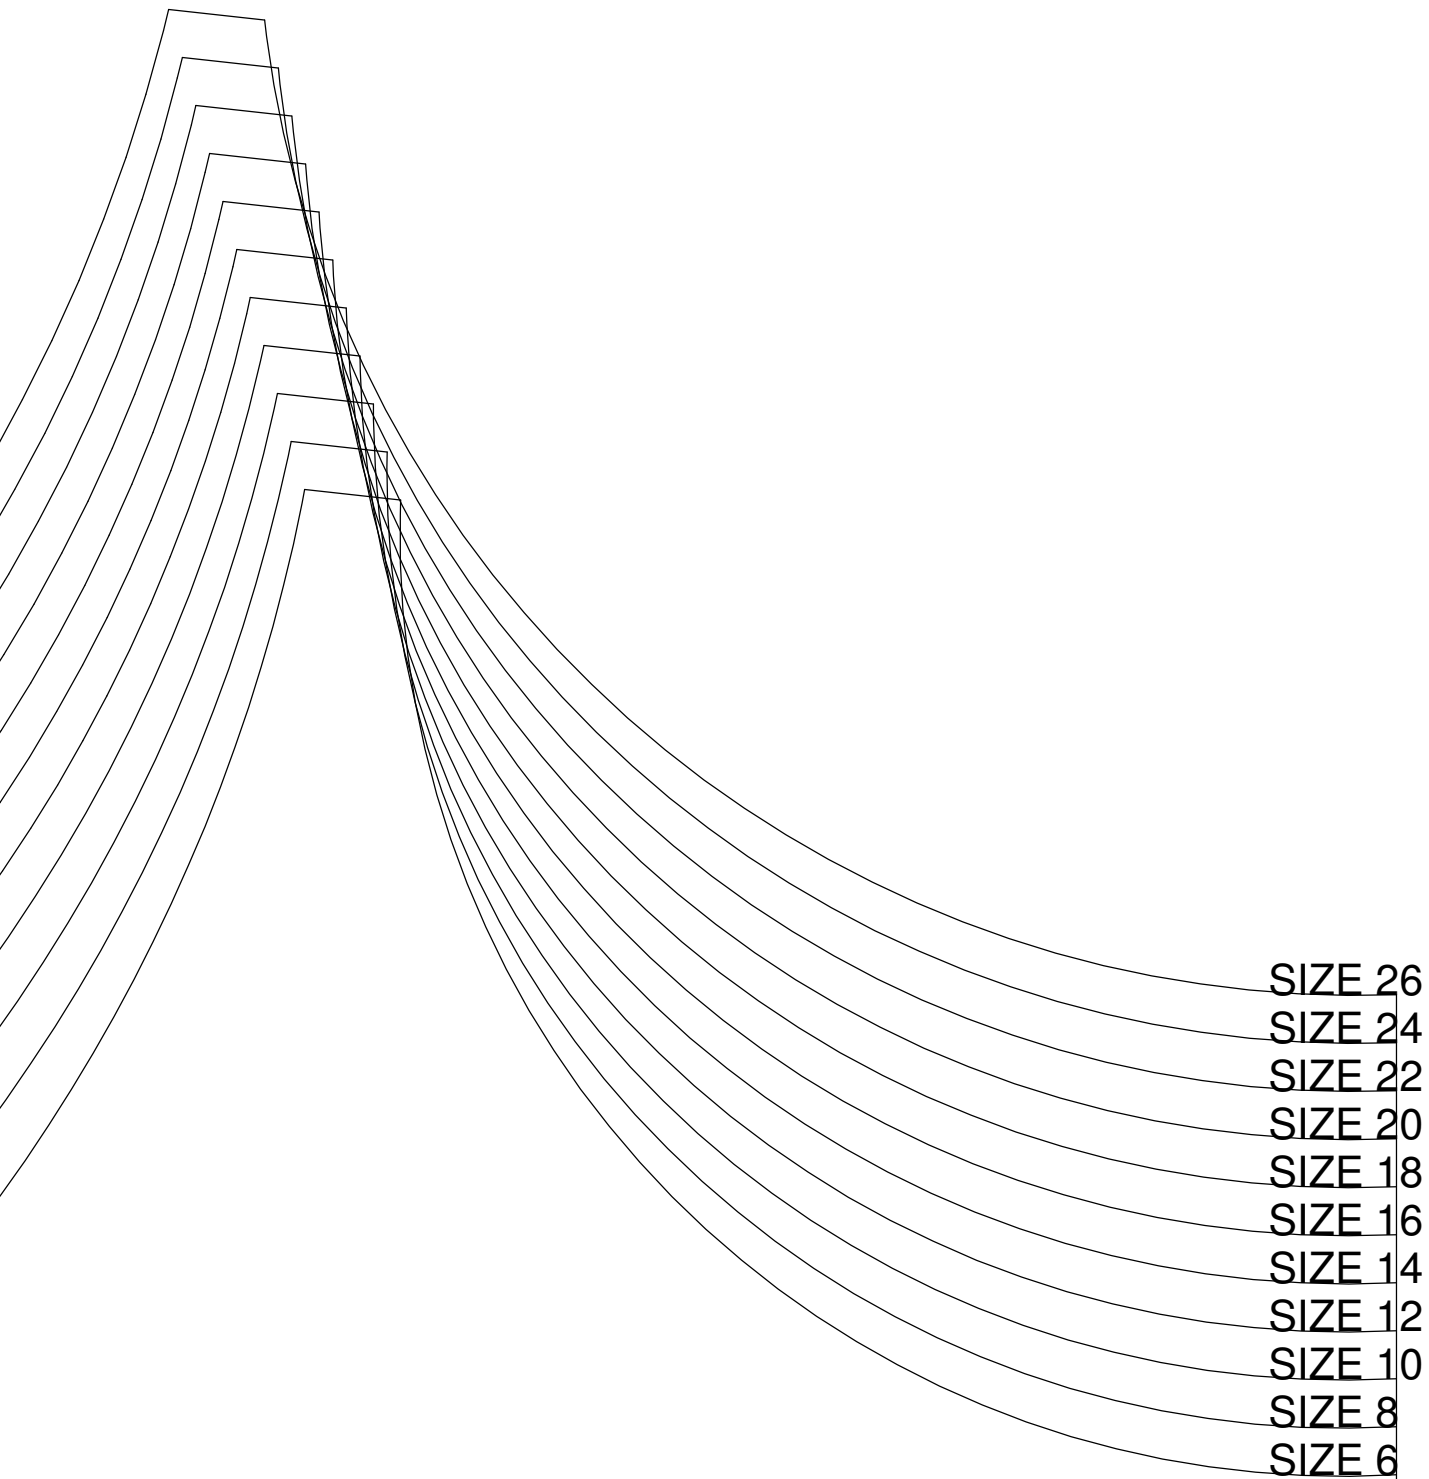

SIZE 26
SIZE 24
SIZE 22
SIZE 20
SIZE 18
SIZE 16
SIZE 14
SIZE 12
SIZE 10
SIZE 8
SIZE 6

Patterns & fabric.com


exclusive free download


cupid cami & tap pants

camis front


cut 1 on fold in fabric

FOLD

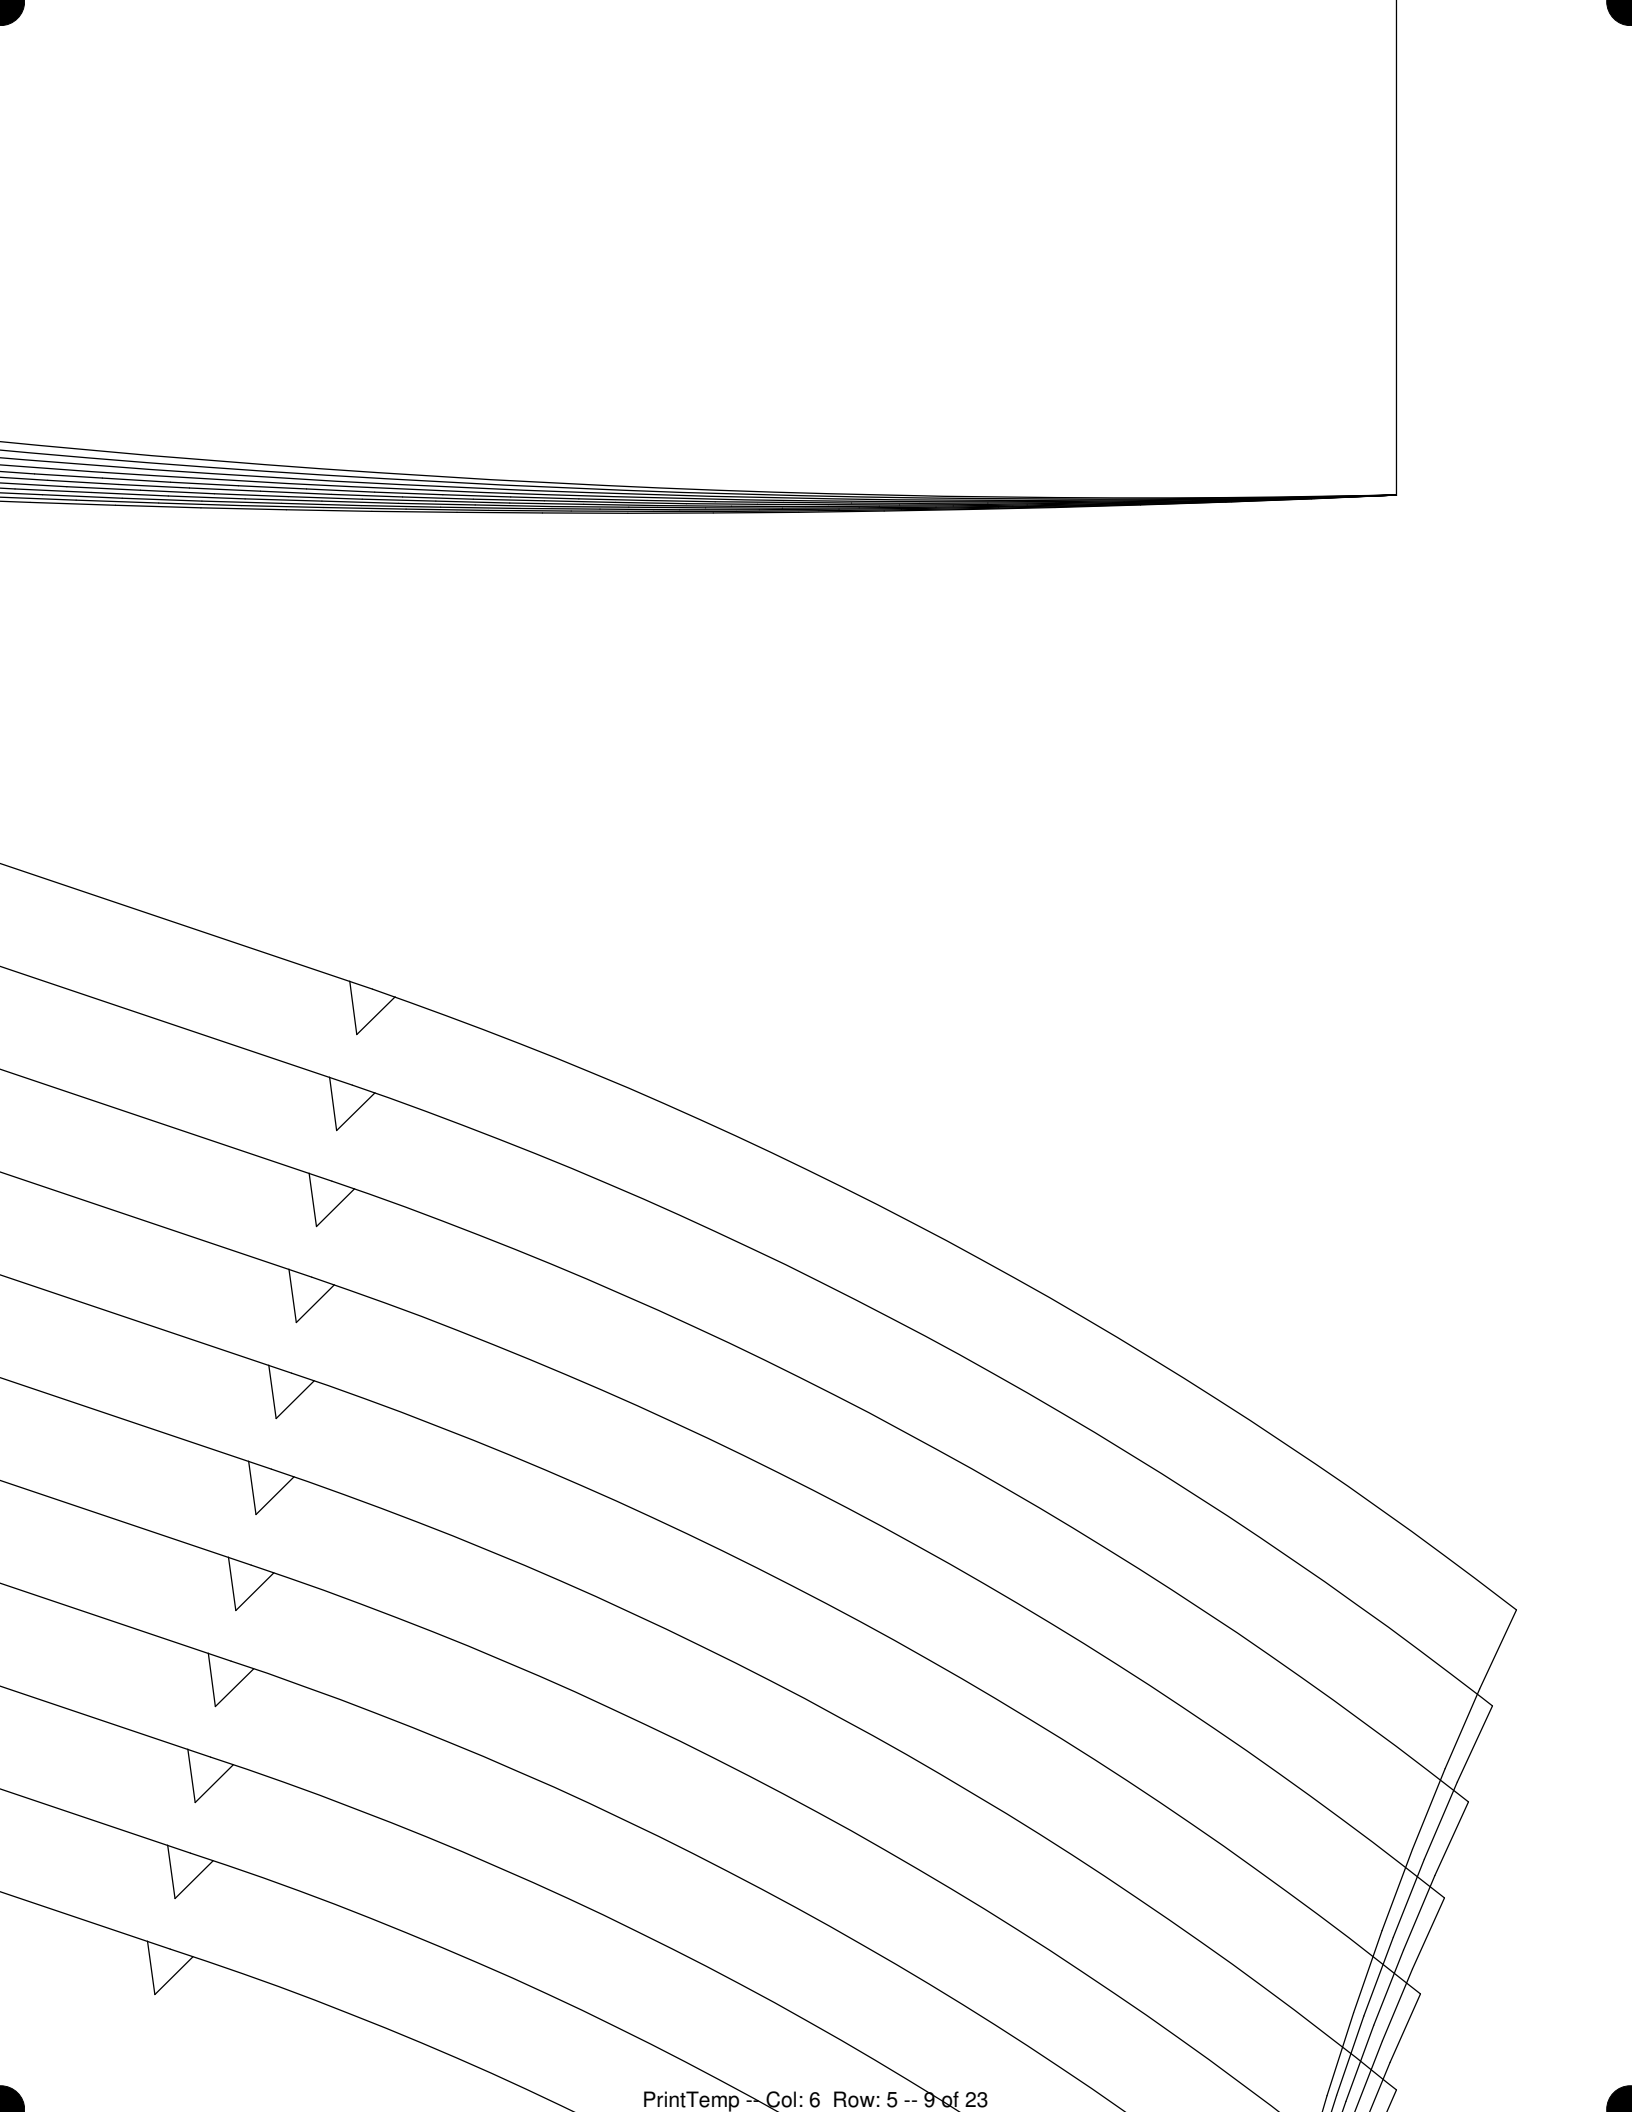

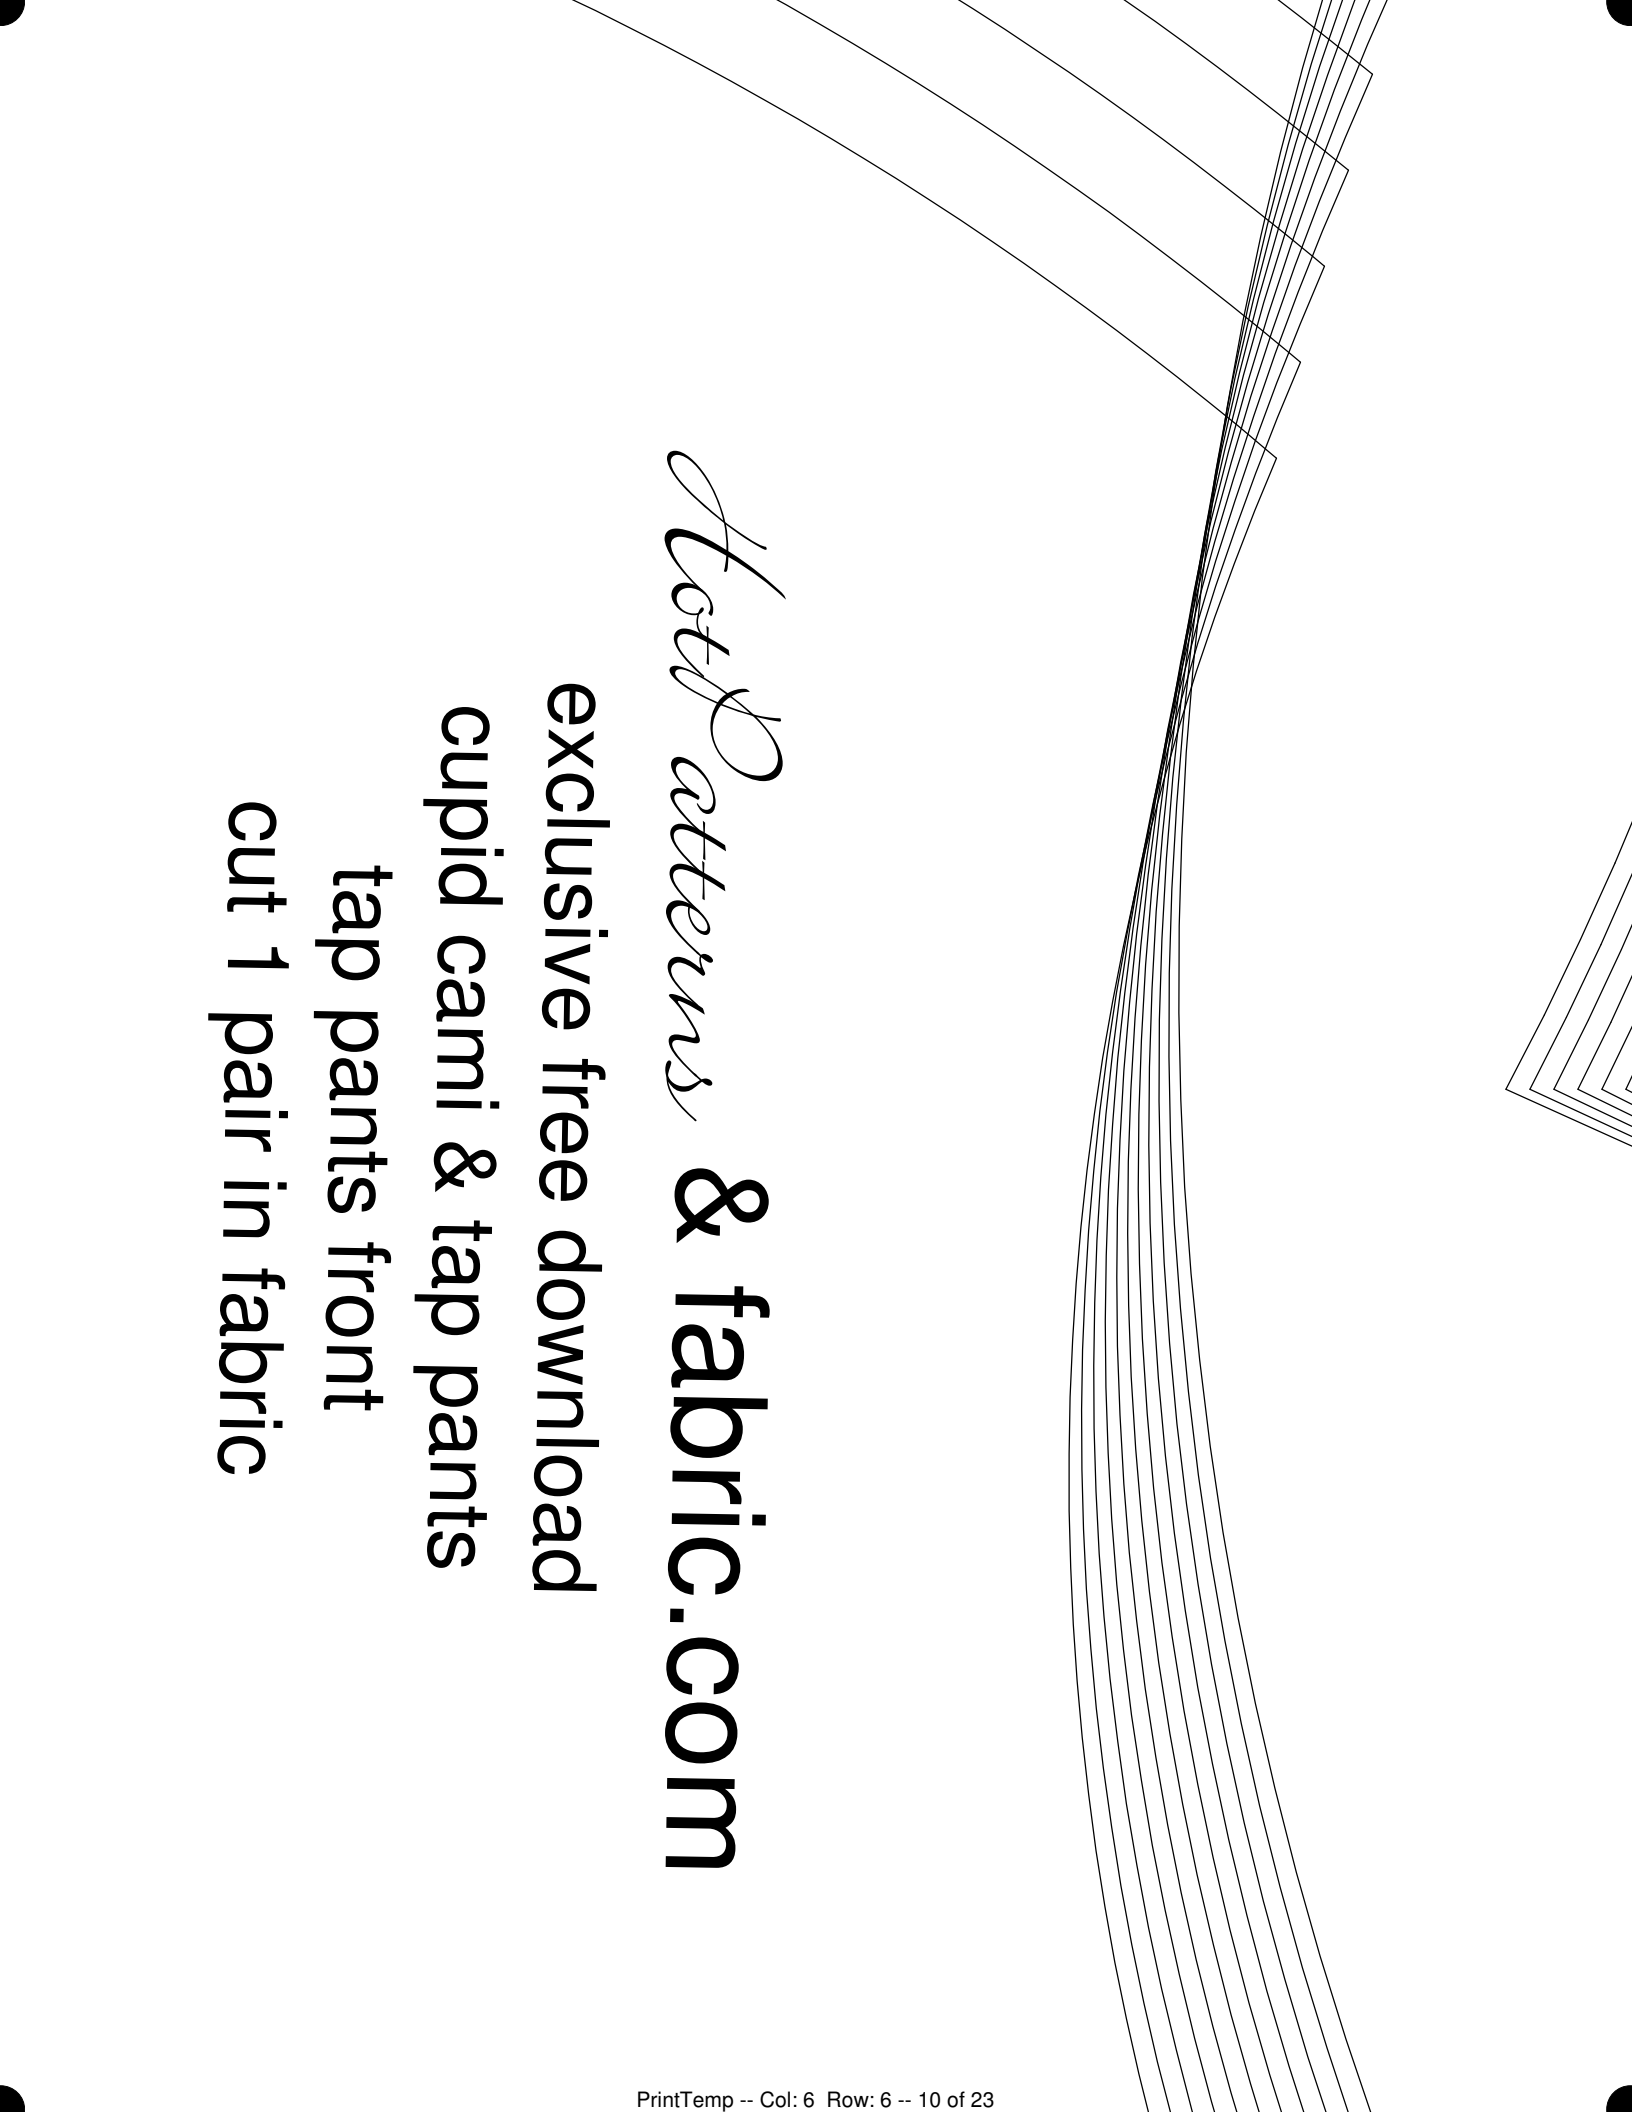The background features several thin, black, curved lines that sweep across the page from the top right towards the bottom left. On the far right edge, there are several concentric, slightly irregular rectangular outlines, resembling a stylized architectural detail or a series of frames.

Hot Patterns & **fabric.com**
exclusive free download
cupid cami & tap pants
tap pants front
cut 1 pair in fabric

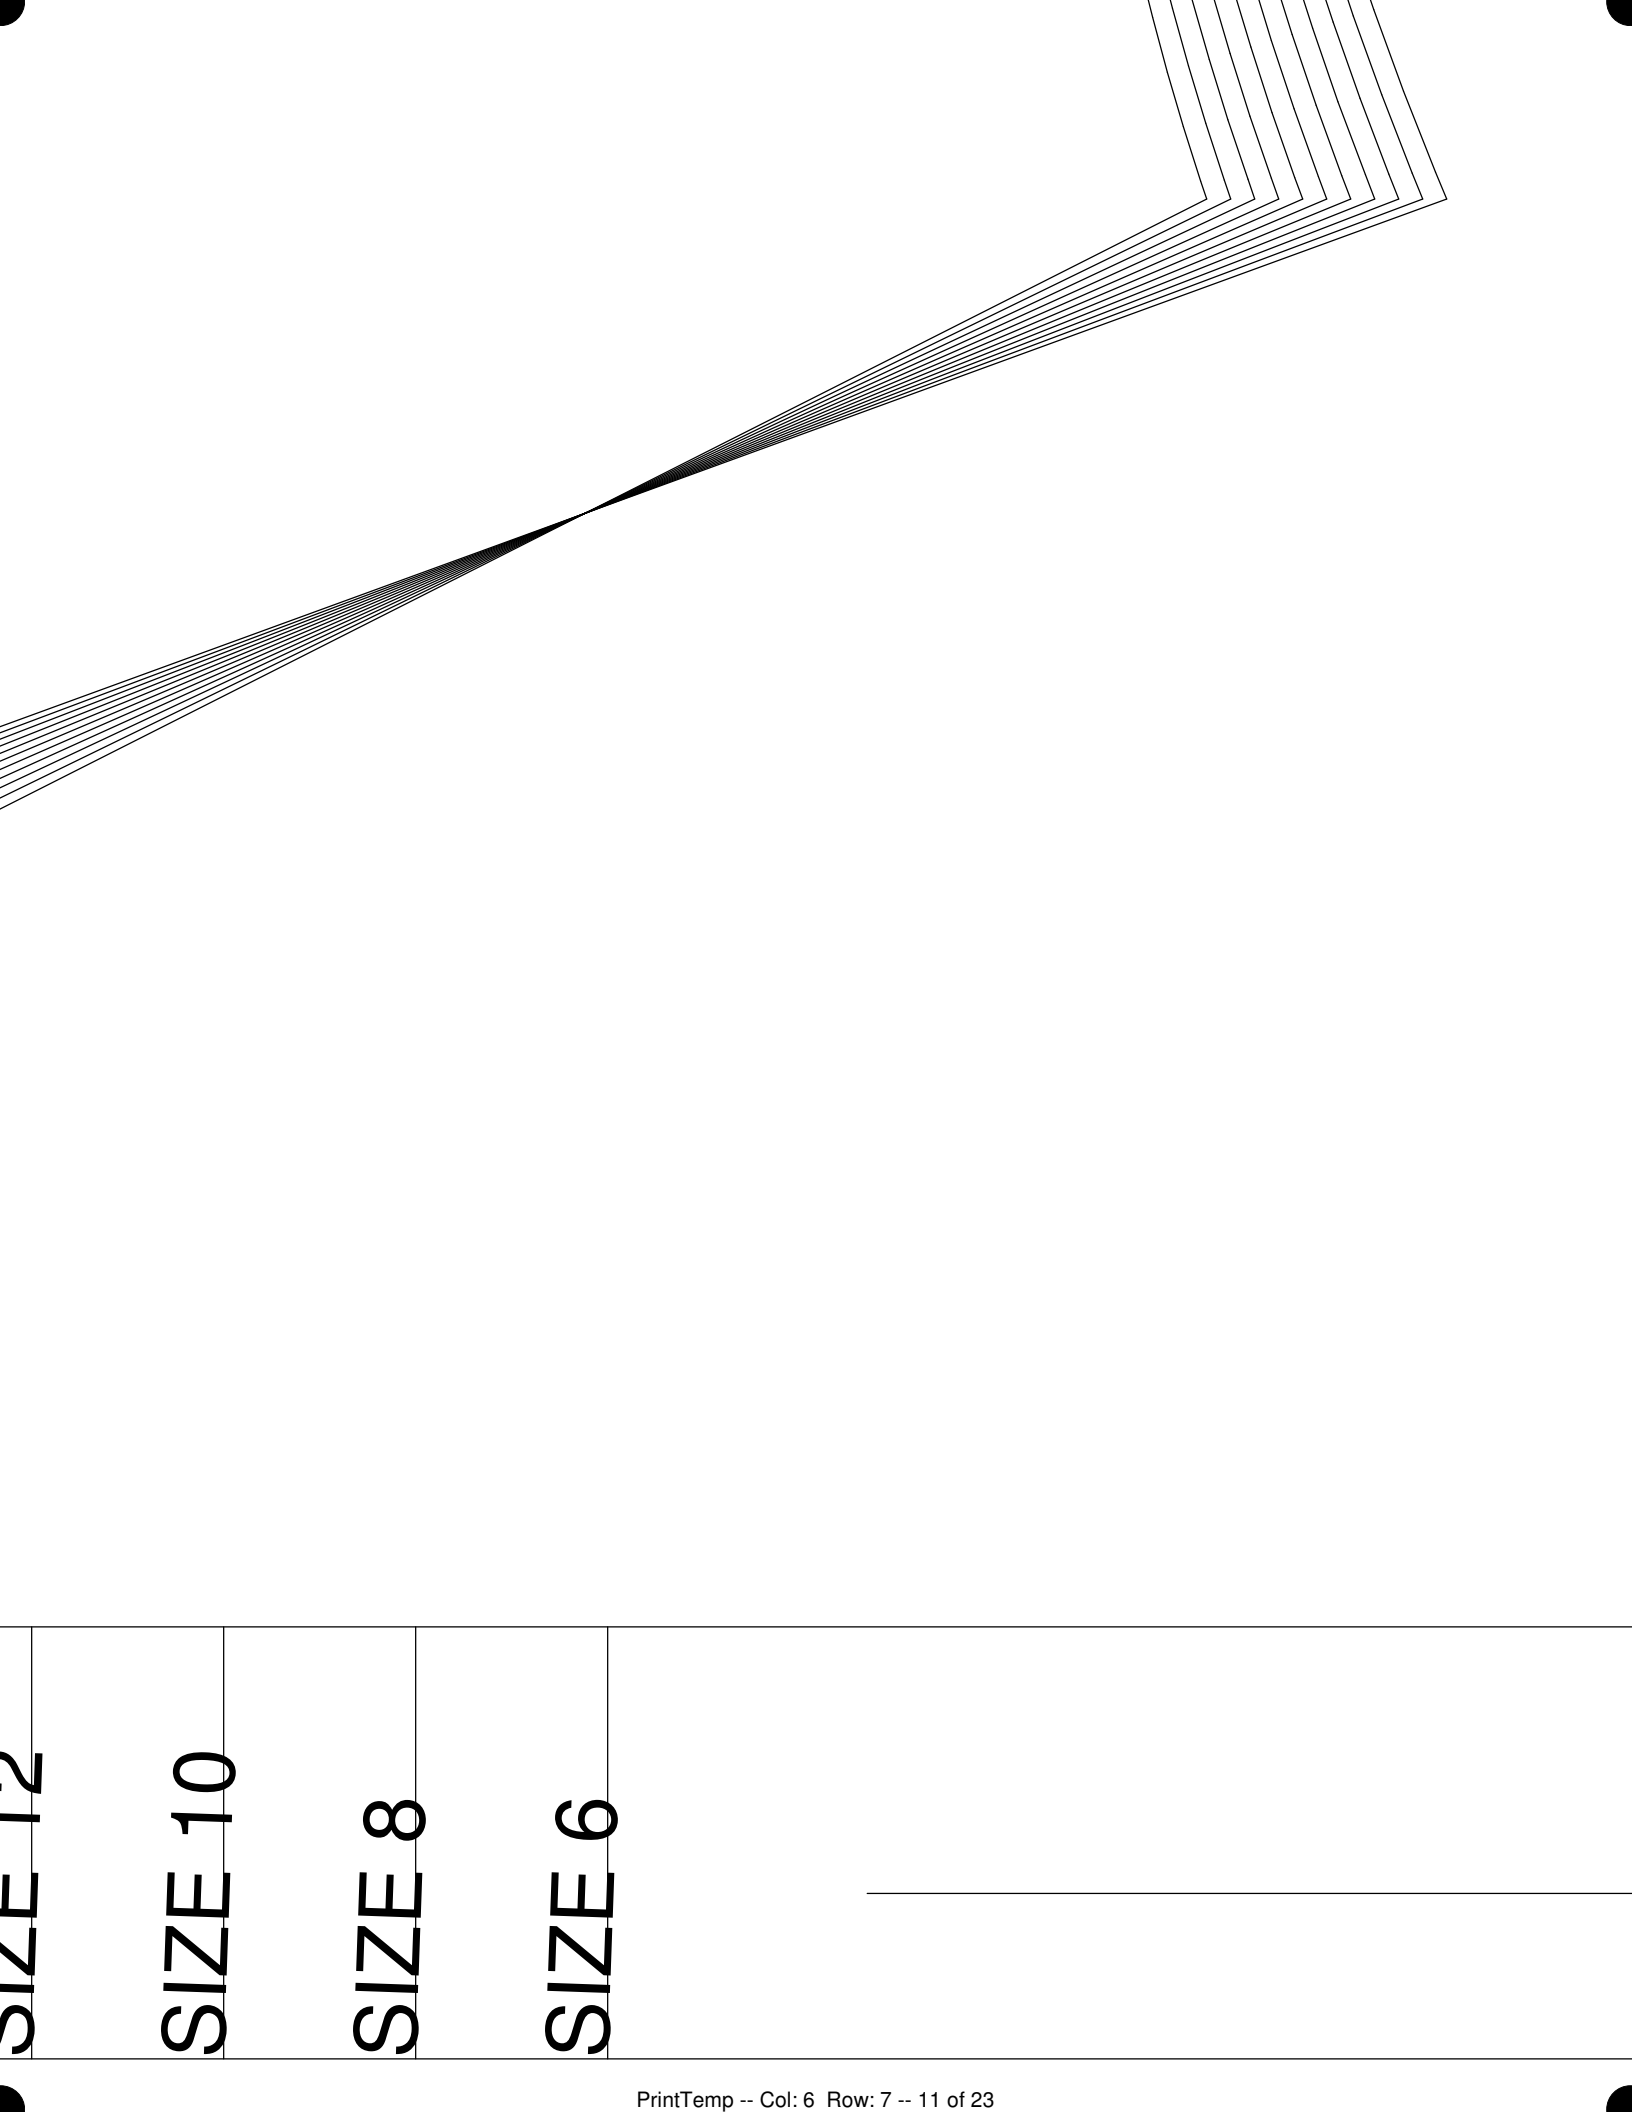

SIZE 12

SIZE 10


SIZE 8

SIZE 6

instructions page 2 of 2


Apply the bias binding to the front neckline:working on the wrong side, sew the binding to the neckline curve along the crease line on the binding.

3a

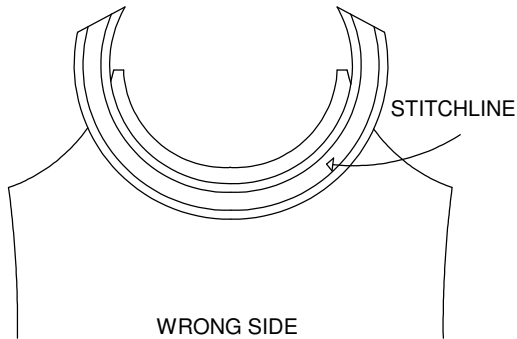


Fold the binding onto the right side of the fabric, and sew down the remaining edge. Press flat.

3b

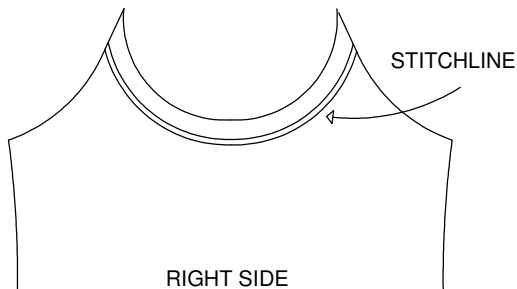

Cut two sections from your bias binding, each measuring about 18" or 45 cm long...these will be your back ties.

4a

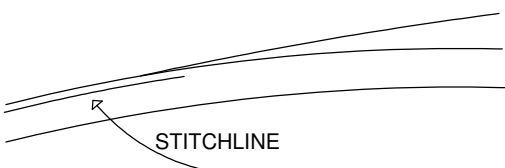


4b

Fold these strips in half lengthways and sew along the outer edges to give you a pair of 'ribbons'.

Following the markings on the pattern, baste these ribbons to the wrong side of the back neckline of the cami.

5

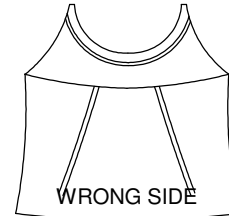


Repeat steps 3a and 3b, this time on one of the cami front armholes, and working around to the back, then up to the end of the remaining armhole.

6

You'll catch the ends of the back ties in as you sew the bias binding on.


IMPORTANT: leave about 12" or 30 cm of bias binding 'free' at each end of the armholes....these will become your ties.

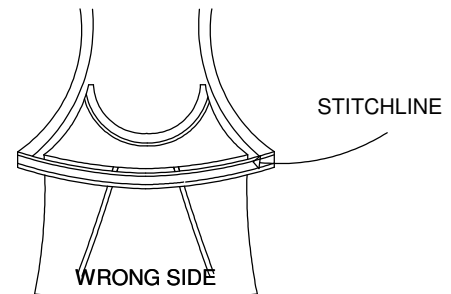

7

Repeat step 4b to complete the ties.

Work a narrow hem along the bottom edge of the cami, and press flat.

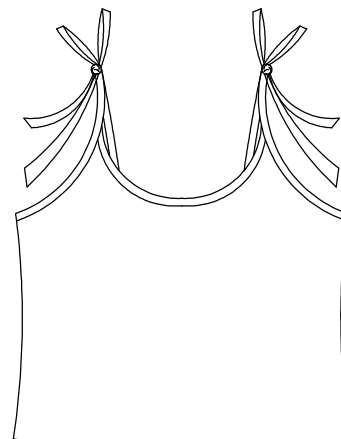

SIZE 26

SIZE 24

SIZE 22

SIZE 20

SIZE 18

SIZE 16

SIZE 14

SIZE 12

SIZE 10

SIZE 8

SIZE 6

Hot Patterns & fabric.co

exclusive free download
cupid cami & tap pants
cami back


cut 1 on fold in fabric

PrintTemp -- Col: 7 Row: 1 -- 13 of 13

cut 1 on fold in fabric

FOLD



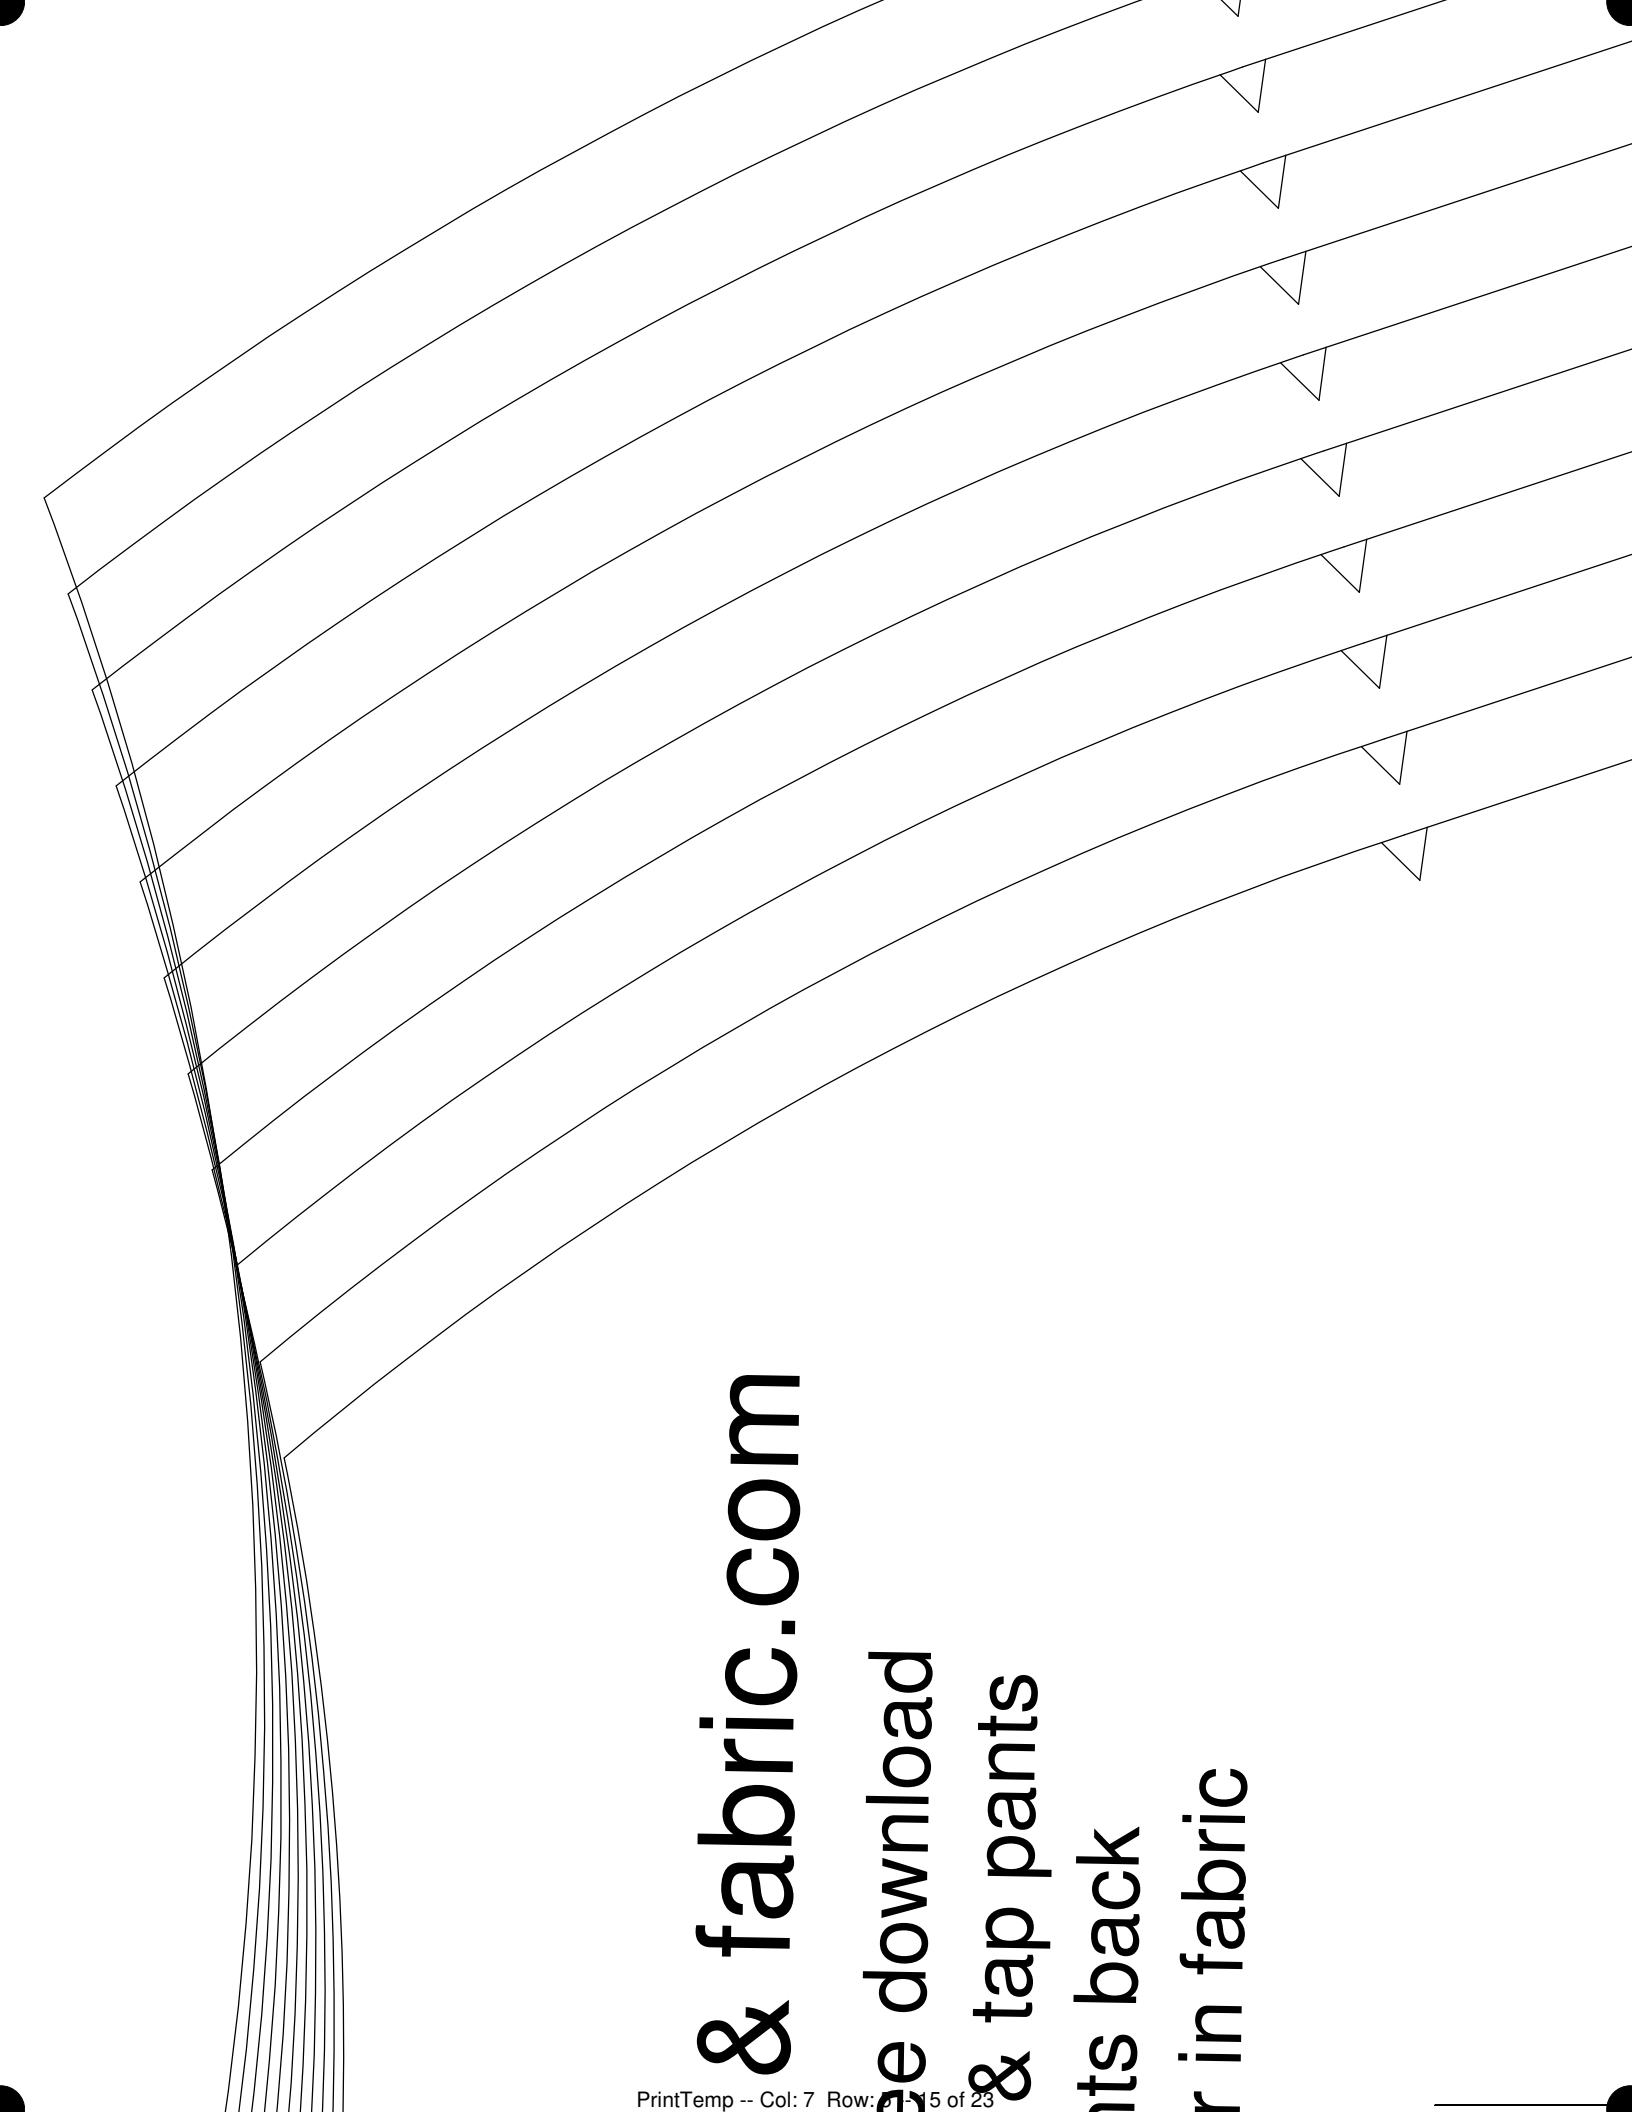

& fabric.com
e download
& tap pants
nts back
r in fabric

Hot Patterns
exclusive free
cupid cami
tap pants
cut 1 pair




Hot Pattern
exclusive
calypso ca
wa
cut 1 p

Instructions for making the Tap Pants

- 1 Join the elastic waist casing pieces to create a loop.


Press the seams open, then fold in half lengthways.

Press flat, then set aside until step X.




- 2 Matching all notches and easing where necessary, join the backs along the center back seam.

Press the seam open.

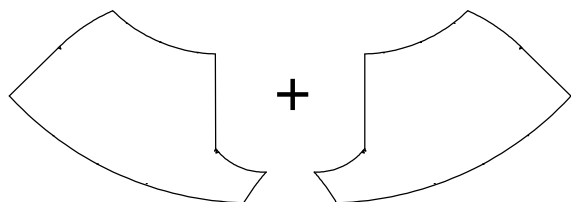


- 3 Repeat step 2, this time using the fronts.

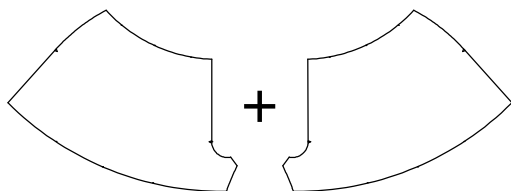

- 4 Matching all notches and easing where necessary, join the front to the back along the side seams.

Press the seams open.

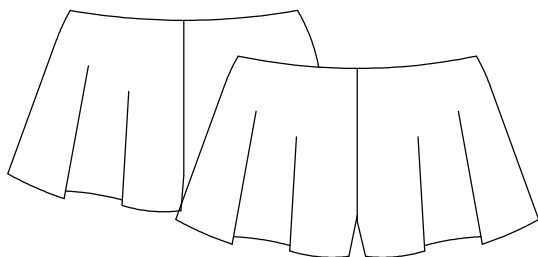

- 5 Starting at the crotch point, join the front to the back along the inner leg seam. Press all seams open.

Apply the elastic waist casing: match the seams on the elastic waist casing to the center front and center back seams on the panties.


6

Starting about 1" or 2.5cm away from the center back, join the elastic waist casing to the top edge of the panties, making sure you sew through all 3 layers.

Stop sewing about 1" or 2.5cm away from the center back seam, leaving you with about 2" or 5cm where the elastic waist casing isn't attached to the panties.



+

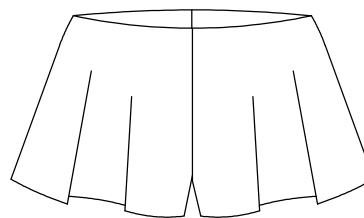

- 7 Measure your elastic by pulling it gently around your natural waist...don't pull it too tight, it needs to be comfortable!. When you are satisfied that you have the correct amount of elastic, cut to size... DO NOT add seam allowances to the elastic, as it will stretch out with wear & laundering.

8

Thread the elastic through the waist elastic casing.


Pull both ends out and join them, overlapping them by 5/8" or 1.5cm.

Stretch the waistband until the joined ends of the elastic go back into the waistband, then sew the final 2" or 5cm of the waistband to the panties.

9

Hem the panties by 5/8" or 1.5cm.

D-O-N-E!

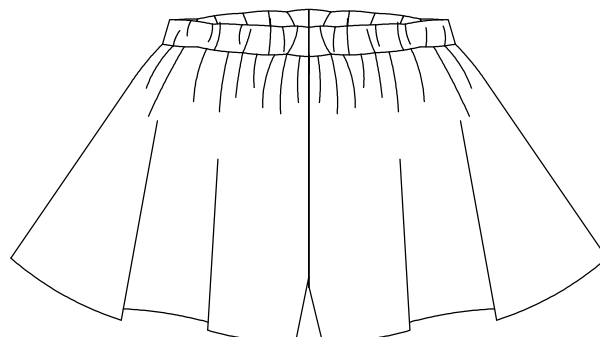

m

SIZE 6

SIZE 8

SIZE 10

SIZE 12

SIZE 14

SIZE 16


SIZE 18

SIZE 20

SIZE 22



SIZE 24


SIZE 26

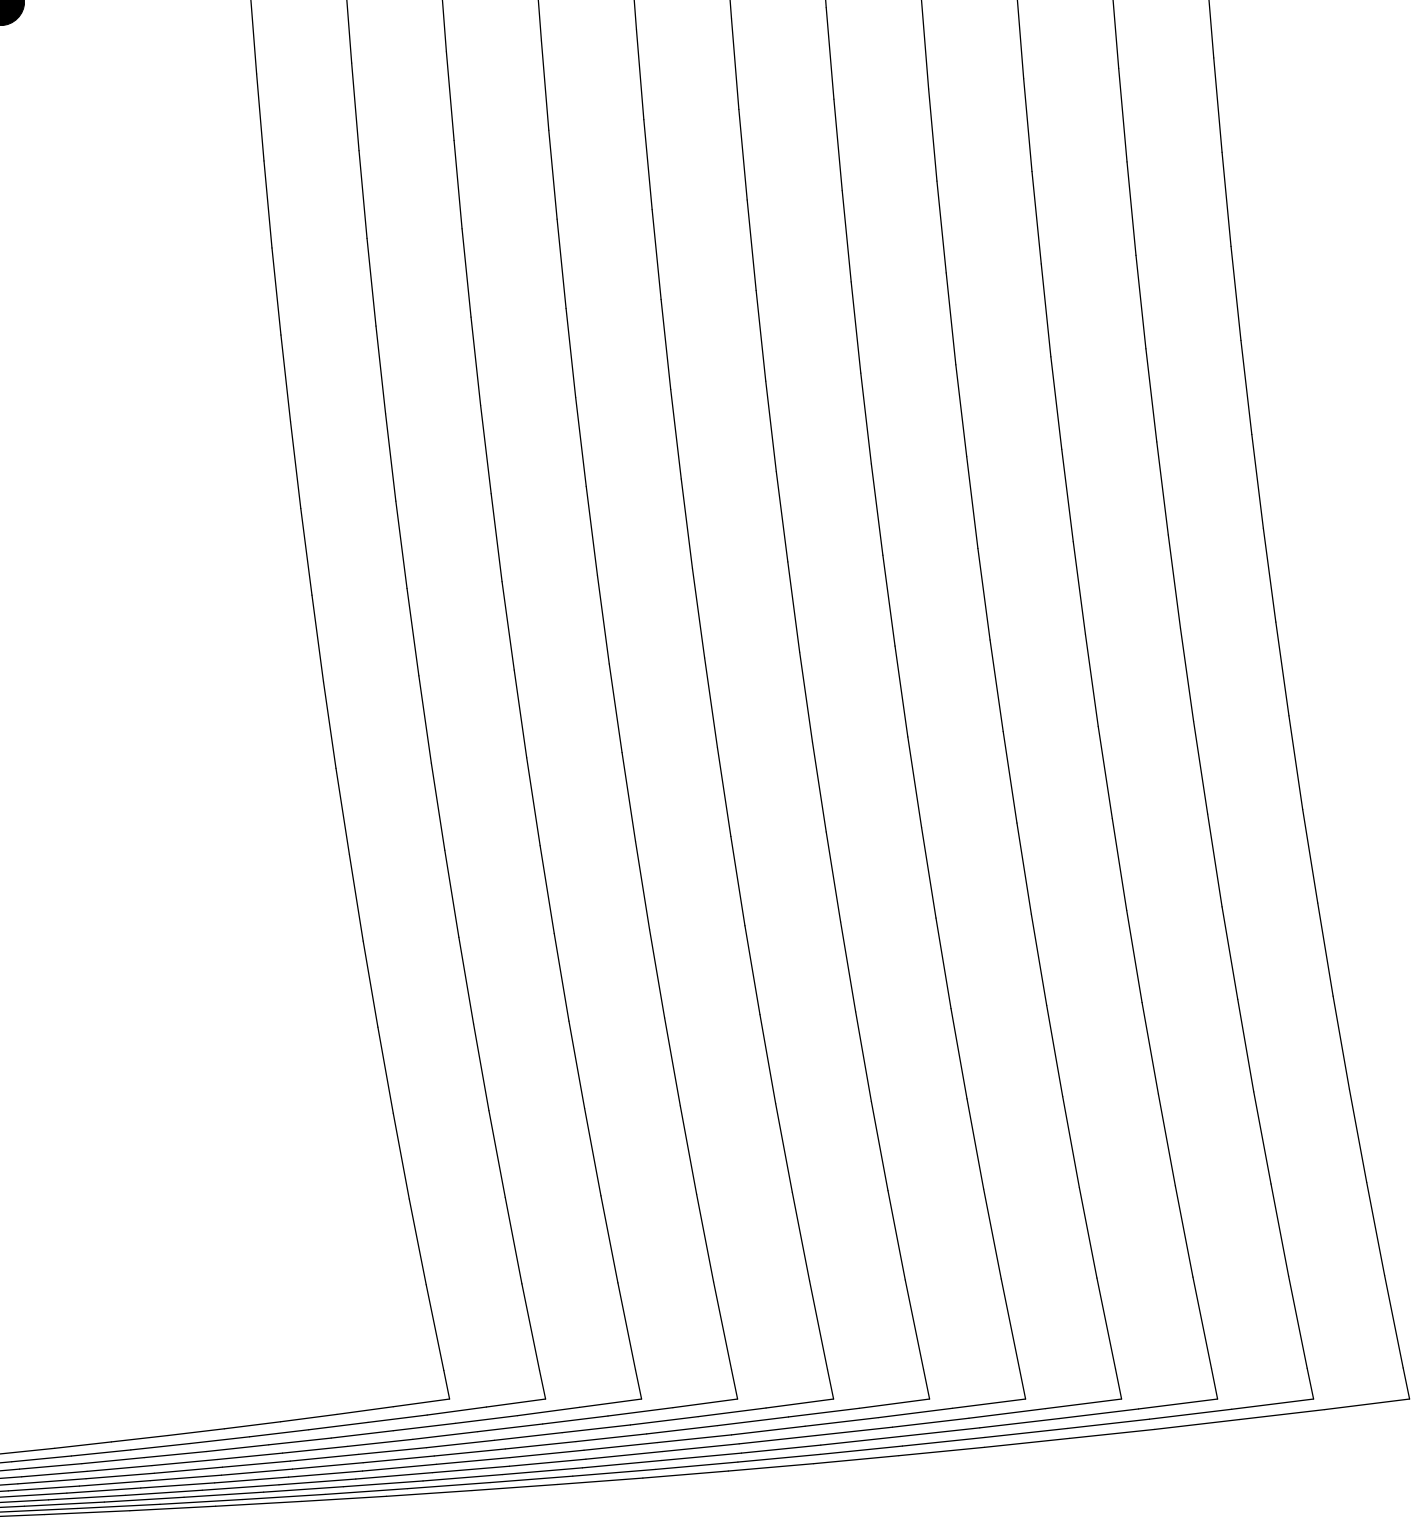

SIZE 26
SIZE 24
SIZE 22
SIZE 20
SIZE 18
SIZE 16

SIZE 6
SIZE 8
SIZE 10
SIZE 12
SIZE 14
SIZE 16

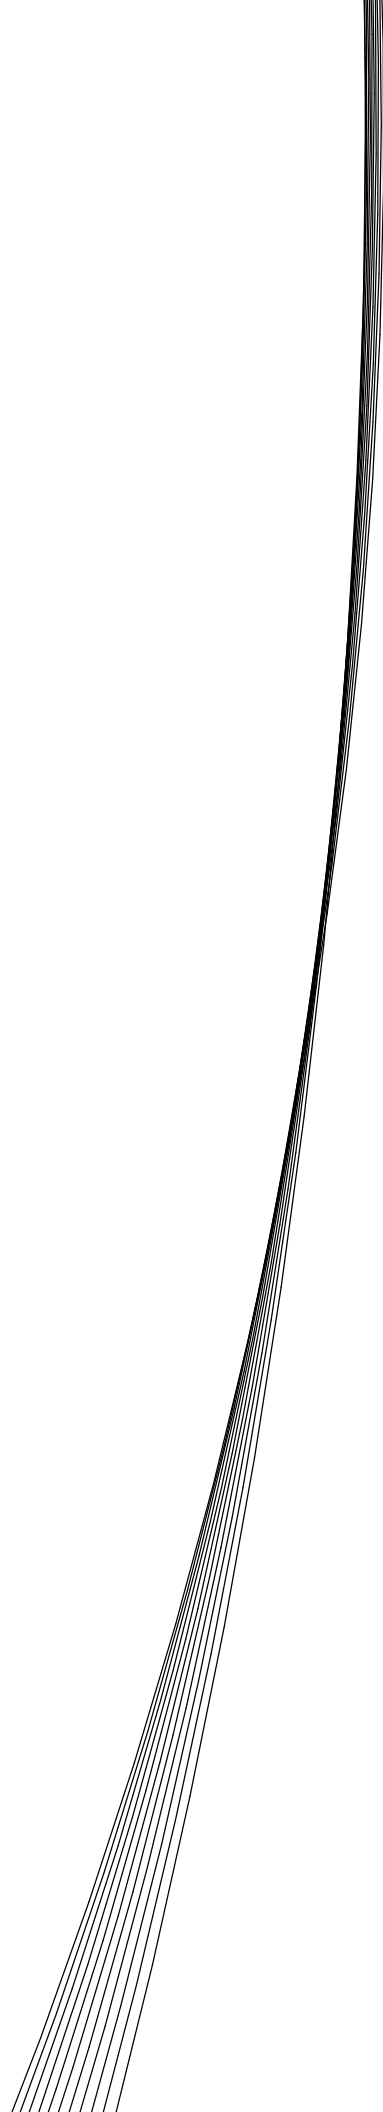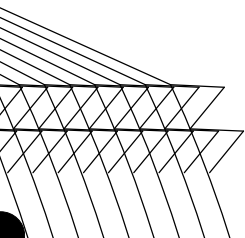

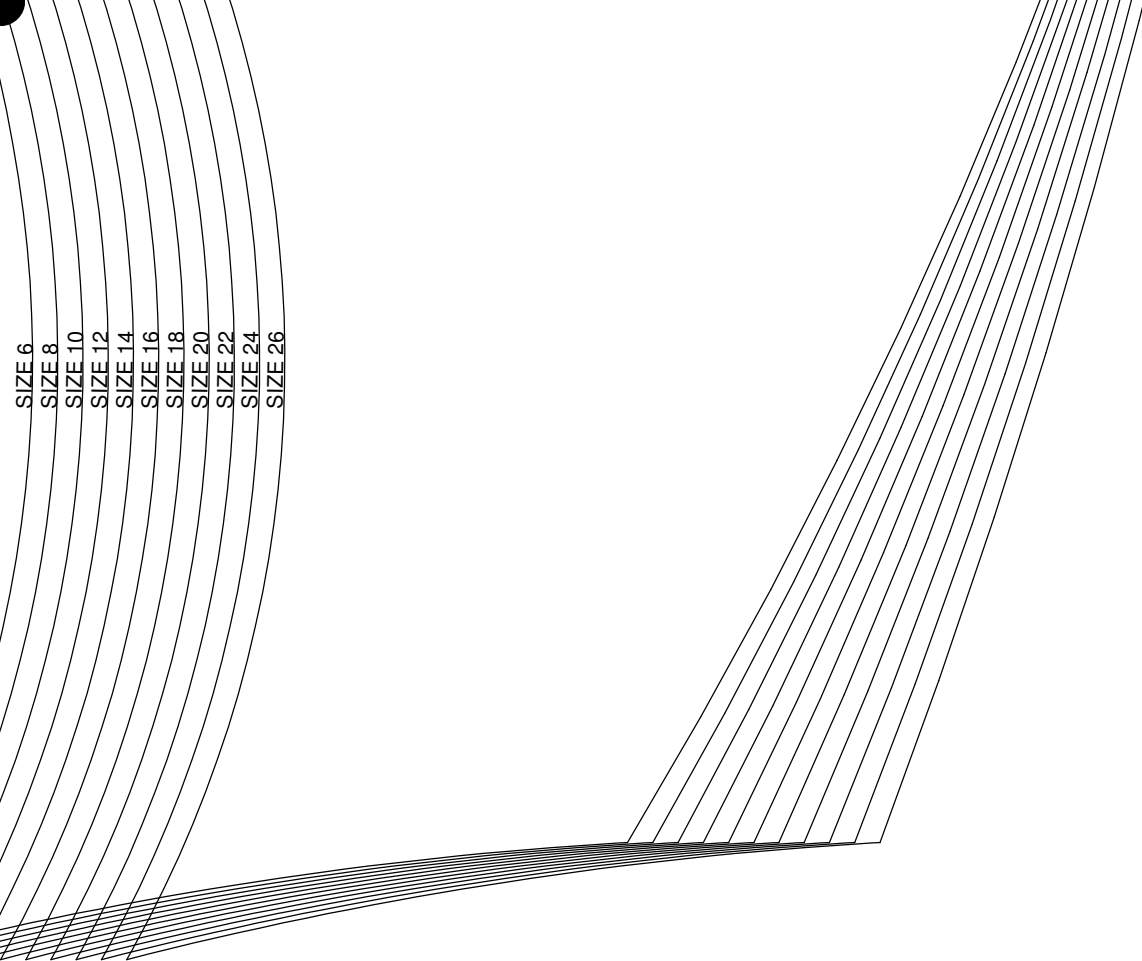

ns & fabric.com
free download
ami & tap pants
istband
air in fabric