


Dress Britt

Modell 320-11

Size 36-48

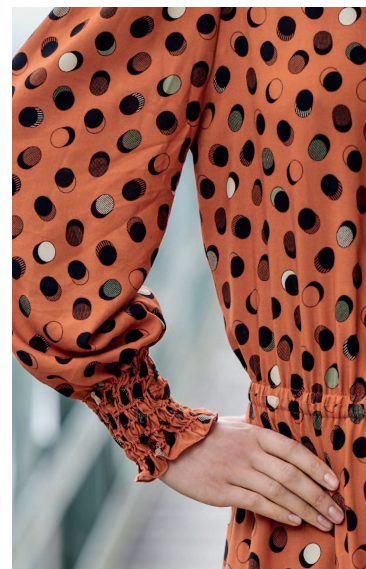

PRINT THE CUT

1. Open the pattern PDF and set the control square to Page 1 with the setting "Original size" on DIN Print A4 paper (US-Letter). (Do not click on "Adjustment to page size"!))
2. Check the square – if it is 10×10 cm, print out the whole cut sheet.
3. Place all pages next to each other as indicated by the arrows and adhere them row by row along the boundary lines, then glue the rows together.
4. Compare the body measurements with the table measurements and cut out the cut parts in the appropriate size. (The overview of the cut parts is on the pattern sheet.)

Important: Instructions do not include seam allowances, unless otherwise indicated!

SUPPLIES

- 2.8–3.1 m rayon, 135 cm wide (Hilco)
- Remnant of bias tape
- Seam zip, 60 cm
- Elastic, 1.5 cm wide
- Smocking elastic

OPTIONAL BERNINA ACCESSORIES

- Overlocker
- Ruffler #86
- Pintuck Foot #31 or #46 and Pintuck Attachment
- Twin needle, 3 mm

CUTTING

- 1 2× upper front part
 - 2 1× centre strip
 - 3 2× frill strip
 - 4 2× front skirt part
 - 5 2× upper back part
 - 6 2× back skirt part
 - 7 4× collar
 - 8 2× sleeve
- Drawstring 88 up to 116×2 cm
Bias tape strip 4×10 cm

INSTRUCTION

1. Set the overlocker for rolled hem. Hem the outer edges of the frill strips and sleeve hems with a rolled hem. Attach the ruffler to the sewing machine. Ruffle the frill strips using a stitch length at approx. 6, every 6th pleat, depending on the fabric. Sew a test sample if necessary. Alternatively, ruffle them in the conventional way. Finish the upper edge of the centre part with the bias tape. Pin the frills along the centre strip and sew them right side on right side between the upper front parts. Clip the seam allowances at the top down to the last stitch. Shorten any excesses of the frill at the bottom only. Fold the allowances towards the centre strip and topstitch them there.
2. Close the shoulder seams. Sew the outer edges of the collar right side on right side together and turn it over. Pin the upper edges of the fills on the neckline, adhering them to a width of about 4 cm. Sew the outer collar along the neckline. Sew in the zip starting from the upper edge of the collar down the rear centre.



made to create **BERNINA**

INSTRUCTION

3. Sew all skirt parts right side on right side together. Sew the skirt part on the upper part. Fold the allowances downwards. Shorten the protruding zip. Iron all allowances of the drawstring back. Topstitch the drawstring over the dividing seam from the inside. Insert the elastic at waist length plus 5 cm and fix it.
4. Provide the sleeves at a distance of approx. 2 cm from the rolled hem edge with 6 smock rows every 1.5 cm. Attention; this makes the sleeve approx. 2 to 2.5 cm shorter. To do this, attach the pintuck foot and the twin needle, thread the smock elastic through the pintuck attachment and screw the guide onto the stitch plate. Alternatively, the elastic can be guided through the hook space and the hole in the stitch plate (depending on the model). Sew in the elastic with a straight stitch. The elastic runs automatically in the centre groove under the fabric. Tighten the elastic threads to the desired width (approx. 16 – 19 cm) and knot the ends. You can also consult Inspiration 74 for more smocking methods. Close the sleeve seams. Gather the top shaping between the markings and sew in the sleeves. Hem the dress.



made to create **BERNINA**