


Blouse "Sina"

Model 7516

Sizes 36-48

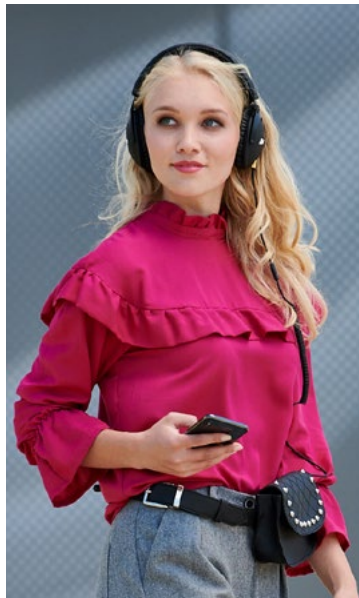

PRINT THE CUT

1. Open the pattern PDF and set the control square to Page 1 with the setting "Original size" on DIN Print A4 paper (US-Letter) (do not click on "Adjustment to page size"!)
 2. Check the square – if it is 10x10 cm, print out the whole cut sheet.
 3. Place all pages next to each other as indicated by the arrows and adhere them row by row along the boundary lines, then glue the rows together.
 4. Compare the body measurements with the table measurements and cut out the cut parts in the appropriate size (the overview of the cut parts is on the pattern sheet).
- Important:** Instructions do not include seam allowances, unless otherwise indicated.

SUPPLIES

- 1.6–1.7 m rayon, 140 cm wide
- Fabric lining G 710 (Vlieseline)
- 1 button to coat, 11 mm in diameter (Prym)
- 0.5–0.7 m elastic, approx. 0.7 cm wide

Optional BERNINA accessories

- [Ruffler foot 86](#)

CUTTING

- 1 1 × front part on the fold
- 2 1 × front yoke on the fold
- 3 1 × back part on the fold
- 4 2 × rear yoke
- 5 2 × stand-up collar on the fold
- 6 2 × sleeve

Collar frill 75 × 4 cm. Shoulder frill 180 up to 210 × 12 cm.

Loop closure 5 × 2 cm. Fabric lining 1 × collar on the fold.

INSTRUCTIONS

1. Iron the fabric lining on the collar and let it cool off thor-

oughly. Close the darts of the sleeves.

2. Depending on the size, pin approx. 18 to 24 cm elastic along the crossline on the wrong fabric side of the sleeves. Stretch the fabric and sew on the elastic from the right side with the running stitch (stitch 4) or alternatively with a zigzag stitch.
3. Sew the sleeves on the front and the back part. Close the shoulder seams of the yoke parts. Finish all seams. Close the seam on the rear yoke part beneath the slit marking. Iron the allowances apart.
4. If necessary, sew the fabric strips for the shoulder frill together so that the overall length is achieved. Iron the frill strips lengthways on the fold. Attach the Ruffler foot and set every 6th pleat and stitch length about 4.8. Fold the strips. Alternatively, fold little pleats every 2 to 3 cm and baste them.
5. Close the shoulder frill at the length of 123/126/129/132/135/138/141 cm to a ring and pin it to the edge of the front part, the back part and the sleeves. Sew on the frill. Sew the upper edge on the yoke parts and finish the seams. Successively, close the seams of the sleeve and the sides.
6. Iron both long edges of the loop closure 0.5 cm to the wrong side. Place the folded edges on top of each other and topstitch the loop closure. Pin the loop closure on the narrow edge of the right collar side.
7. Match the length of the collar frill with the length of the upper edge of the collar and hem the edges. Pin the frill along the upper edge of the collar part and place the second collar part on top. Sew the narrow edges and the upper edge right side on right side together.
8. Pin the open edges of the collar on top of each other. Sew the collar along the neckline. Hem the sleeves and the blouse. Coat the button according to the packing instructions and sew it on.



made to create **BERNINA**