



3. Stitch front to back, right sides together, at side seams. Stitch front to back, right sides together, at inside leg seams, matching center front seam to center back seam.

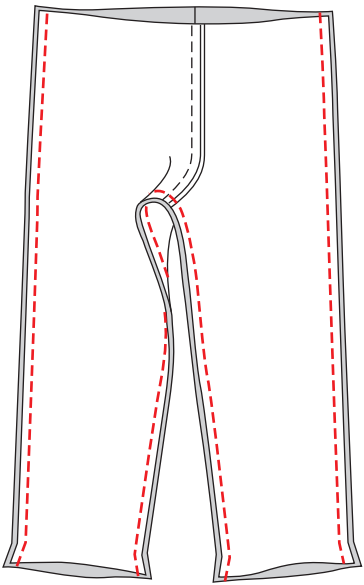


4. Overcast waist. Fold 1" (2.5 cm) to wrong side for casing and press.

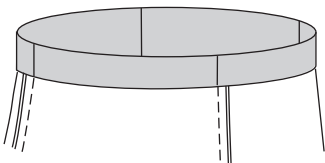


Cut a piece of 3/4" (2 cm) wide elastic the following length:
XS - 24" (61 cm)
S - 26" (66 cm)
M - 29" (74 cm)
L - 32" (81 cm)
XL - 36" (91 cm)


Overlap ends of elastic 3/8" (1 cm) and stitch together.




Place elastic under casing with top edge of elastic along crease. Using a zipper foot, stitch close to edge of elastic; pull elastic from the stitched casing to make fabric flat for stitching.

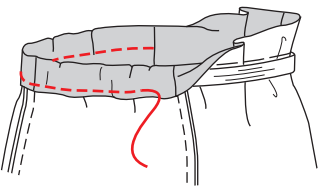

Distribute gathers evenly. To keep elastic from rolling, stitch across the width of elastic at side seams, center front and center back.

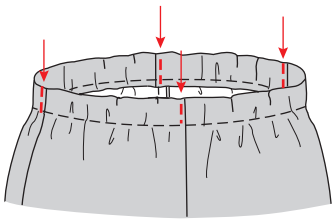


5. Overcast bottom edge of each leg. Fold 1" (2.5 cm) to wrong side for casings and press.

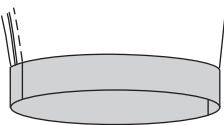


Cut two pieces of 3/4" (2 cm) wide elastic the following length:
XS - 14 1/2" (36 cm)
S - 15" (38 cm)
M - 15 3/4" (40 cm)
L - 16 1/2" (42 cm)
XL - 17 1/4" (44 cm)


Overlap ends of each piece of elastic 3/8" (1 cm) and stitch together.

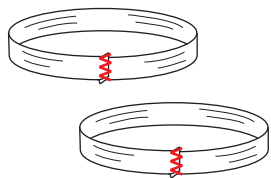

Place elastic under casing with edge of elastic along crease and stitch following the same procedure as for waist.

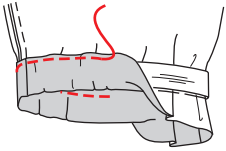


Distribute gathers evenly. To keep elastic from rolling, stitch across the width of elastic at side seam and inside leg seam. Repeat for other leg.

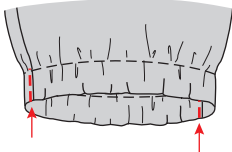


VIEW B

1/4" (6 mm) seam allowances are included.


1. Stitch fronts, right sides together, at center front seam.

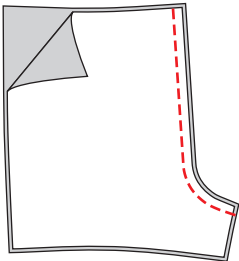

2. Stitch backs, right sides together, at center back seam, matching notches.

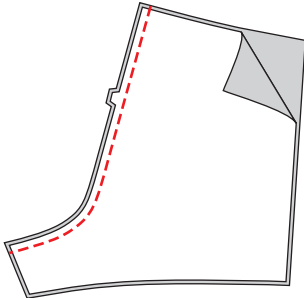


3. Stitch front to back, right sides together, at side seams. Stitch front to back, right sides together at inside leg seams, matching center front seam to center back seam.

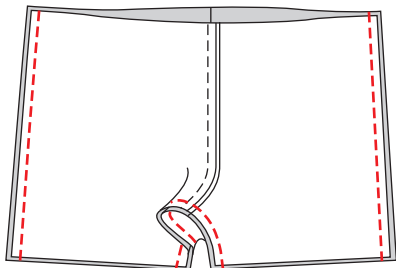


4. Follow View A step 4.

5. Overcast bottom edges of legs. Fold 1" (2.5 cm) to wrong side for casings and press.

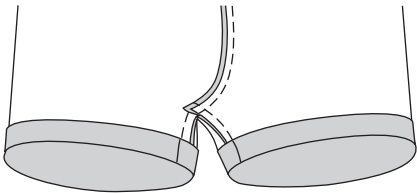


Cut two pieces of 3/4" (2 cm) wide elastic the following length:
XS - 20 1/2" (52 cm)
S - 22" (56 cm)
M - 23 1/2" (60 cm)
L - 25" (64 cm)
XL - 26 1/2" (68 cm)


Overlap ends of each piece of elastic 3/8" (1 cm) and stitch together.

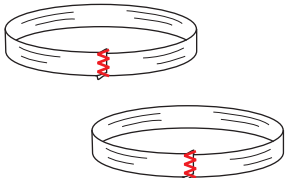

Place elastic under casings with edge of elastic along crease. Using a zipper foot, stitch close to edge of elastic; pull elastic from the stitched casing to make fabric flat for stitching.

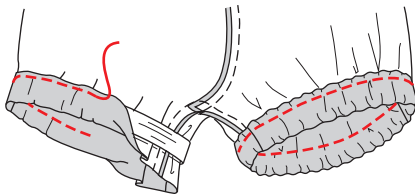


Distribute gathers evenly. To keep elastic from rolling, stitch across the width of elastic at side seams and inside leg seams.

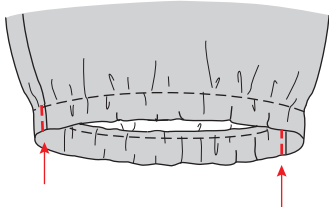



TOP

1/4" (6 mm) seam allowances are included.
For correct stitching techniques, see Sewing Procedures.


1. Stitch sleeves to front, right sides together, at front raglan seams, matching notches.

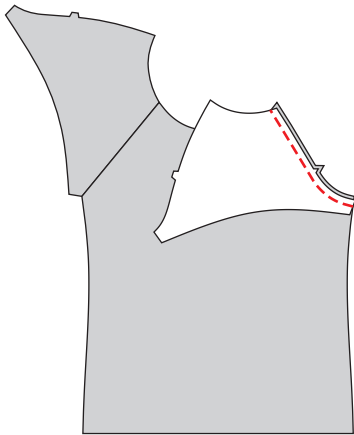



2. Stitch back to sleeves, right sides together, at back raglan seams, matching notches.

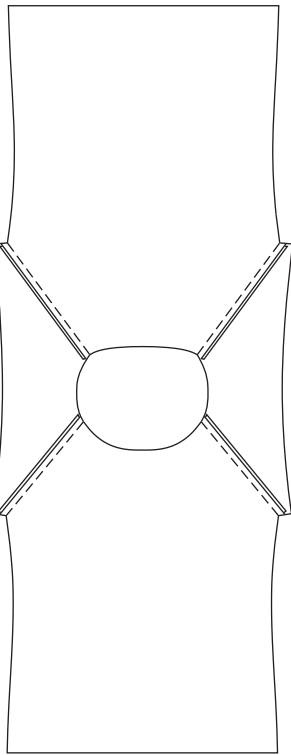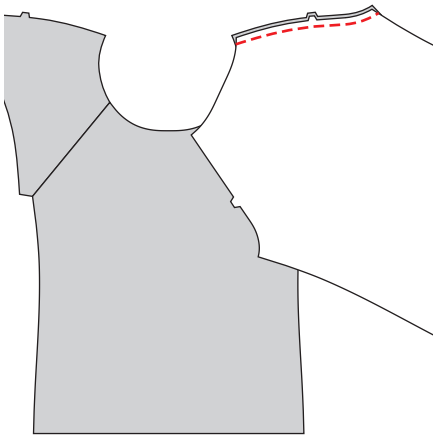

3. Pin front to back, right sides together, at side seam and sleeve seam. Stitch from bottom edge to bottom edge of sleeve. Repeat for other side.

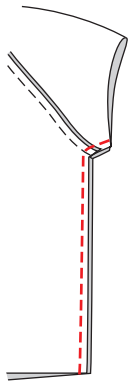

4. Neckline, bottom edge, and bottom edges of sleeves can be left unfinished. If desired, finish raw edges with a serger (overlock) machine, a wide zigzag stitch, or a three-step zigzag stitch.

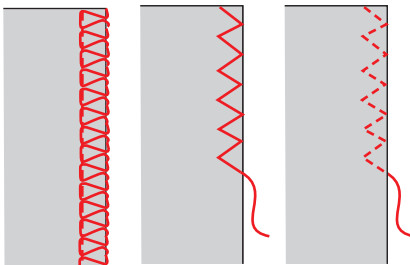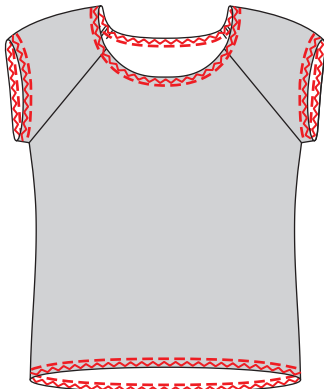

Congratulations on completing your **KWIK•SEW** sewing project!

Please take a moment to share your comments with our design studio by visiting: www.kwiksew.com/survey

If you purchased this pattern without the enclosing envelope, you should be aware that this pattern is stolen property. It was reported "unsold and destroyed" to KWIK•SEW®, and neither KWIK•SEW® nor the distributor has received any payment for this "stripped pattern."

©MMIX KWIK•SEW® Pattern Co., Inc. All rights reserved. Protected under international copyright law. Commercial or industrial use prohibited unless there is a written agreement with KWIK•SEW® Pattern Co., Inc. This pattern or any part thereof may not be reproduced in any form or by any process without written permission from the copyright owner.

KWIK•SEW® Pattern Co., Inc. is not responsible for misprints or other errors, and in no event shall be liable for any damages whatsoever resulting from the purchase or use of this product.

Printed in the United States of America.