




CARINE TEE

CUTTING LAYOUT


For 90cm wide fabric

160cm needed

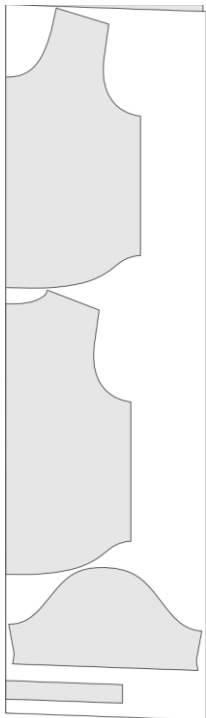

For 120cm+ wide fabric

100cm needed

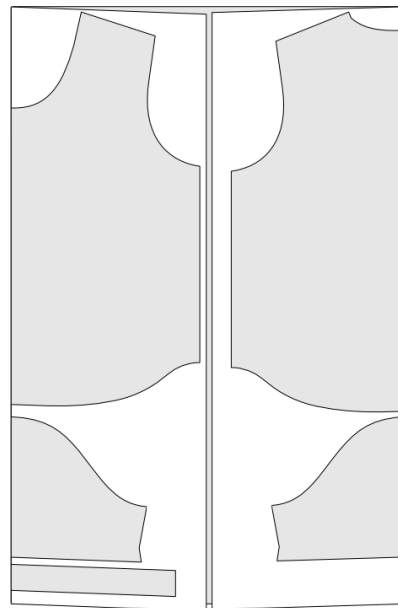

NOTIONS: Thread (Woolly Nylon is desirable for its stretch, but can get away with normal thread if you use a zig zag stitch for your seams), Ballpoint Needle, Twin Needle (Optional)

SUGGESTED FABRICS: Light or medium weight knits and jerseys

Please note: If you're using a patterned fabric with a repeat that you'd like to match, you may need more fabric than what is suggested above. Use your discretion.


Ensure your fabric is washed and pre-shrunk before cutting.

CARINE TEE INSTRUCTIONS

1


Line up the front and back pieces, right sides together. Sew along both shoulder seams and both side seams using a 1 cm seam allowance. Overlock seams. Press seams towards the back.

Please note: If you're not using a thread with stretch in it, use a zig zag stitch set to a small width to avoid popping the seams. Other option: Use a 5-thread overlocker.

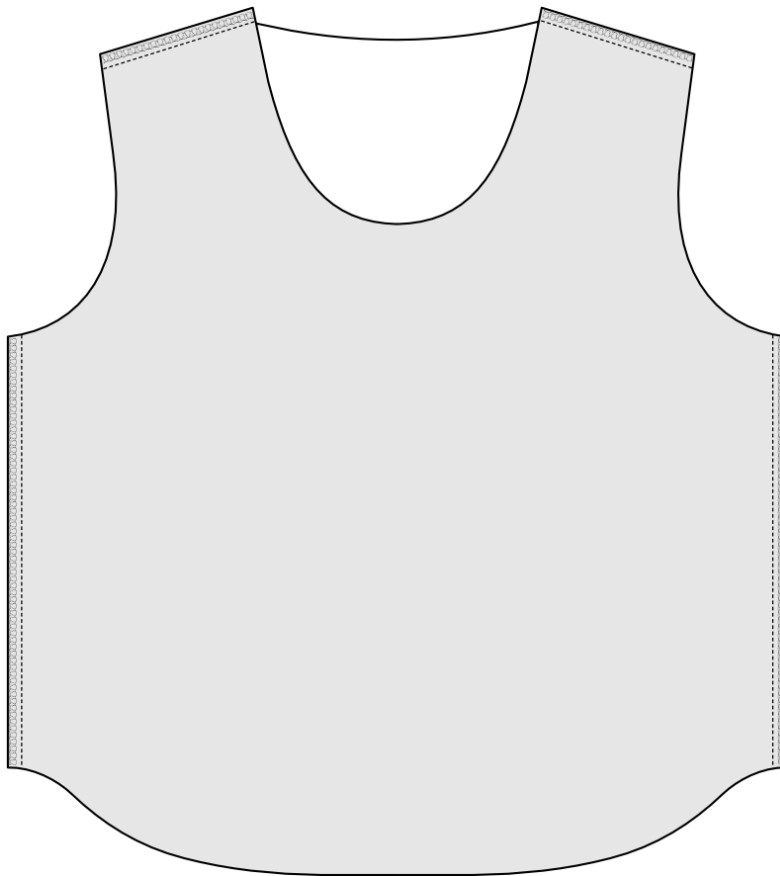


2

Fold both sleeves in half, right sides facing together. Sew along the underarm seam. Overlock. Press one sleeve seam to the left, press the other to the right.

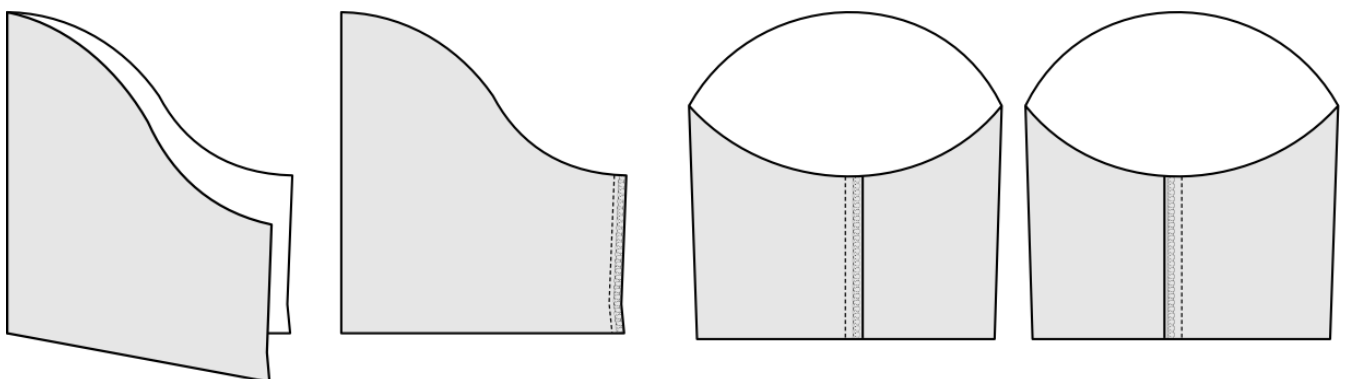


3

Take one sleeve and place it within the armhole of the tee bodice. Right sides together. Match the underarm seam of the sleeve to the underarm seam of the bodice (both seams should be pressed towards the back). Match the centre top notch of the sleeve with the shoulder seam of the bodice. Pin sleeve in place. Sew sleeve to bodice. Overlock the seam and press away from the body. Repeat on other side.

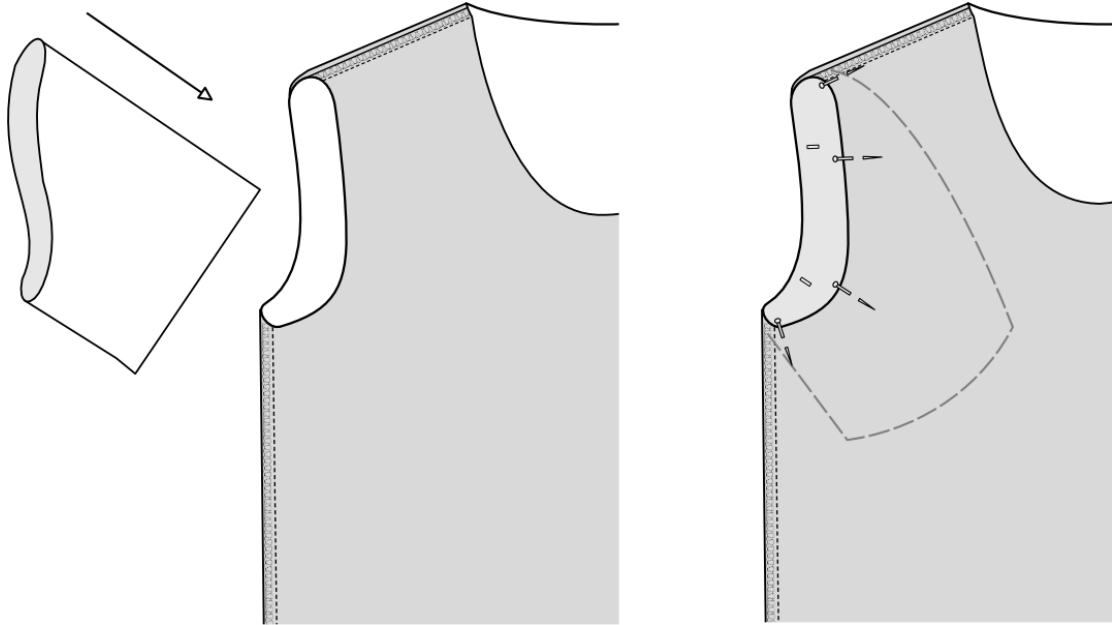


4

Fold the strip of binding in half and sew along the skinny edge, right sides together. Press seam out and fold binding in half so the wrong sides are facing together. Press. Divide the binding into quarters with pins, using the seam as your starting point.

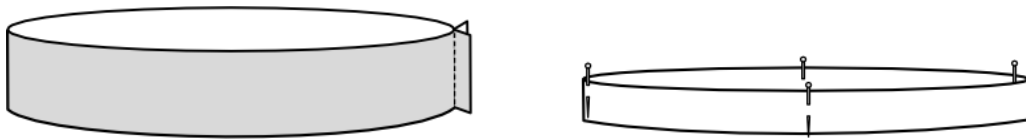


5


Using the left shoulder seam as your starting point, divide your neck hole into 4 even sections, careful not to stretch out the curves. Mark with pins, chalk or tiny snips.

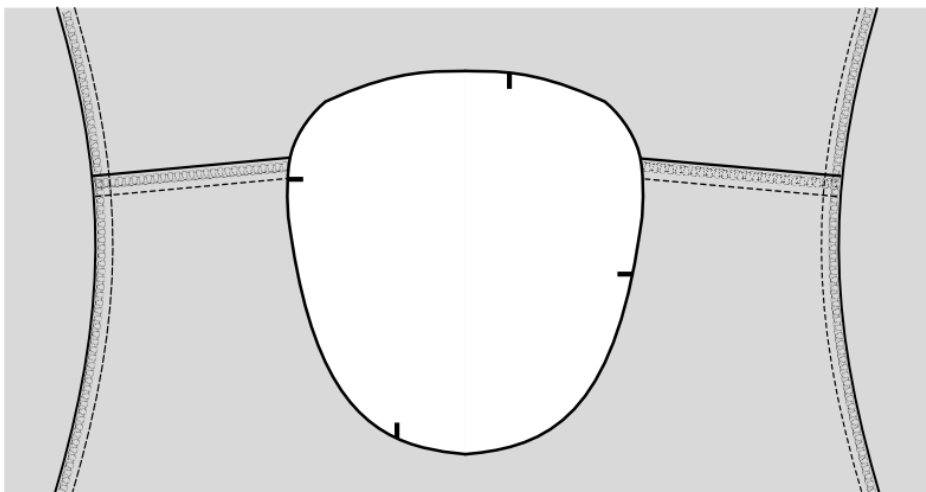

With the left shoulder seam as your starting point on the bodice, and the seam of your binding, pin the bodice and binding together at the marked quarters – right sides together. Raw edge of the binding to match up the raw edge of the neckline.


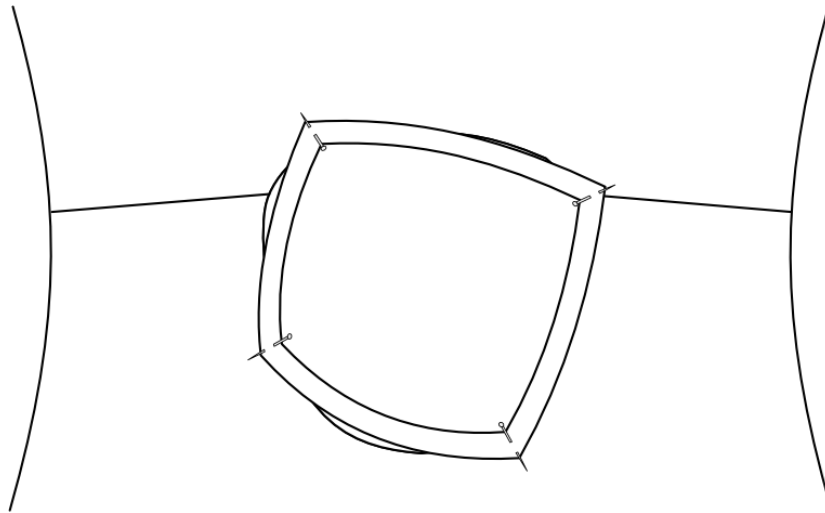


Sew binding to bodice. Overlock. Press seam inwards towards bodice.

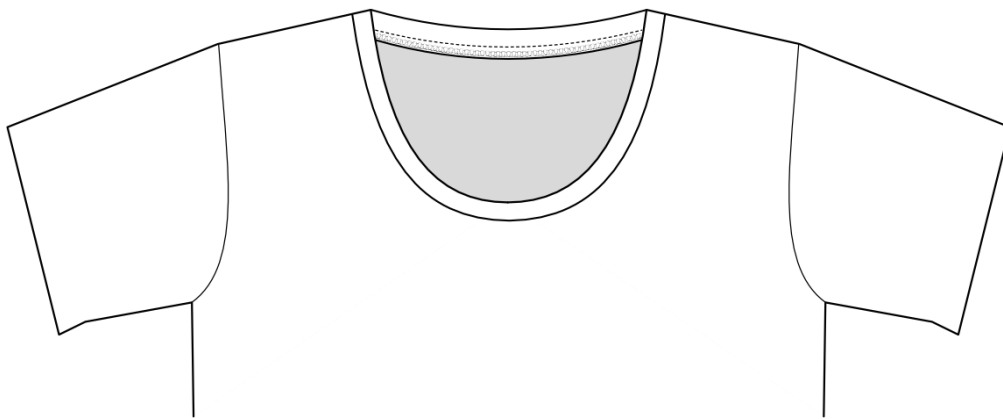

6

Fold your hem up by 2cm and pin in place. Using a twin needle (or a coverstitch machine), sew around the hem from the right side of the fabric.

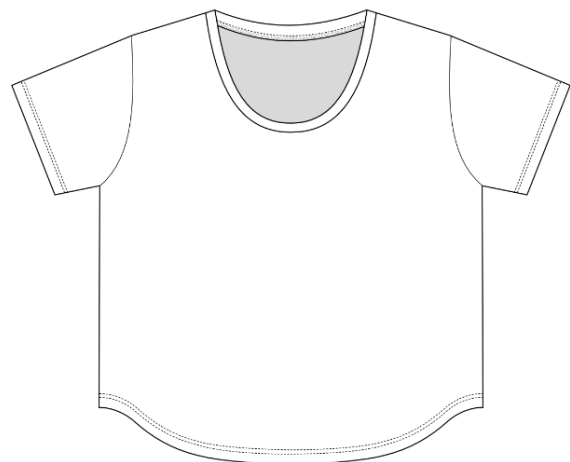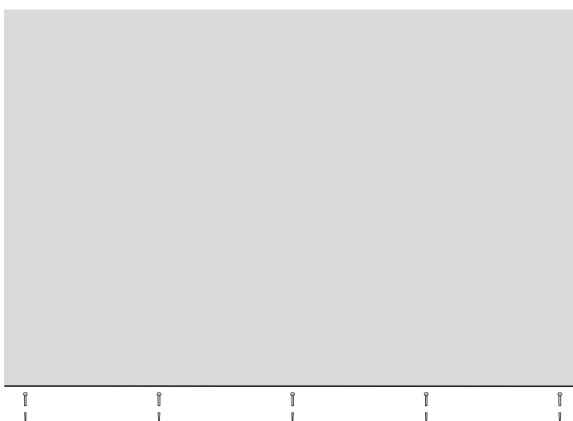

Please note: If you do not have access to a coverstitch machine or a twin needle, you can use a zig zag stitch as an alternative hem stitch. Overlock your hems first for a neater finish.

Press hems flat. And you're done!

